

MAGNUM A SERIES DIESEL SOD INSTALLER PARTS MANUAL



**MAGNUM A42D
MAGNUM A48D**

Bucyrus Equipment Co., Inc.
Box 156, 209 Main
Hillsdale, Ks 66036
1-800-330-0857
www.magnumenp.com

RE-ORDER NUMBER: 2IND-MANUAL
REVISION: 2IND-100010



A SERIES

MAGNUM A42D / A48D PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum A series sod installer. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum A series sod installer. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

© Copyright 2013 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

RE-ORDER NUMBER: 2IND-MANUAL
REVISION: 2IND-100010

TABLE OF CONTENTS

Section 1	BRAKE, WHEEL, & HUB
Section 2	DECALS
Section 3	ELECTRICAL
Section 4	ENGINE
Section 5	FRONT SPENDLE
Section 6	HYDRALICS
Section 7	HYDROSTAT ROLL LIFT CONTROL
Section 8	OPERATORS PLATFORM
Section 9	ROLL LIFT
Section 10	SHIELDS
Section 11	STEERING AXLE


**MAG A42D & A48D
DECALS**


DECALS - Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	2IND-DCL100	2WD/4WD DECAL
2	1	2IND-DCL101	INSTALLER JOY STICK (T-HANDLE OPTION ONLY)
3	1	2IND-DCL102	HORN, BRAKE, LIGHTS DECAL
4	2	2IND-DCL103 2IND-DCL103-48	A42D DECAL A48D DECAL
5	2	19426-87881	KUBOTA LABEL
6	1	19426-87903	KUBOTA LABEL
7	1	IN-DCL101	FORWARD/REVERSE - ARMS RAISE/LOWER DECAL
8	1	IN-DCL105	FLUID LEVEL DECAL
9	1	IN-DCL107	SYNTHETIC HYDRAULIC FLUID ONLY DECAL
10	1	IN-DCL109	SAFETY INSTRUCTIONS DECAL
11	2	IN-DCL110	READ OPERATORS MANUAL DECAL
12	1	IN-DCL111	WARNING PLATFORM DECAL
13	1	IN-DCL115	WHEEL LOCK DECAL
14	1	IN-DCL116	ALT / TEMP / OIL DECAL
15	1	IN-DCL117	FUEL FILTER DECAL
16	1	IN-DCL118	HYDRAULIC FILTER DECAL
17	1	IN-DCL123	KEEP GUARDS IN PLACE
18	1	IN-DCL124	AIR FILTER DECAL
19	1	IN-DCL125	FAN CUTTING FINGERS/HAND
20	1	IN-DCL126	DO NOT EXCEED MAXIMUM LOAD DECAL
21	1	IND-DCL200	ULTRA LOW SULFUR DIESEL DECAL
22	1	STKE	HYDRAULIC WARM UP DECAL
23	3	STKJ	MAGNUM LOGO, SR, SRA, INSTALLER
24	1	2IND-DCL104	CA PROP 65 DIESEL ENGINE EXPOSURE LABEL





2.2




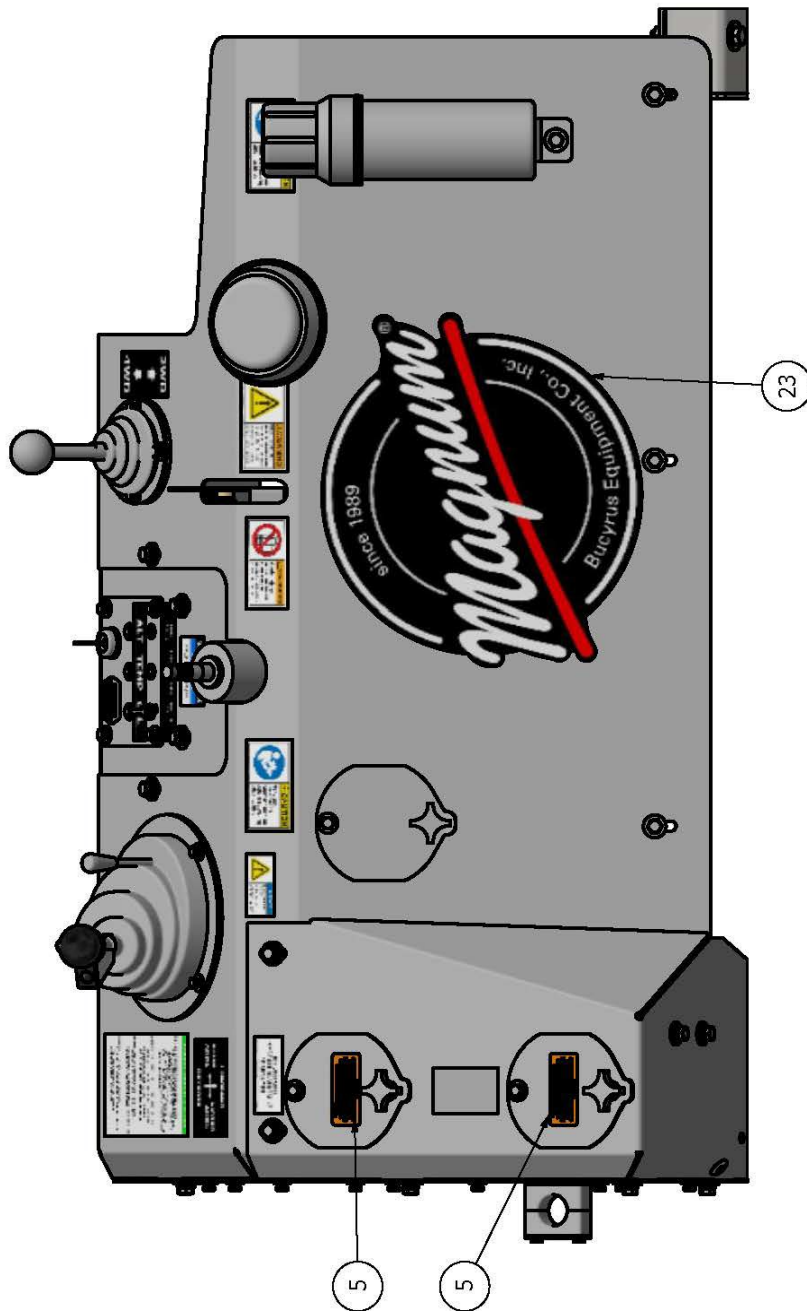


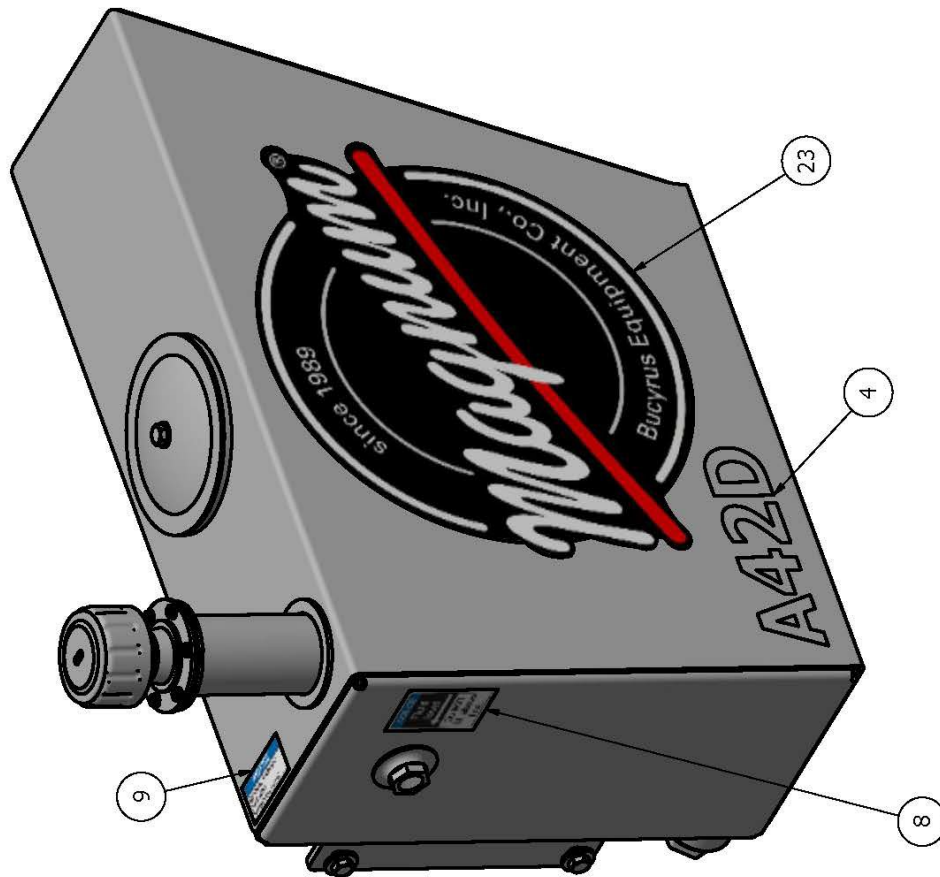

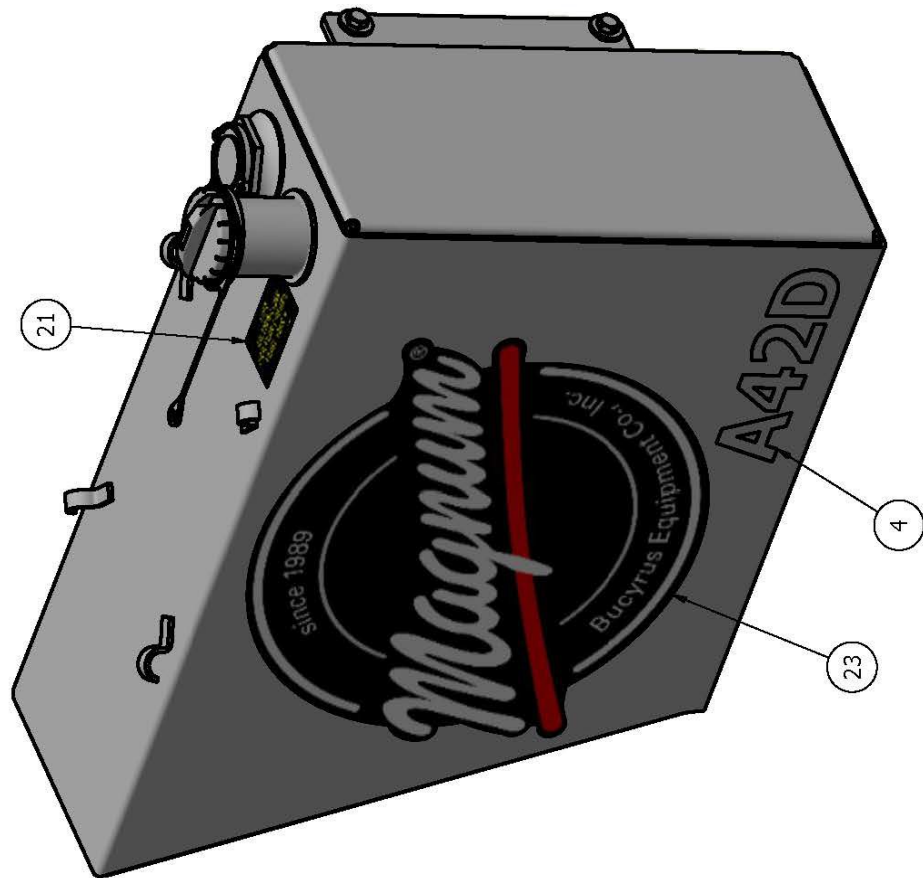


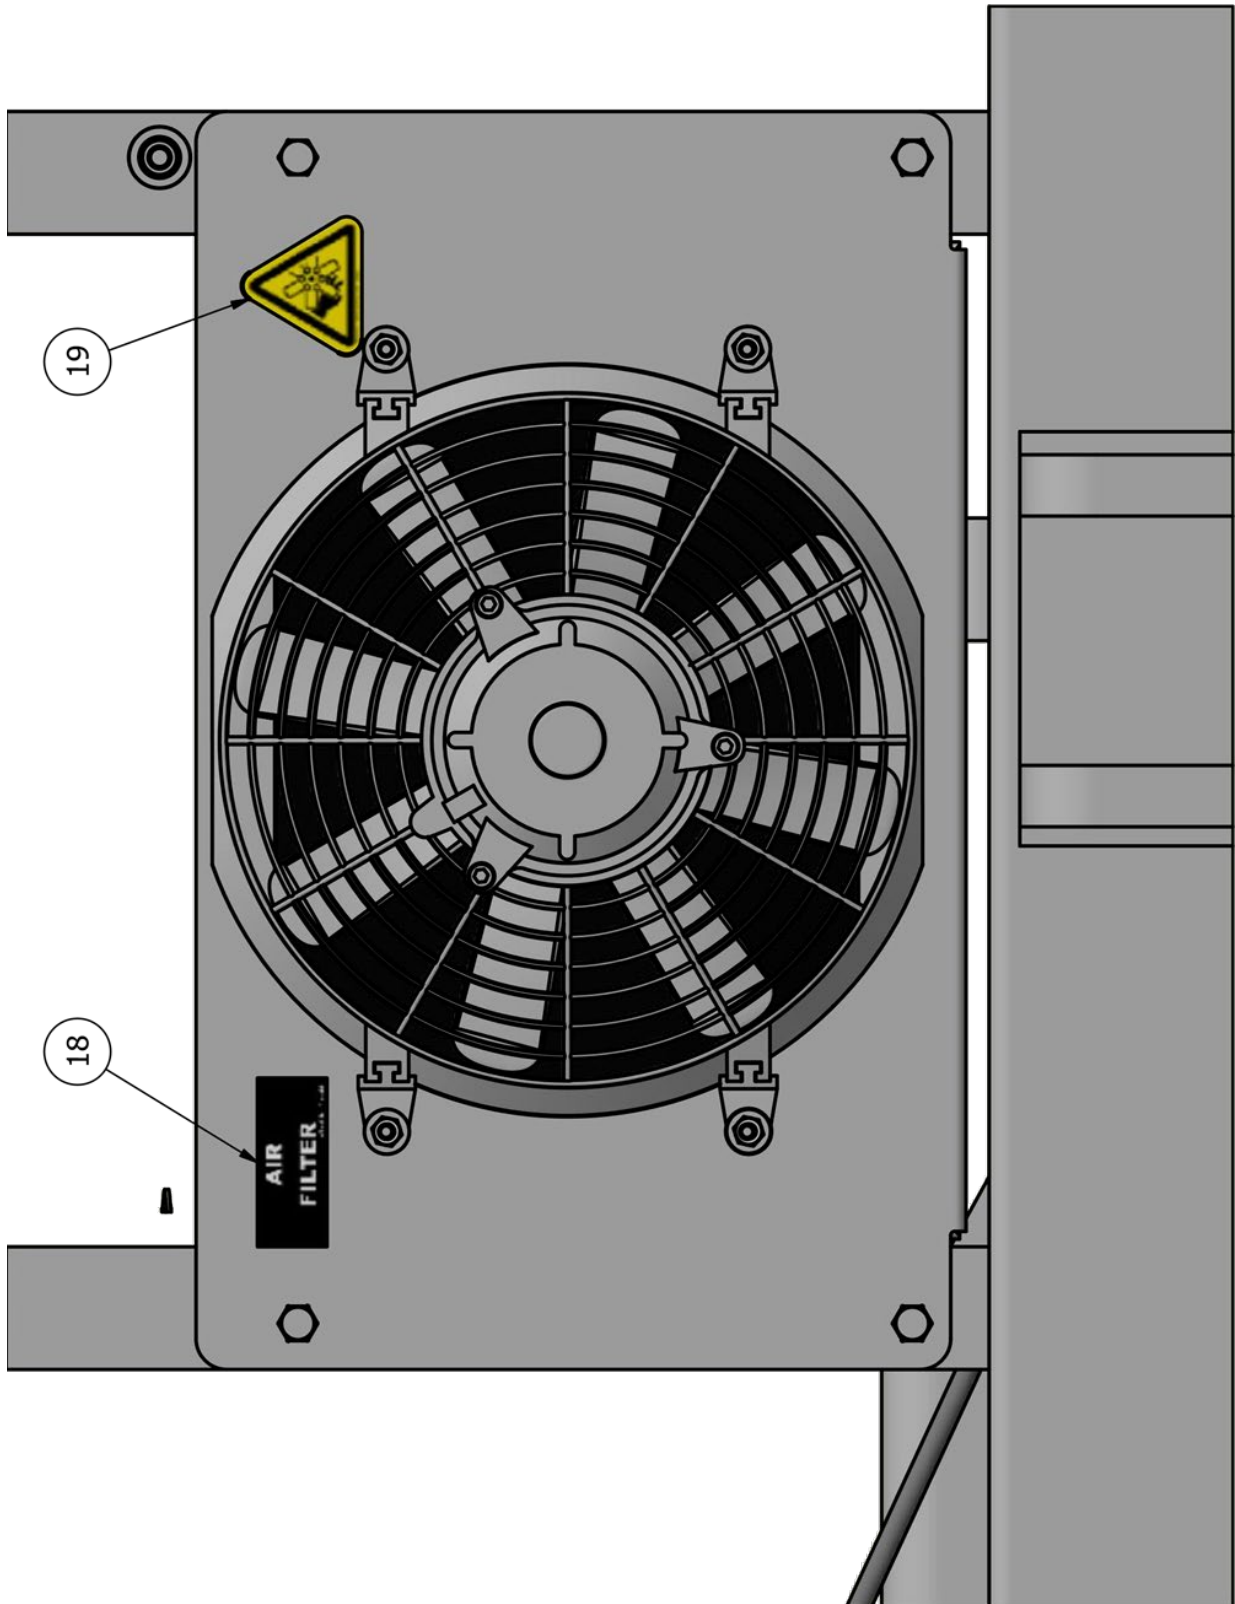

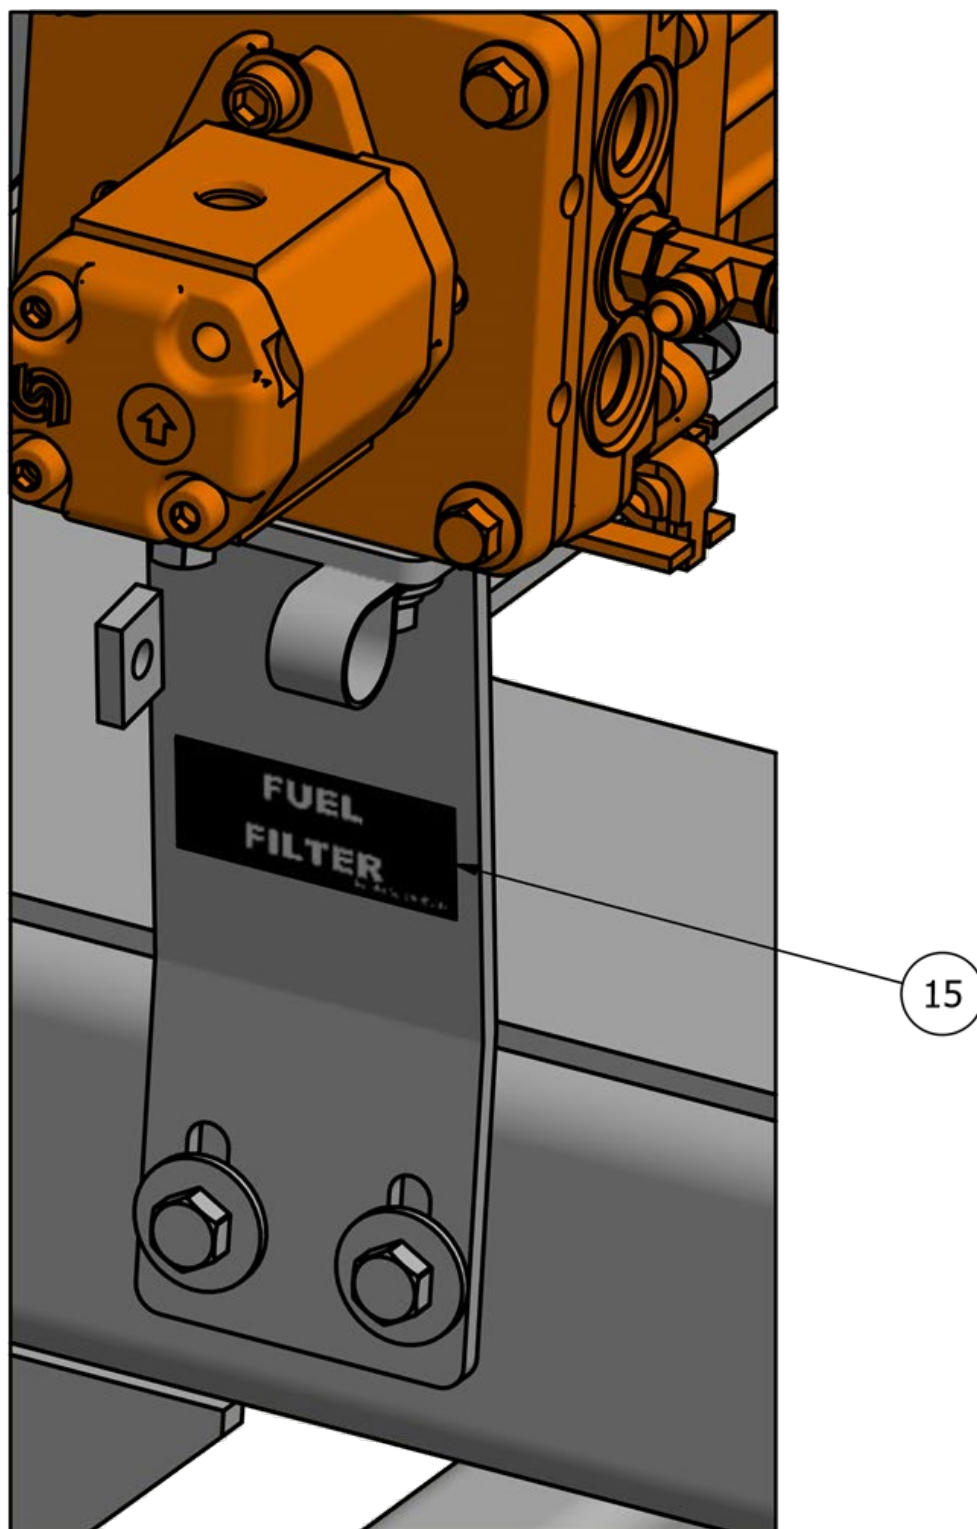

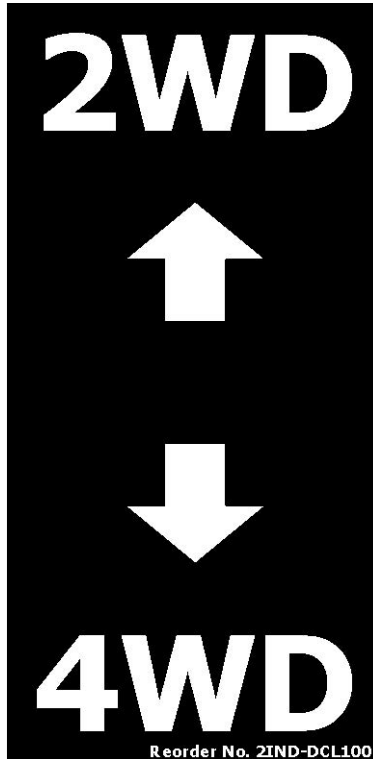

2IND-DCL100

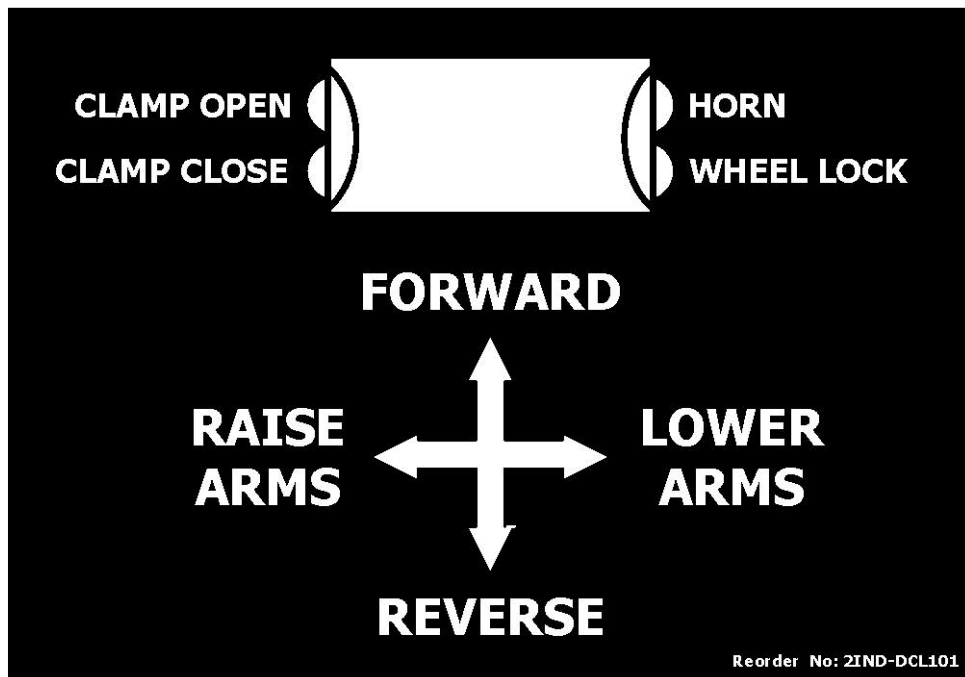

2IND-DCL101




2IND-DCL102

A42D


2IND-DCL103

A48D

2IND-DCL103-48

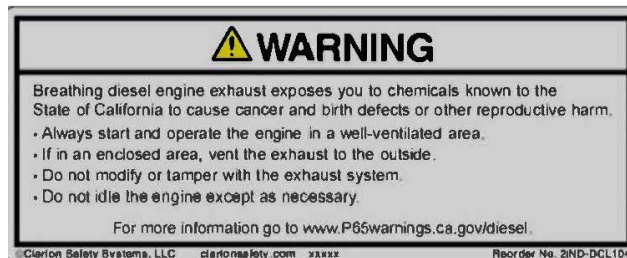


2IND-DCL104

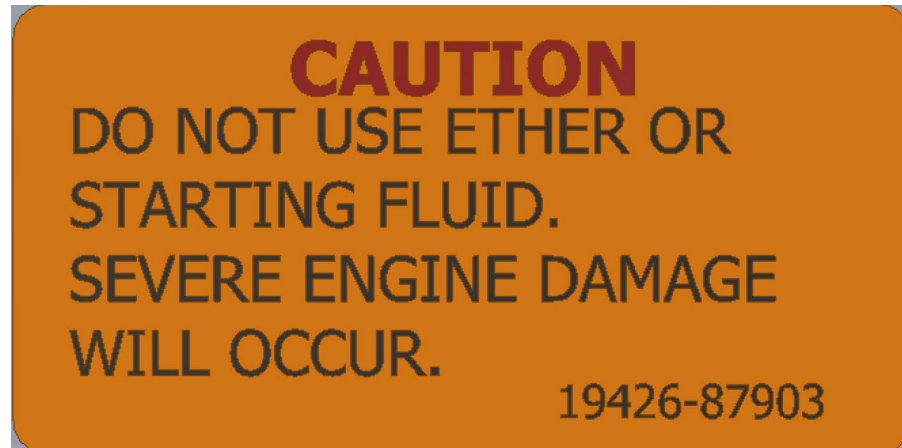

19426-87903



19426-87881

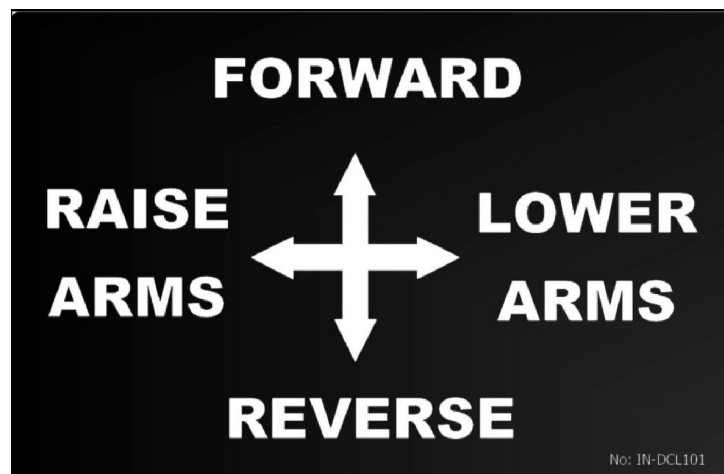

IN-DCL101



IN-DCL105



IN-DCL107

SAFETY INSTRUCTIONS

DO NOT OPERATE THIS MACHINE UNLESS:

- YOU HAVE READ AND UNDERSTAND THE SAFETY AND OPERATING INSTRUCTION CONTAINED IN THE OPERATOR'S MANUAL.
- YOU HAVE CHECKED YOUR MACHINE AND ALL FUNCTIONS ARE SAFE AND OPERATING CORRECTLY.
- YOU HAVE CHECKED THAT YOUR MACHINE RETURNS TO NEUTRAL, DOES NOT CREEP AND THE PARKING BRAKE WORKS PROPERLY.

WHEN TRAVELING WITH OR WITHOUT A SOD ROLL:

- MAKE ALL TURNING MANEUVERS SLOWLY AND CAREFULLY.
- ALWAYS BACK UP SLOWLY AND OBSERVE OBSTRUCTIONS FROM BEHIND.
- DO NOT STOP OR START TRAVEL SUDDENLY.

WHEN LIFTING AND/OR PLACING A LOAD:


- MAKE SURE YOU ARE ON A STABLE SURFACE.
- NEVER GET OFF THE MACHINE.
- MAKE SURE YOU KNOW THE WEIGHT OF YOUR LOAD AND THE MACHINE LOAD CAPACITY.

WHEN TRAVELING ON AN INCLINE:

- NEVER TRAVEL UP OR DOWN INCLINE BUT ACROSS IT.
- KEEP THE LOAD AS LOW AS POSSIBLE.
- NEVER EXCEED 20 DEG. INCLINE.

Reorder No: IN-DCL109

IN-DCL109

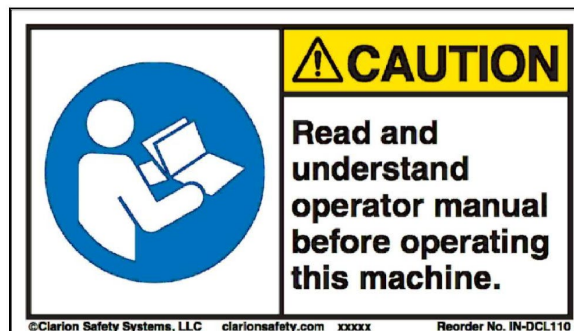

IN-DCL110



IN-DCL111



IN-DCL115



IN-DCL116



IN-DCL117



IN-DCL118



IN-DCL123



IN-DCL124




IN-DCL125

MAG A42D & A48D
DECALS



IN-DCL126

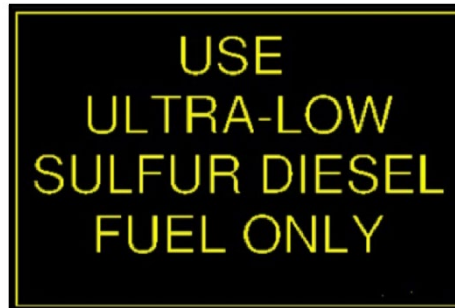

IND-DCL200



STKE



STKJ

MAG M2D 8 M8D

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for writing or drawing. There are no margins, text, or other markings on the paper.