

MAGNUM SR SERIES

PARTS MANUAL



MAGNUM 300SR
MAGNUM 420SR
MAGNUM 480SR

Bucyrus Equipment Co., Inc.
Box 156, 209 Main
Hillsdale, Ks 66036
1-800-330-0857
www.magnumharvesters.com

RE-ORDER NUMBER: SRMANUAL
REVISION: SR-100020



SR SERIES

MAGNUM 300SR/420SR/480SR PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum SR series harvester. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum SR series harvesters. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

©Copyright 2005 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

TABLE OF CONTENTS

Section 1	420/480 Floating Heads
Section 2	420/480 Solid Heads/Coulter Option
Section 3	300 Solid Heads/Coulter Option
Section 4	Depth Control
Section 5	1st Conveyor
Section 6	2nd Conveyor
Section 7	Chop Offs
Section 8	Net Dispenser
Section 9	Ramps
Section 10	Tube Racks
Section 11	Control Panel Box
Section 12	Wheel/Hub Assembly
Section 13	Hydraulic Components
Section 14	Valve Body
Section 15	Flow Control Valve

Section 16 Chop Valve

Section 17 Accumulator

Section 18 Hydraulic Tank/Increaser


Section 19 Hose/Hardline Mounts

Section 20 Electrical Components


CONTROL PANEL

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	CPB506	Cover
2	2	HC 1046ZN	Latch assembly
3	12	1136028	10-24 Zinc Plated Machine Screw Nut
4	12	1128957	10-24x1/2" Phillips Drive Pan Head Zinc Fin Machine Screw
5	1	CPB507	Hydraulic control cover
6	6	13003	1/4"-20 x 3/4" Grade 5 Zinc Finish Hex Cap Screw
7	1	CPB500	Control panel box
8	1	480TB100	Tool tray
9	6	13005	1/4"-20 x 1" Grade 5 Zinc Finish Hex Cap Screw
10	6	33858	5/16"x0.875" Thru-Hard Yel Zinc Fin USS Flat Washer
11	6	33893	3/8" Yellow Zinc Finish High Alloy Medium Split Lock Washer
12	6	36306	3/8"-16 Zinc Finish Grade 5 Finished Hex Nut
13	1	LB012	Man basket
14	1	420MB001	Angle bracket
15	2	13107	3/8"-16x1-1/4" Zinc Finish SAE J429 Gr 5 Hex Cap Screw
16	2	33858	5/16"x0.875" Thru-Hard Yel Zinc Fin USS Flat Washer
17	2	33893	3/8" Yellow Zinc Finish High Alloy Medium Split Lock Washer
18	2	36306	3/8"-16 Zinc Finish Grade 5 Finished Hex Nut
19	1	420CF100	Fan Shroud
20	1	STKP	Control Panel Decal Tipper/Conv2
21	1	STKQ	Control Panel Decal Conveyor 2/Conv1/Heads
22	2	STKR	Control Panel Decal Chop
23	1	STKS	Control Panel Decal Conveyor 1 Speed
24	1	STKT	Control Panel Decal Conveyor 2 Speed
25	1	STKU	Control Panel Decal Heads Speed
26	1	STKV	Control Panel Decal Horn
27	1	STKW	Control Panel Decal RH Depth
28	1	STKX	Control Panel Decal LH Depth

CONTROL PANEL

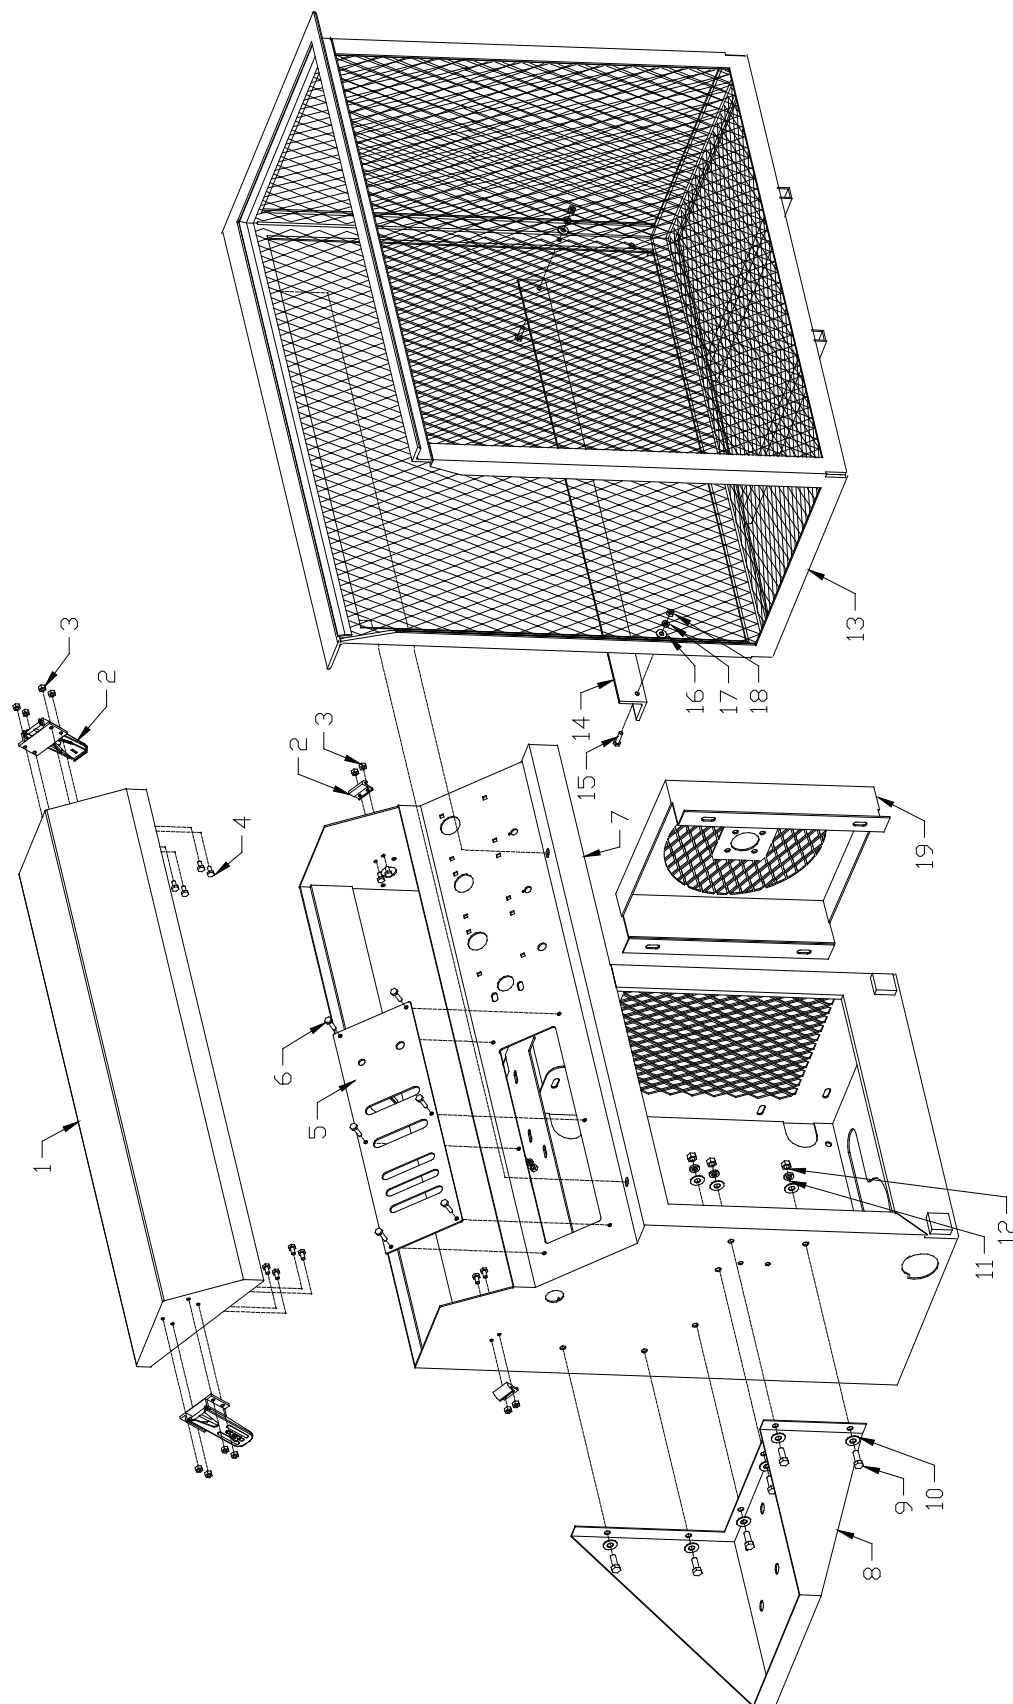

CONTROL PANEL

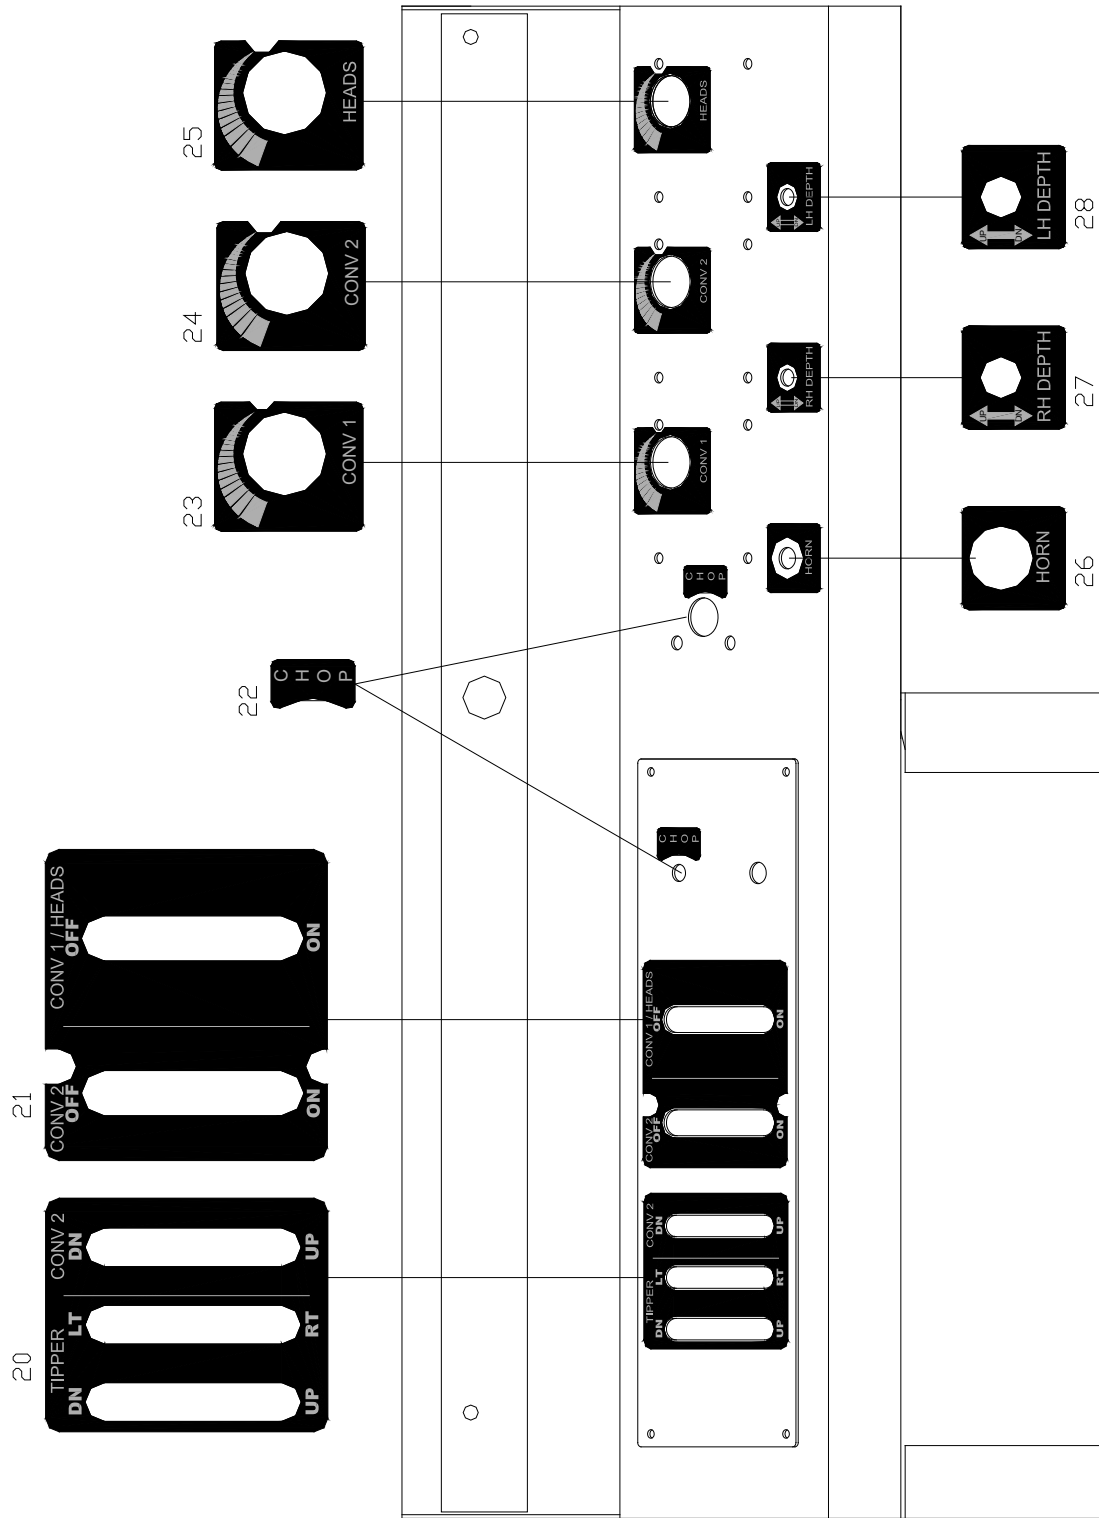

CONTROL PANEL

NOTES:

This image shows a full page of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.