MAGNUM BR SOD HARVESTER PARTS MANUAL



Bucyrus Equipment Co., Inc. Box 156, 209 Central Ave. Hillsdale, Ks 66036 1-800-330-0857 www.magnumenp.com



MAGNUM BR SOD HARVESTER PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum BR sod harvester. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum BR harvesters. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

©Copyright 2005 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for ommisions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

RE-ORDER NUMBER: BRPTSMANUAL REVISION: BRM-100017

TABLE OF CONTENTS

Section 1	. 32/42/48 Floating Heads
Section 2	. 42/48 Solid Heads / Coulter Option
Section 3	. 30 Solid Heads / Coulter Option
Section 4	. Depth Control
Section 5	. 1st & 2ND Conveyor
Section 6	. Wheel and Cooler
Section 7	. Electrical Components
Section 8	. Hydraulics
Section 9	. Increaser Pump
Section 10	Dual Kit
Section 11	Decals




WHEEL & COOLER ----

			Parts List	
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1 2 2 2	1A100A 15210 13209 33861	50 Gallon hydraulic reservoir 1/2"-13 X 1 3/4" CAPSCREW, GR 8 1/2"-13 X 1 1/2" CAPSCREW PT 1/2" FLAT WASHER	
2	1	2336A0	Shield for hydraulics	
3	1	35-M	Shield latch	
4	8 8	15210 33895	1/2"-13 X 1 3/4" CAPSCREW, GR 8 1/2" Yellow Zinc Finish High Alloy Medium Split Lock Washer	
5	2	W888	Complete hub assembly including spindle	
5A	2	W001	Dust seal	
5B	2	W002	Cone bearing	
5C	2	W003	Six hole hub	
5D	2	W004	Cone bearing	
5E	2	W005	Flat washer	
5F	2	W006	Spindle nut	
5G	2	W007	Dust cap	
5H	2	W888A	Spindle	
6	1		Mesh shield	
7	1	RW3000	Magnet Ring	
8	2	TR-WHR900	275R15 Tire and rim	
9	12	12LUG	1/2" Lug bolts	
10	7	10012	Magnet	
11	1	13609-3ASSM	Counter Ground speed switch	
12	1	42TR-MF125	Hydraulic manifold	
H	1	2404-10-12	Hydraulic fitting-3/4" pipe port	
I	1	2404-12-12	Hydraulic fitting-3/4" pipe port	
J	1	2404-10-12	Hydraulic fitting-3/4" pipe port	
K	1	2501-6-12	Hydraulic fitting-3/4" pipe port	
L	1	2404-10-12	Hydraulic fitting-3/4" pipe port	
M	1	STC-15	Hydraulic fitting-1 1/4" pipe port	
13	1	18A340	Netting cone	
14	1	1B012	Netting axle	
15	1	DS100	Dipstick	
16	1	OILCO	Hydraulic cooler unit	
16A	1	OILFRM	Hydraulic cooler frame	
16B	1	OILCLR	Hydraulic cooler	
16C	1	OILFAN	Hydraulic cooler fan	
16D	1	OILSHLD	Hydraulic cooler shield	
	NOTE: Items 17 thru 20 are the Newer Version Oil Cooler Fan Assembly			
17	1	TR-CF100	Cooling Fan Frame	



18	1	65032-2	Oil cooler
19	1	TR-CF200	Cooling Fan Shield
20	1	OILFAN	Hydraulic Cooler Fan
21	1	65125	3/16" x 1-1/2" Zinc Finish Extended Prong Cotter Pin

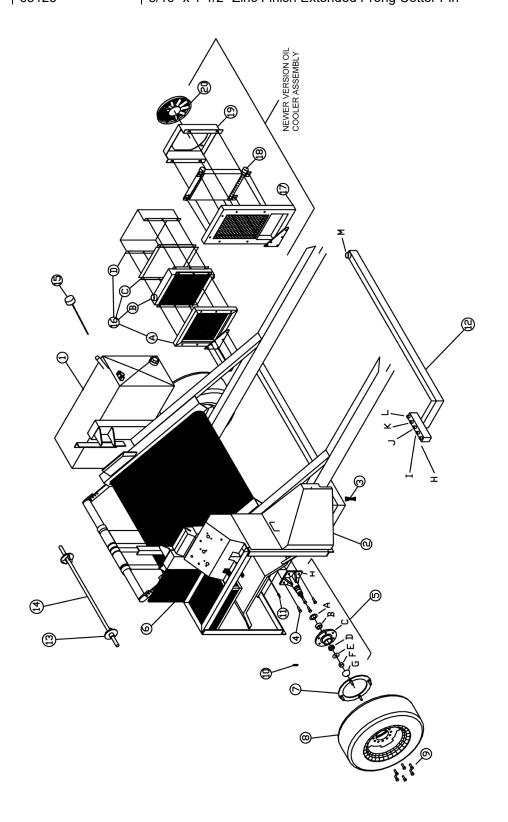



- WHEEL & COOLER -----

NOTES:	
	-

