MAGNUM M SERIES DIESEL SOD INSTALLER

PARTS MANUAL



MAGNUM M4226D MAGNUM M4826D

Bucyrus Equipment Co., Inc. Box 156, 209 Main Hillsdale, Ks 66036 1-800-330-0857 www.magnumenp.com

RE-ORDER NUMBER: IND-MANUAL REVISION: IN-100007

RE-ORDER NUMBER: IND-MANUAL REVISION: IN-100007



M SERIES

MAGNUM M4226D / M4826D PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum M series sod installer. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum M series sod installer. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

© Copyright 2013 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

RE-ORDER NUMBER: IND-MANUAL REVISION: IN-100007

DIESEL INSTALLER PARTS MANUAL -

TABLE OF CONTENTS




	ROLL LIFT - PARTS LIST				
ITEM	QTY	PART NUMBER	DESCRIPTION		
1	1	IN-RL100	ROLL LIFT, 42"		
	1	48IN-RL100	ROLL LIFT, 48" (48" MODEL ONLY)		
2	2	IN-RL110	ROLL LIFT PIVOT PIN		
3	2	IN-RL203	ROLL LIFT PIN LOCKING TAB		
4	4	016DXR024	METAL/POLYMER BEARING		
5	2	60103	1/8" NPT GREASE FITTING, 45		
6	1	IN-RL101R	CLAMP ARM, RIGHT		
7	2	IN-RL104	CLAMP STINGER		
8	2	0156788	3/4" X 2-3/4" CLEVIS PIN		
9	4	020DXR016	METAL/POLYMER BEARING		
10	2	IN-RL103	CLAMP		
11	2	IN-RL300	CLAMP CYLINDER		
12	2	60107	1/4"-28 GREASE FITTING, 90		
13	2	IN-RL102	CLAMP PIVOT PIN		
14	2	0156790	3/4" X 3-1/2" CLEVIS PIN		
15	4	33426	3/4"-10 GA SHIM		
16	1	IN-RL101L	CLAMP ARM, LEFT		
17	2	IN-RL106	CLAMP ARM BAR MOUNT		
18	1	IN-RL107	CLAMP ARM BAR, 42"		
	1	48IN-RL101	CLAMP ARM BAR, 48" (48" MODEL ONLY)		
19	2	0156783	5/8" X 3" CLEVIS PIN		
20	2	1D155	1" X 3" CLEVIS PIN		
21	2	9-7620-06	HYDAULIC CYLINDER		
22	2	60105	1/4"-28 GREASE FITTING, ST		
23	2	SC219-2	3/4" CLEVIS PIN, GREASABLE		
24	4	33820	3/4" SAE WASHER		
25	4	100075075	STEEL SPRING BUSHING		
26	2	100075100	STEEL SPRING BUSHING		
27	1	48IN-RL103L	CLAMP SPACER BLOCK MOUNT, LHS (48" MODEL ONLY)		
28	2	48IN-RL102	CLAMP SPACER BLOCK (48" MODEL ONLY)		
29	1	48IN-RL103R	CLAMP SPACER BLOCK MOUNT, RHS (48" MODEL ONLY)		
30	1	IN-RL202	SOLID ARM BAR, 42"		
	1	48IN-RL200	SOLID ARM BAR, 48" (48" MODEL ONLY)		
31	1	IN-RL109	SOLID ARM, RIGHT		
32	1	IN-RL108	SOLID ARM, LEFT		
33	4	13220	1/2"-13 X 4-1/4" CAPSCREW PT		
34	2	13217	1/2"-13 X 3-1/2" CAPSCREW PT		
35	4	110120379	1/"2-13 X 1-1/4" CAPSCREW		
36	8	33895	1/2" LOCK WASHER		




—— ROLL LIFT ———

			ROLL LIFT - PARTS LIST
ITEM	QTY	PART NUMBER	DESCRIPTION
37	12	33861	1/2" FLAT WASHER
38	2	37268	1/2"-13 LOCKNUT
39	2	110120346	3/8"-16 X 1-1/2" CAPSCREW PT
40	2	13107	3/8"-16 X 1-1/4" CAPSCREW
41	8	13105	3/8"-16 X 1" CAPSCREW
42	12	33893	3/8" LOCK WASHER
43	4	33859	3/8" FLAT WASHER
44	4	36306	3/8"-16 HEX NUT
45	4	65127	3/16" COTTER PIN
46	6	65078	1/8" COTTER PIN




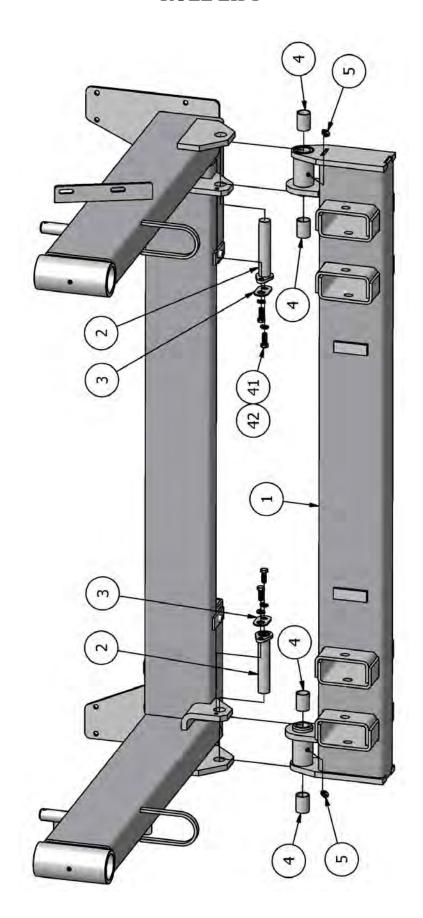




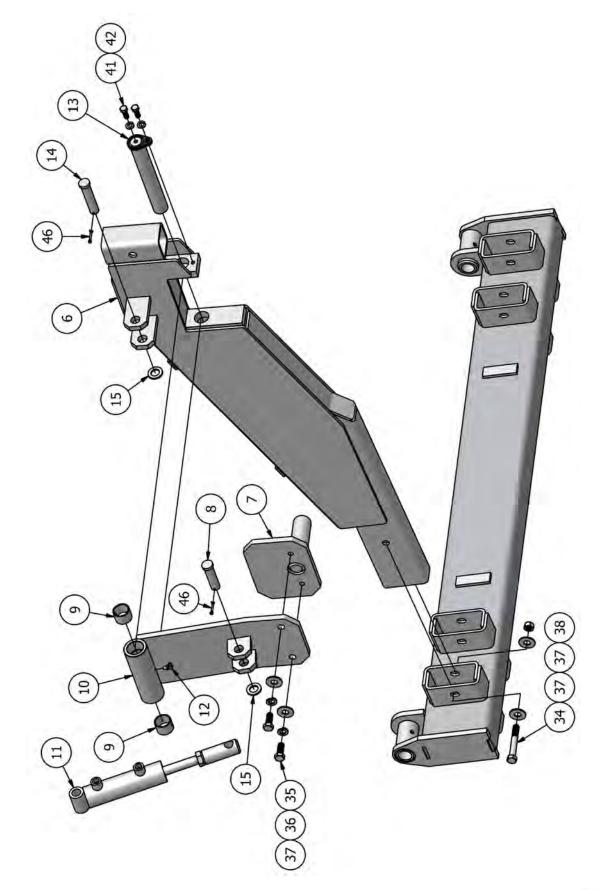




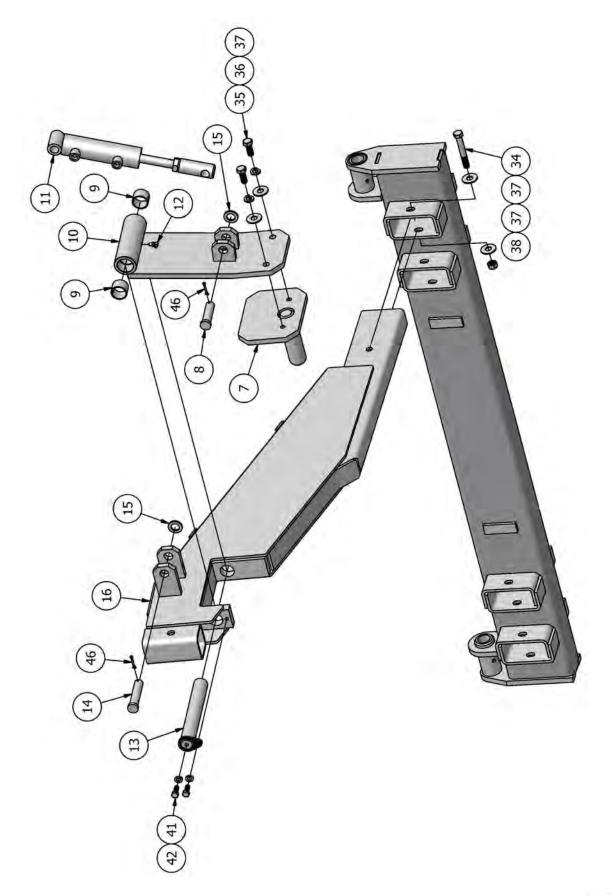




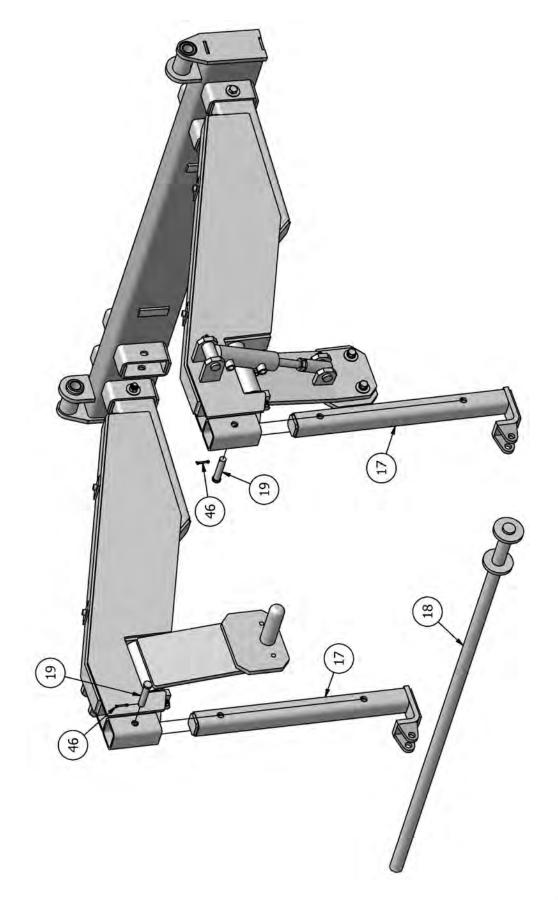




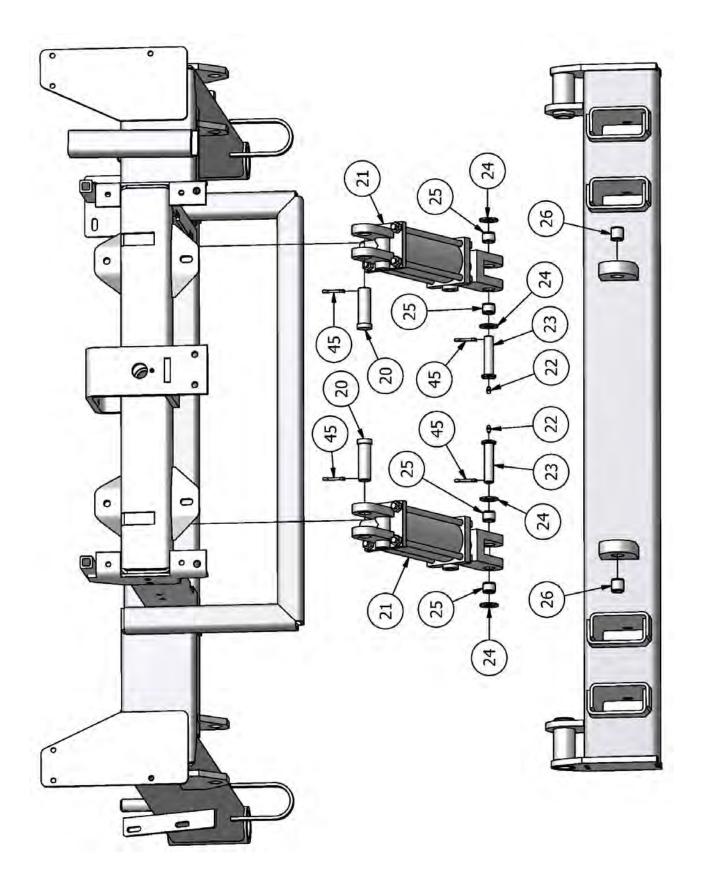



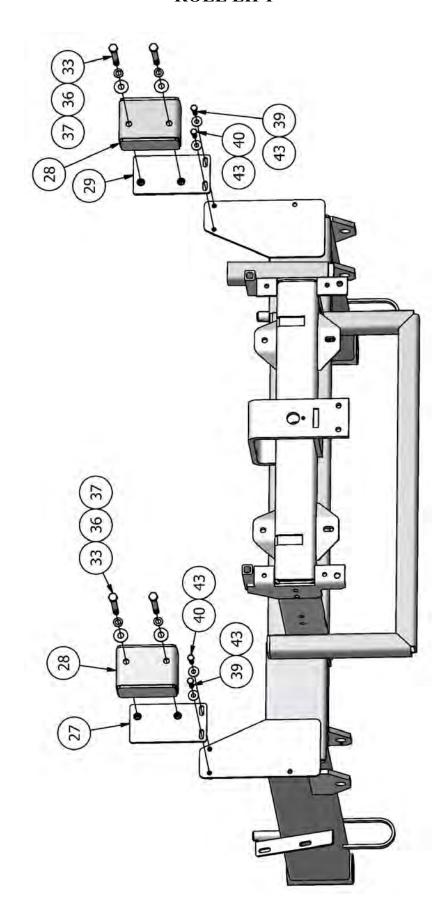



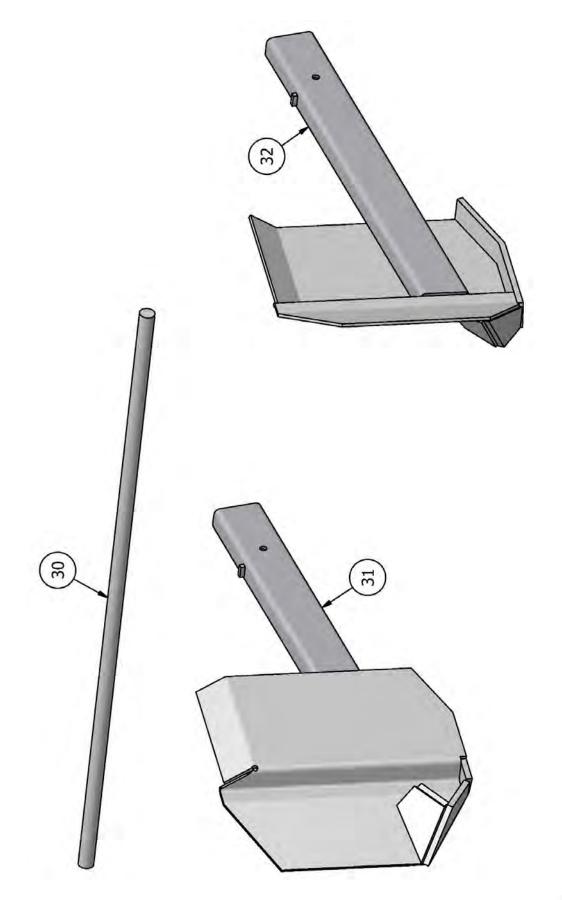



ROLL LIFT —
NOTES:
NOTES:

