

MAGNUM SR SERIES

PARTS MANUAL



MAGNUM 300SR
MAGNUM 420SR
MAGNUM 480SR

Bucyrus Equipment Co., Inc.
Box 156, 209 Main
Hillsdale, Ks 66036
1-800-330-0857
www.magnumharvesters.com

RE-ORDER NUMBER: SRMANUAL
REVISION: SR-100020



SR SERIES

MAGNUM 300SR/420SR/480SR PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum SR series harvester. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum SR series harvesters. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

©Copyright 2005 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

TABLE OF CONTENTS

Section 1	420/480 Floating Heads
Section 2	420/480 Solid Heads/Coulter Option
Section 3	300 Solid Heads/Coulter Option
Section 4	Depth Control
Section 5	1st Conveyor
Section 6	2nd Conveyor
Section 7	Chop Offs
Section 8	Net Dispenser
Section 9	Ramps
Section 10	Tube Racks
Section 11	Control Panel Box
Section 12	Wheel/Hub Assembly
Section 13	Hydraulic Components
Section 14	Valve Body
Section 15	Flow Control Valve

Section 16 Chop Valve

Section 17 Accumulator

Section 18 Hydraulic Tank/Increaser


Section 19 Hose/Hardline Mounts

Section 20 Electrical Components


TUBE RACK

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	300TR100 (300)	Front tube rack
1	1	420TR100 (420)	Front tube rack
1	1	480TR100 (480)	Front tube rack
2	1	300BR200 (300)	Rear tube rack
2	1	420BR200 (420)	Rear tube rack
2	1	480BR200 (480)	Rear tube rack
3	2	480BR201	Tube rack support
4	1	420MF245	Right side horizontal support
5	1	420MF240	Left side horizontal support
6	1	420MF230	Left side upright support
7	1	420MF235	Right side upright support
8	1	300TR125 (300)	Lower tube gate
8	1	420TR125 (420)	Lower tube gate
8	1	480TR125 (480)	Lower tube gate
9	1	300TR120 (300)	Upper tube gate
9	1	420TR120 (420)	Upper tube gate
9	1	480TR120 (480)	Upper tube gate
10	2	480TR137B	Handle
11	4	480TR140	Rack guide
12	4	480TR141	Rack guide bottom plate
13	16	36304	5/16"-18 Hex Nut
14	16	33892	5/16" Split Lock Washer
15	16	13063	5/16"-18 x 2-1/2" Hex Cap Screw
16	2	37212	3/8"-16 Reverse Lock Nut
17	2	13109	3/8"-16 x 1-1/2" Hex Cap Screw
18	5	37212	3/8"-16 Reverse Lock Nut
19	4	13105	3/8"-16x1" Hex Cap Screw
20	2	480BR223	Spring bracket
21	2	HS100	Spring
22	1	480BR219	Tube feeder
23	2	480BR225	Spring anchor
24	2	FL100	Flange bearing
25	1	480BR226	Handle
26	2	480BR224	Position stop
27	4	13159	7/16"-14 x 1-1/2" Hex Cap Screw
28	4	33894	7/16" Split Lock Washer
29	4	36308	7/16"-14 Hex Nut
30	1	480TR139	Side gate
31	1	480TR142	Side gate latch
32	1	13111	3/8"-16 x 2" Hex Cap Screw
33	2	33815	3/8" SAE Flat Washer
34	1	33816	7/16" SAE Flat Washer
35	2	37266	7/16"-14 Top Lock Nut
36	2	13162	7/16"-14 x 2 1/4" Hex Cap Screw


TUBE RACK

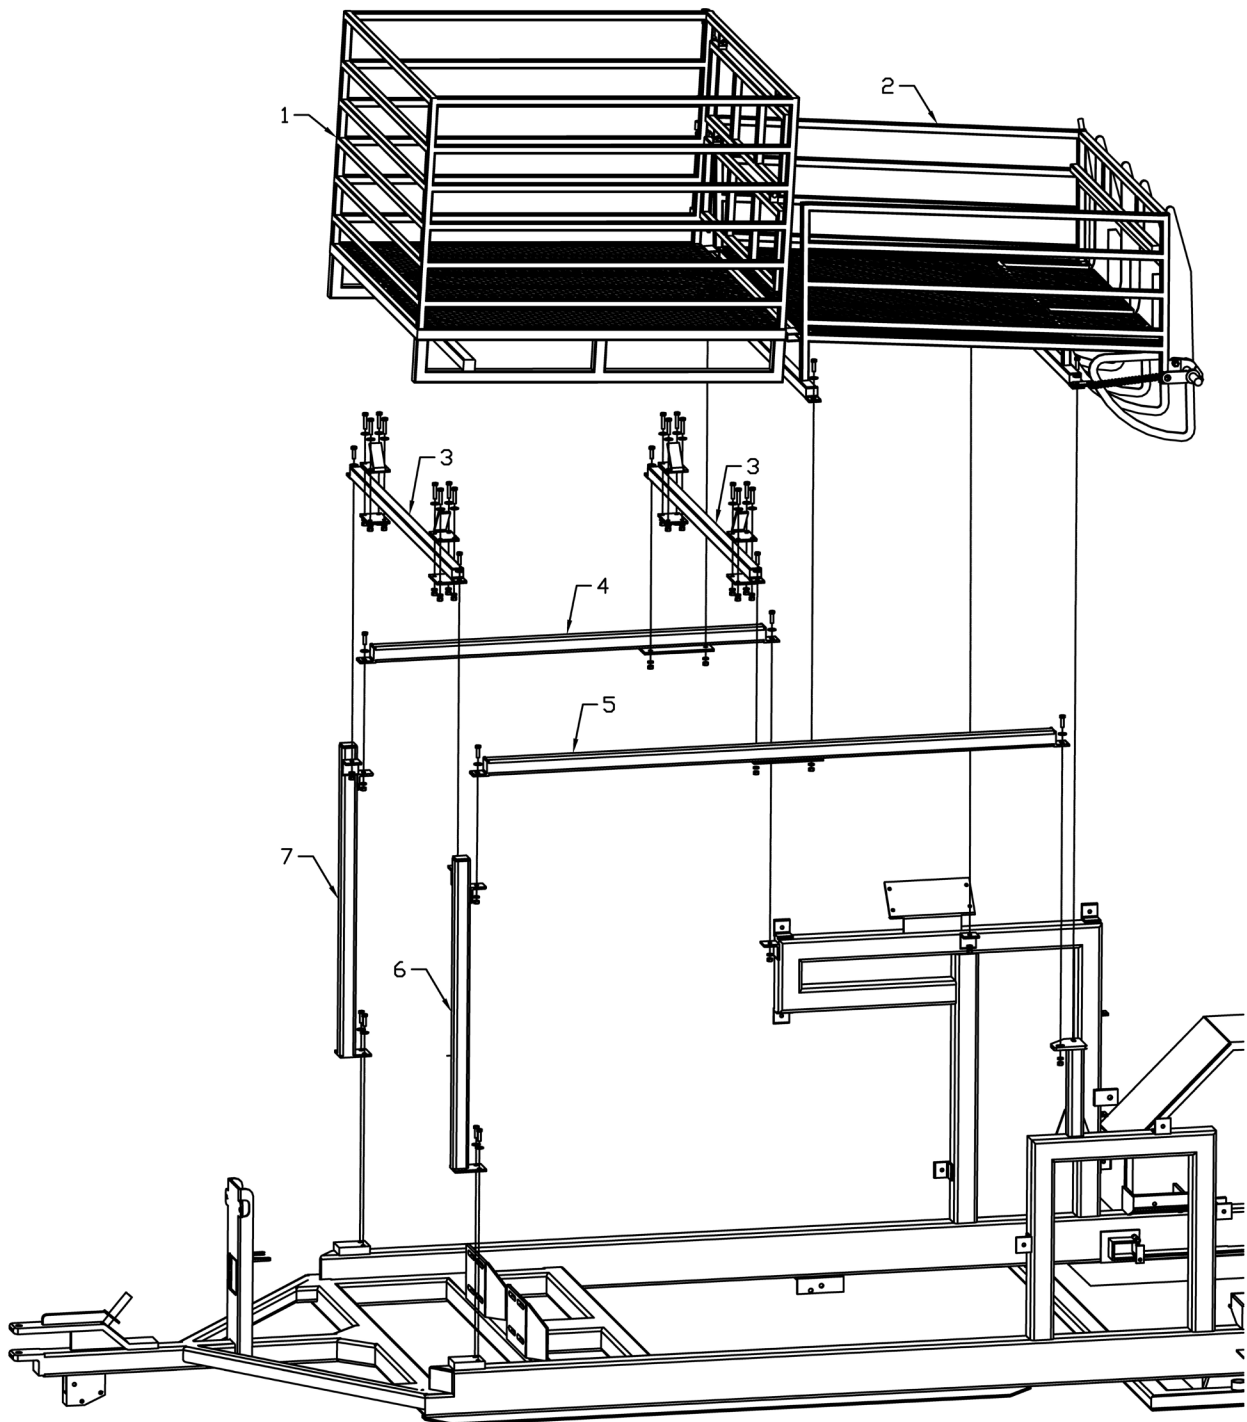

TUBE RACK

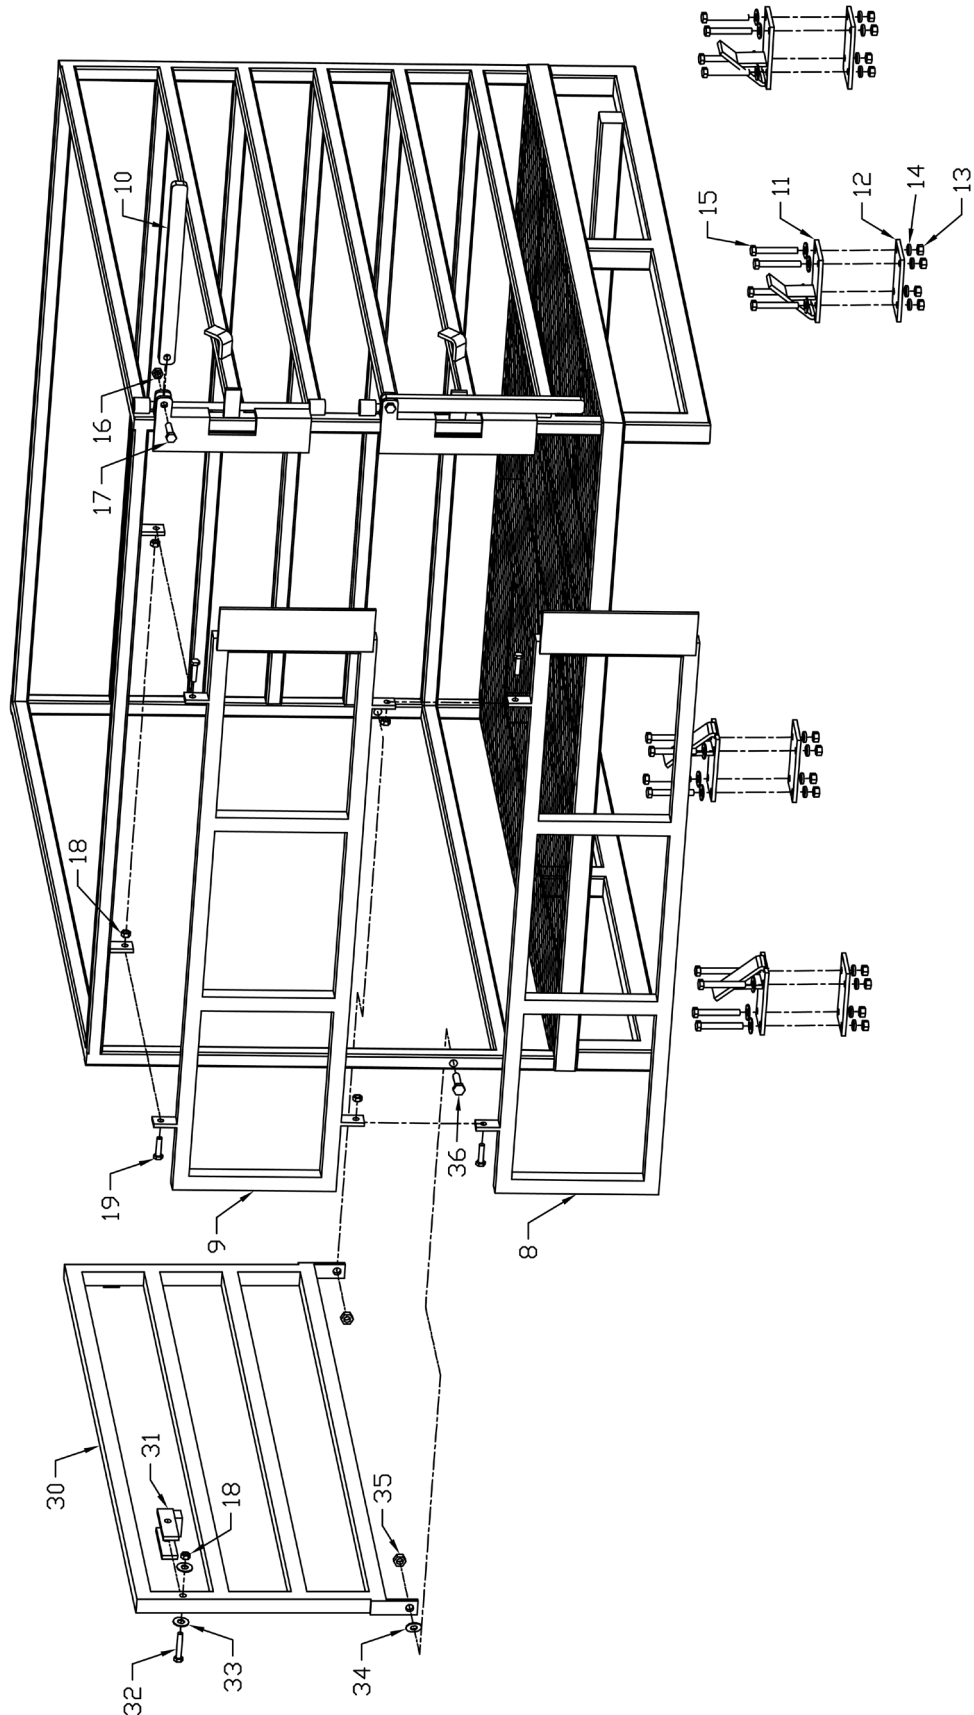

TUBE RACK

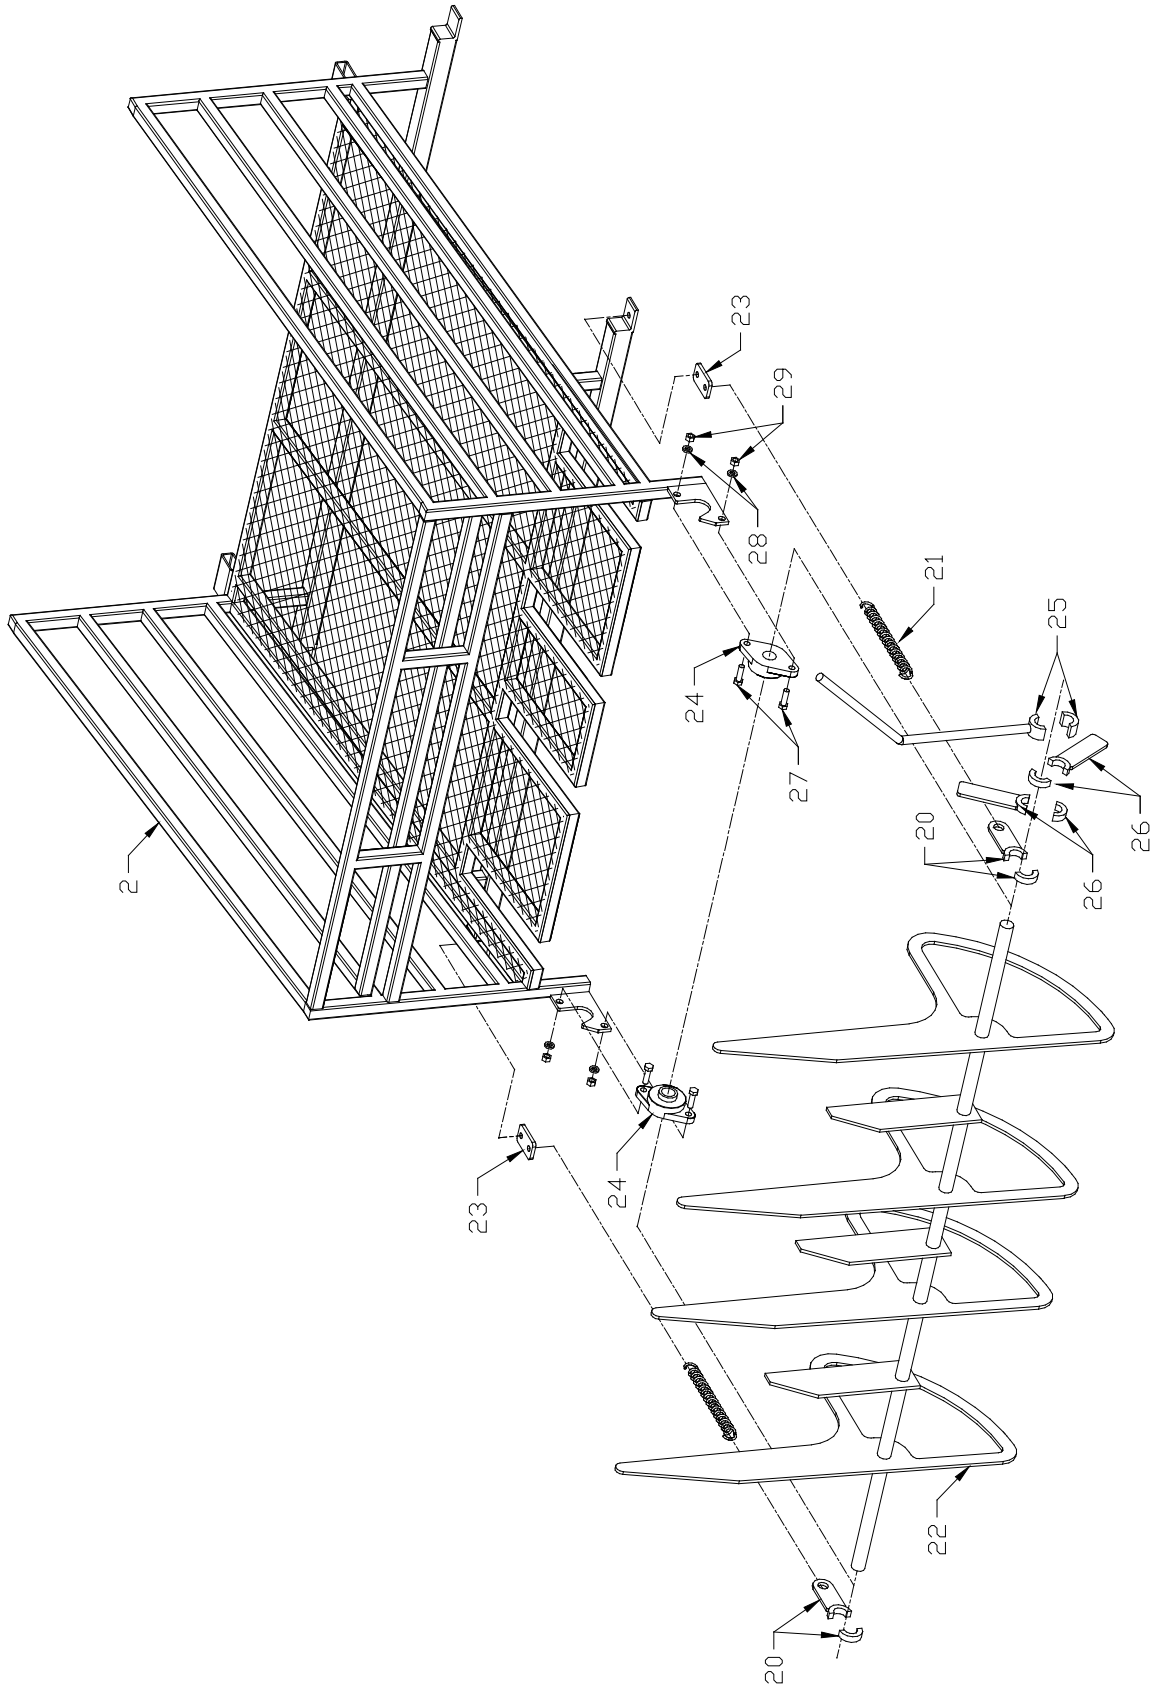

UBER RACK

[illegible]