MAGNUM SRA SERIES PARTS MANUAL



MAGNUM 300SRA MAGNUM 420SRA MAGNUM 480SRA

Bucyrus Equipment Co., Inc. PO Box 156, 209 Central Hillsdale, Ks 66036 1-800-330-0857 www.magnumenp.com



SRA SERIES

MAGNUM 300SRA/420SRA/480SRA PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum SR series harvester. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum SR series harvesters. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

©Copyright 2005 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for ommisions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

RE-ORDER NUMBER: SRAMANUAL REVISION: SRA-100025

TABLE OF CONTENTS

Section 1	. 420/480 Floating Heads
Section 2	. 420/480 Solid Heads / Coulter Option
Section 3	. 300 Solid Heads / Coulter Option
Section 4	. Depth Control
Section 5	. 1st Conveyor
Section 6	. 2 nd Conveyor
Section 7	. Chop Offs
Section 8	. Net Dispenser
Section 9	Tube Racks
Section 10	Control Panel Box
Section 11	Wheel/Hub & Pulse Pickup Assembly
Section 12	Auto Steer
Section 13	Hydraulic Components
Section 14	Flow Control Valve
Section 15	Chop Valve



– SRA PARTS MANUAL –


Section 16	on 16 Accumulator		
Section 17	Hydraulic Tank & Increaser		
Section 18	Hose/Hardline Mounts		
Section 19	Electrical Components		



—— TIPPER HYDRAULICS ————

				Parts List
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	CVA-1289 KIT	Selector valve assy	
2	1	DS200-X	Hydraulic Motor	
3	2	H0007	Hydraulic Cylinder	
4	2	6400-06-10	6MJ-10MOR str	
5	2	HSRAT-1	Hose assy	
6	2	HSRAT-2	Hose assy	
7	4	2706-LN-08-06	Fitting	
8	4	FF-38-F	Quick Coupling, Female	
9	4	FF-38-M	Quick Coupling, Male	
10	2	HSRAT-3	Hose assy	
11	2	HSRAT-4	Hose assy	
12	2	FG2703-LN-8	T Fitting	
13	2	HSRT-2	Hose Assy.	
14	2	HSRT-1	Hose Assy.	
15	4	FG2404-08-06	Fitting	
16	2	6400-10-10	10MJ-10MOR ST	



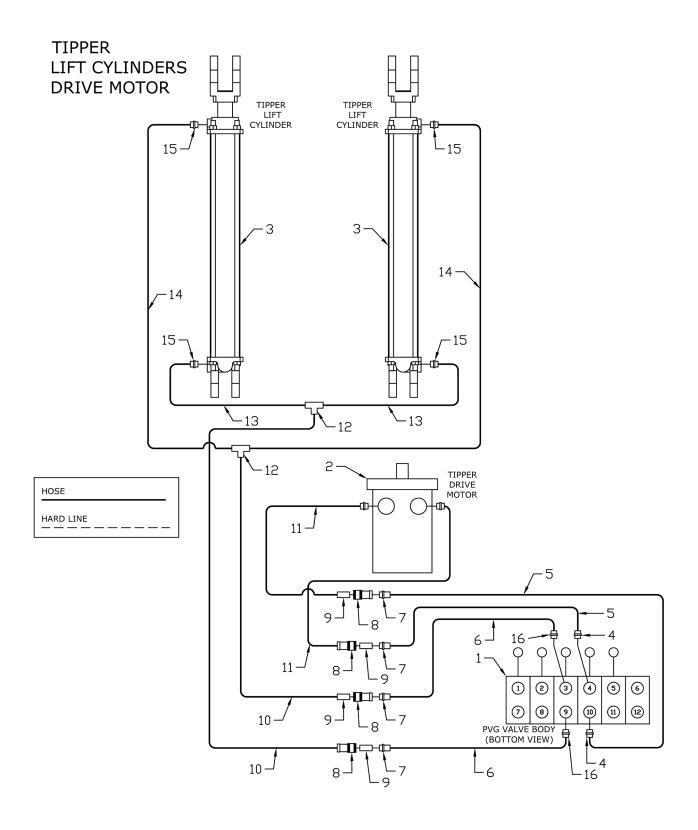



—— TIPPER HYDRAULICS ——— NOTES:

