MAGNUM A SERIES DIESEL SOD INSTALLER

PARTS MANUAL



MAGNUM A42D MAGNUM A48D

Bucyrus Equipment Co., Inc. Box 156, 209 Main Hillsdale, Ks 66036 1-800-330-0857 www.magnumenp.com

RE-ORDER NUMBER: 2IND-MANUAL REVISION: 2IND-100010

RE-ORDER NUMBER: 2IND-MANUAL REVISION: 2IND-100010



A SERIES

MAGNUM A42D / A48D PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum A series sod installer. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum A series sod installer. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

© Copyright 2013 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

RE-ORDER NUMBER: 2IND-MANUAL REVISION: 2IND-100010


TABLE OF CONTENTS

Section 1	BRAKE, WHEEL, & HUB
Section 2	DECALS
Section 3	ELECTRICAL
Section 4	ENGINE
Section 5	FRONT SPENDLE
Section 6	HYDRALICS
Section 7	HYDROSTAT ROLL LIFT CONTROL
Section 8	OPERATORS PLATFORM
Section 9	ROLL LIFT
Section 10	SHIELDS
Section 11	STEERING AXLE




	OPERATORS PLATFORM - Parts List				
ITEM	QTY	PART NUMBER	DESCRIPTION		
1	1	2IND-OP100	REAR AXLE SHIELD		
2	1	2IND-OP101	REAR AXLE SHIELD BRACE		
3	1	174036	INSTALLER REST		
4	1	2IND-OP102	OPERATOR REST BAR		
5	2	P7950	1/4" SNAP PIN		
6	1	IND-OP200	OPERATOR'S PLATFORM PLATE		
7	6	P1135	ISOLATOR		
8	1	IN-OP100	OPERATOR'S PLATFORM		
9	40	13003	1/4"-20 X 3/4" CAPSCREW		
10	64	33857	1/4" FLAT WASHER		
11	58	33891	1/4" LOCK WASHER		
12	29	13107	3/8"-16 X 1 1/4" CAPSCREW		
13	6	13113	3/8"-16 X 2 1/2" CAPSCREW PT		
14	85	33007	3/8 FLAT WAHSER		
15	103	33893	3/8" LOCK WASHER		
16	60	36306	3/8"-16 HEX NUT		
17	6	37264	3/8"-16 LOCKNUT		
18	2	95111	3/8 BOLT		
19	4	11103742	3/8" FENDER WASHER, 2" OD		
20	2	13119	3/8"-16 X 4" CAPSCREW PT		
21	17	0115109	3/8"-16 X 1 1/2" CAPSCREW		
22	12	33860	7/16" FLAT WASHER		
23	2	13211	1/2"-13 X 2" CAPSCREW		
24	2	37268	1/2"-13 LOCKNUT		
25	1	IN-OP400	OPERATOR'S PLATFORM LIFT CHAIN		
26	1	2IND-RA202	REAR AXLE PIN NUT LOCKING TAB		
27	2	33858	5/16" FLAT WASHER		




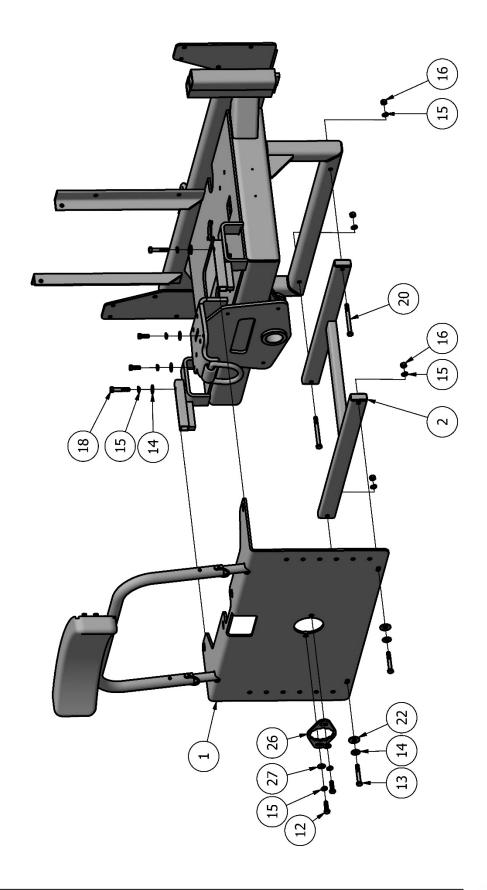



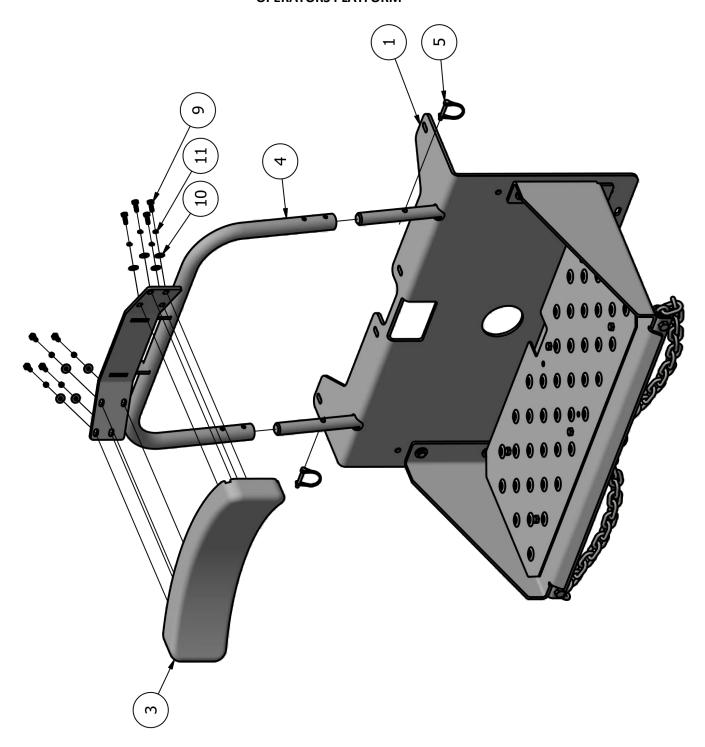



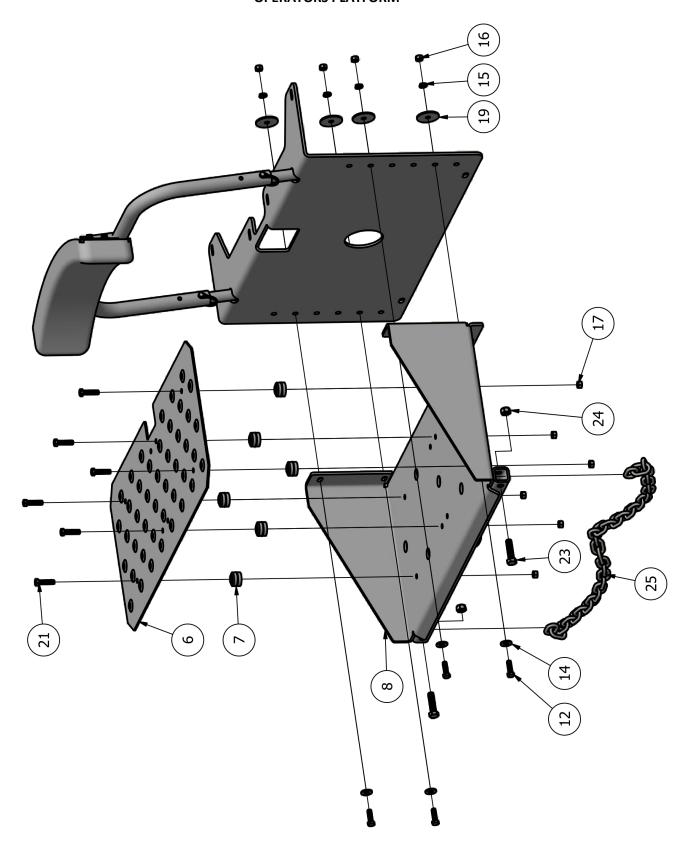



NOTES:

-		

