

MAGNUM SRA SERIES

PARTS MANUAL



MAGNUM 300SRA
MAGNUM 420SRA
MAGNUM 480SRA

Bucyrus Equipment Co., Inc.
PO Box 156, 209 Central
Hillsdale, Ks 66036
1-800-330-0857
www.magnumenp.com

RE-ORDER NUMBER: SRAMANUAL
REVISION: SRA-100025



SRA SERIES

MAGNUM 300SRA/420SRA/480SRA PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum SR series harvester. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum SR series harvesters. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

©Copyright 2005 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

TABLE OF CONTENTS

Section 1	420/480 Floating Heads
Section 2	420/480 Solid Heads / Coulter Option
Section 3	300 Solid Heads / Coulter Option
Section 4	Depth Control
Section 5	1 st Conveyor
Section 6	2 nd Conveyor
Section 7	Chop Offs
Section 8	Net Dispenser
Section 9	Tube Racks
Section 10	Control Panel Box
Section 11	Wheel/Hub & Pulse Pickup Assembly
Section 12	Auto Steer
Section 13	Hydraulic Components
Section 14	Flow Control Valve
Section 15	Chop Valve

Section 16 Accumulator

Section 17 Hydraulic Tank & Increaser


Section 18 Hose/Hardline Mounts

Section 19 Electrical Components


CONTROL PANEL

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	CPB506	Cover
2	2	HC 1046 ZN	Latch assembly
3	12	37207	#10-24 Grade A Zinc Finish Steel Reverse Lock Nut
4	12	1128957	#10-24x1/2" Phillips Pan Head Zinc Steel Machine Screw
5	1	CPB508	Hydraulic control cover
6	6	13003	1/4"-20 x 3/4" Grade 5 Zinc Finish Hex Cap Screw
7	1	SRA-CPB500	Control panel box
8	1	480TB100	Tool tray
9	6	13105	3/8"-16 x 1" Zinc Finish SAE J429 Grade 5 Hex Cap Screw
10	6	33858	5/16" Thru-Hard Yellow Zinc Steel USS Flat Washer
11	6	33893	3/8" Yellow Zinc Finish High Alloy Medium Split Lock Washer
12	6	36306	3/8"-16 Zinc Finish Grade 5 Finished Hex Nut
13	1	420CF100	Fan Shroud
14	1	SRA-CPB200	Operators Stand
15	1	SRA-CPB201R	Operators Stand Mount, Right
16	1	SRA-CPB201L	Operators Stand Mount, Left
17	2	13309	5/8"-11x1-1/2" Grade 5 Zinc Finish Hex Cap Screw
18	2	37272	5/8"-11 Grade C Zinc Finish Steel Top Lock Nut
19	4	13209	1/2"-13x1-1/2" Zinc SAE J429 Grade 5 Hex Cap Screw
20	4	33817	1/2" Thru-Hard Yellow Zinc Finish Steel SAE Flat Washer
21	4	33895	1/2" Yellow Zinc Finish High Alloy Med Split Lock Washer
22	4	1136410	1/2"-13 Yellow Zinc Finish Grade 8 Finished Hex Nut
23	1	STKY	Control Panel Decal Tipper/Conv2
24	1	STKQ	Control Panel Decal Conv 2/Conv1/Heads
25	2	STKR	Control Panel Decal Chop
26	1	STKS	Control Panel Decal Conv 1 Speed
27	1	STKT	Control Panel Decal Conv 2 Speed
28	1	STKU	Control Panel Decal Heads Speed
29	1	STKV	Control Panel Decal Horn
30	1	STKW	Control Panel Decal RH Depth
31	1	STKX	Control Panel Decal LH Depth

CONTROL PANEL

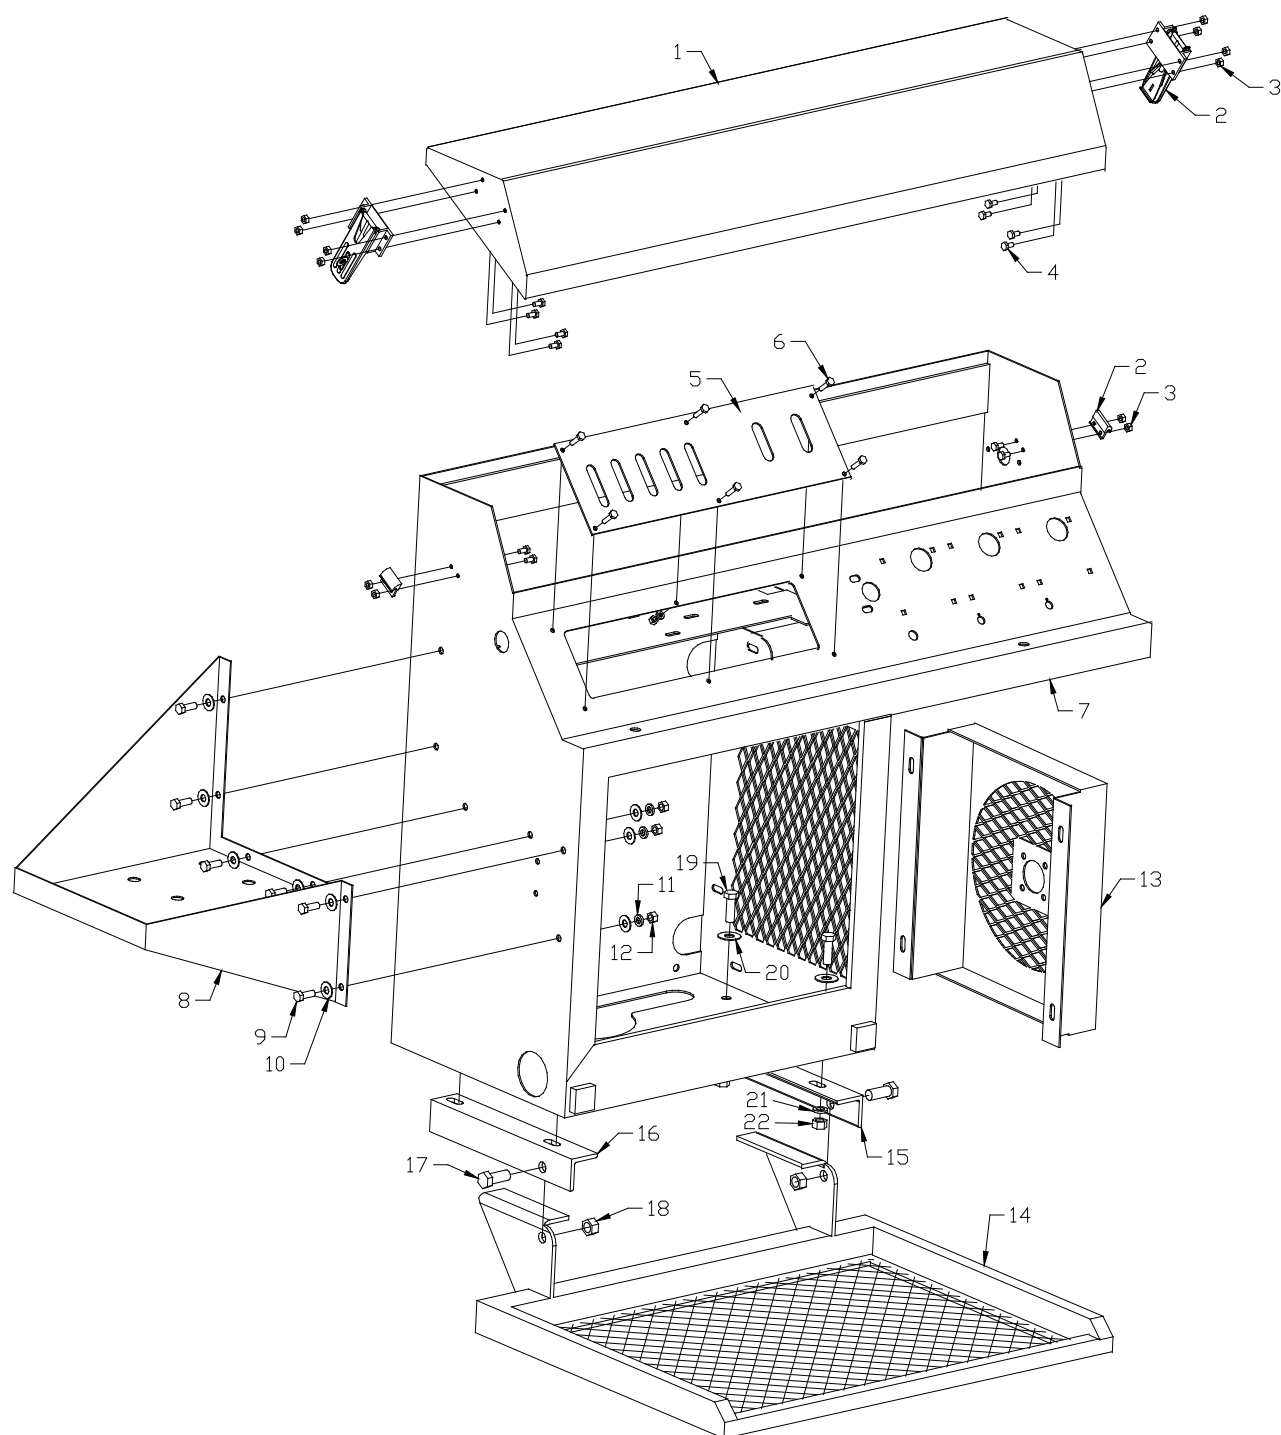

CONTROL PANEL

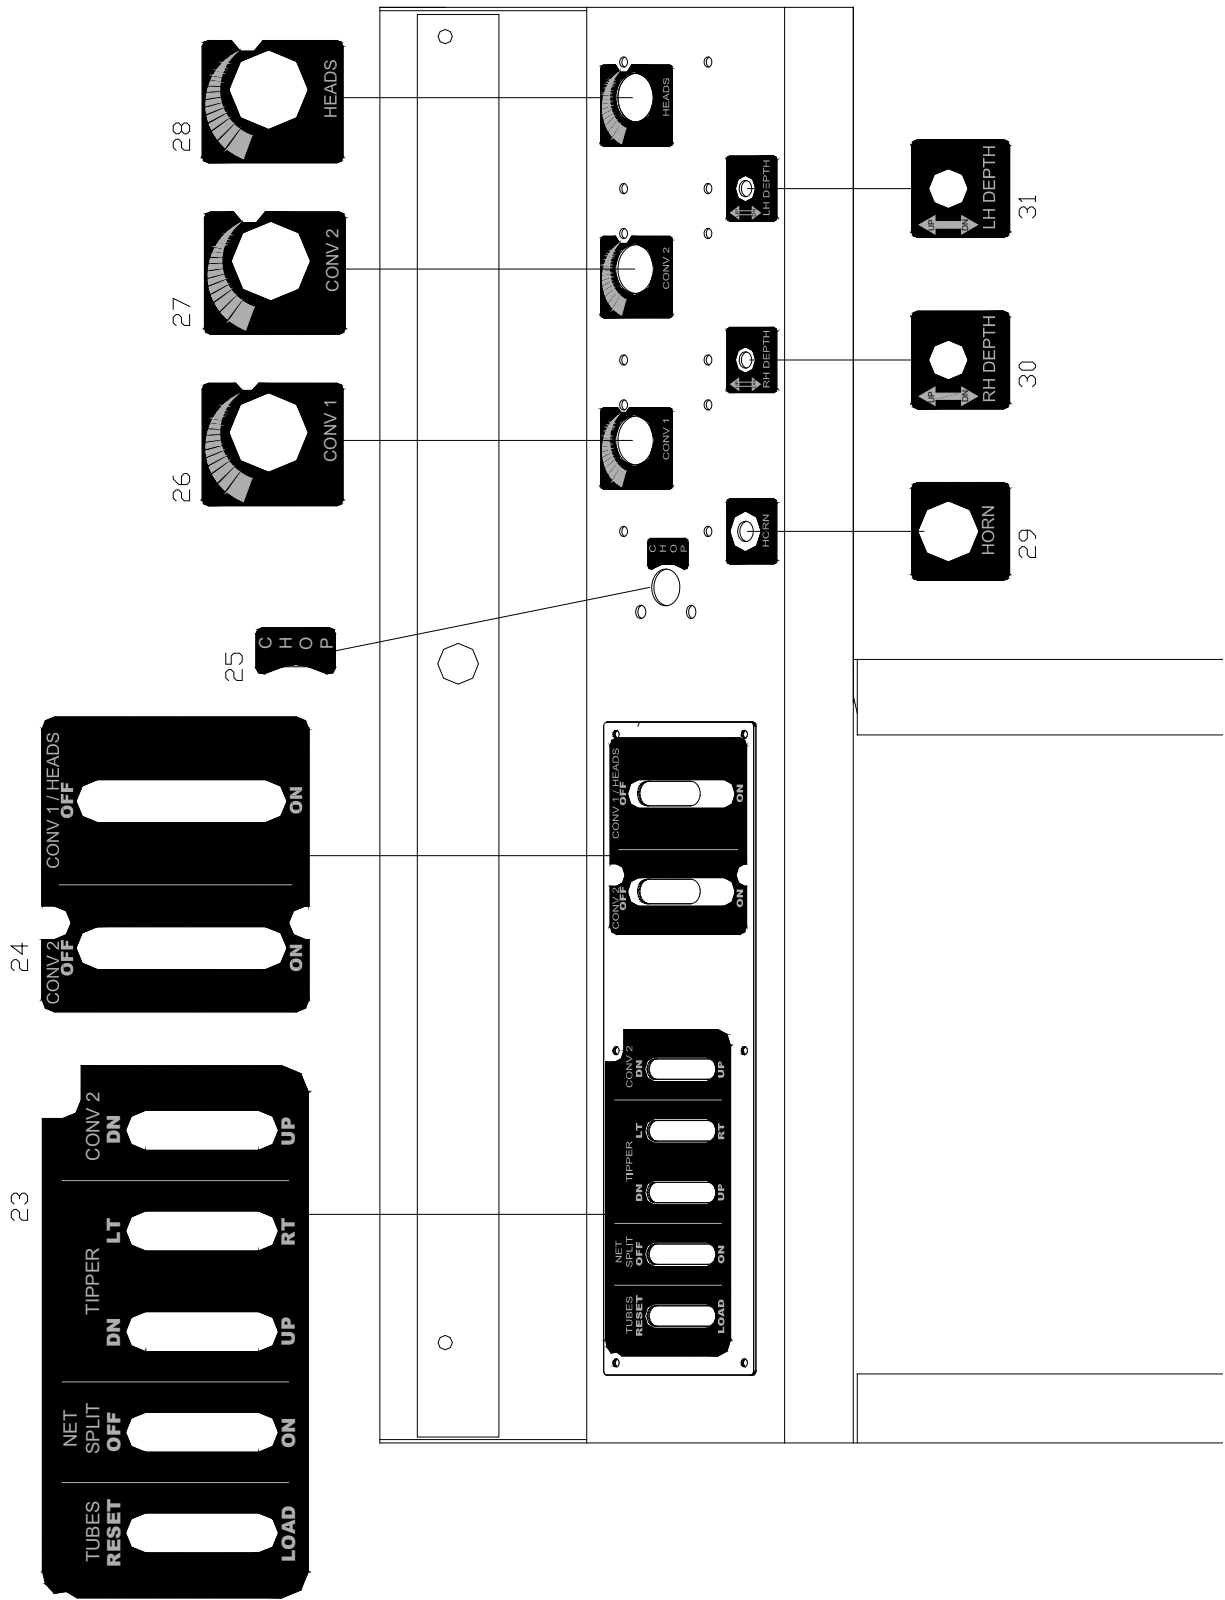

CONTROL PANEL

[illegible]