



KTR 30 TURF ROLLER

OPERATOR'S MANUAL & PARTS LIST




KESMAC Inc

23324 Woodbine Avenue, Keswick Ontario Canada L4P 3E9
Tel (905) 476-6222 Fax (905)-6744 Web Site www.Kesmac.com
info@kesmac.com

IMPORTANT

Check oil level daily.
Top up to correct level
when COLD.

**DO NOT FILL PAST
THE LEVEL MARK.**

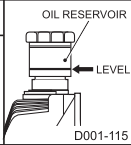**IMPORTANT**

**USE SYNTHETIC SAE
5W40 ONLY**

D001-068

IMPORTANT

The Hydrostatic Transmission
housing must be kept clean and
free of oil and dust to ensure
proper cooling.

D001-146

CAUTION

HOT EXHAUST
To avoid injury keep
clear of exhaust pipes
and muffler.

D001-053

WARNING

CRUSHING HAZARD
Stay clear of moving parts

D001-054



Current from Serial No. 341




Non Current up to
Serial No. 341

CAUTION

**TO PREVENT TIPPING
WHEN ON SLOPES
STOP THE UNIT
BEFORE CHANGING
FORWARD / REVERSE
DIRECTION. OPERATE
CONTROLS SLOWLY
AND SMOOTHLY.**


D001-073

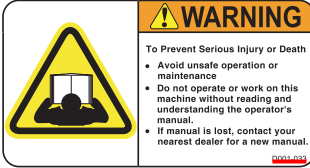**WARNING**

To Prevent Serious Injury or Death

- Avoid unsafe operation or maintenance
- Do not operate or work on this machine without reading and understanding the operator's manual.
- If manual is lost, contact your nearest dealer for a new manual.

D001-054

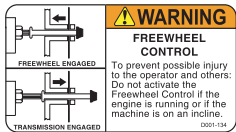**WARNING****FREEWHEEL CONTROL**


To prevent possible injury to the operator and others:
Do not activate the Freewheel Control if the engine is running or if the machine is on an incline.

D001-134

kesmac**kesmac****WARNING**


CRUSHING HAZARD
Stay clear of moving parts

D001-054

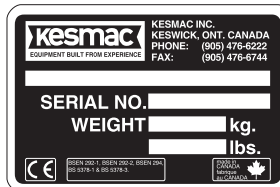**IMPORTANT**

Allow air to vent from
drum when filling.

D001-133

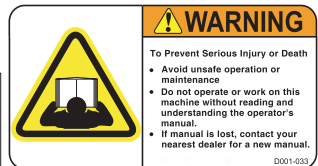**WARNING**

To Prevent Serious Injury or Death

- Avoid unsafe operation or maintenance
- Do not operate or work on this machine without reading and understanding the operator's manual.
- If manual is lost, contact your nearest dealer for a new manual.

D001-033

kesmac**DANGER**

Si vous ne lisez pas l'anglais,
demandez à quelqu'un qui lit l'anglais
de traduire pour vous toutes les
consignes de sécurité.

D001-037

**PELIGRO**

Si No Lee Ingles, pida Ayuda a Alguien
Que Si Lo Lea Para Que le Traduzca
las Medidas de Seguridad.

D001-037


**WARNING**

CRUSHING HAZARD
Stay clear of moving parts

D001-054




FRAME & ROLLERS ASSEMBLY

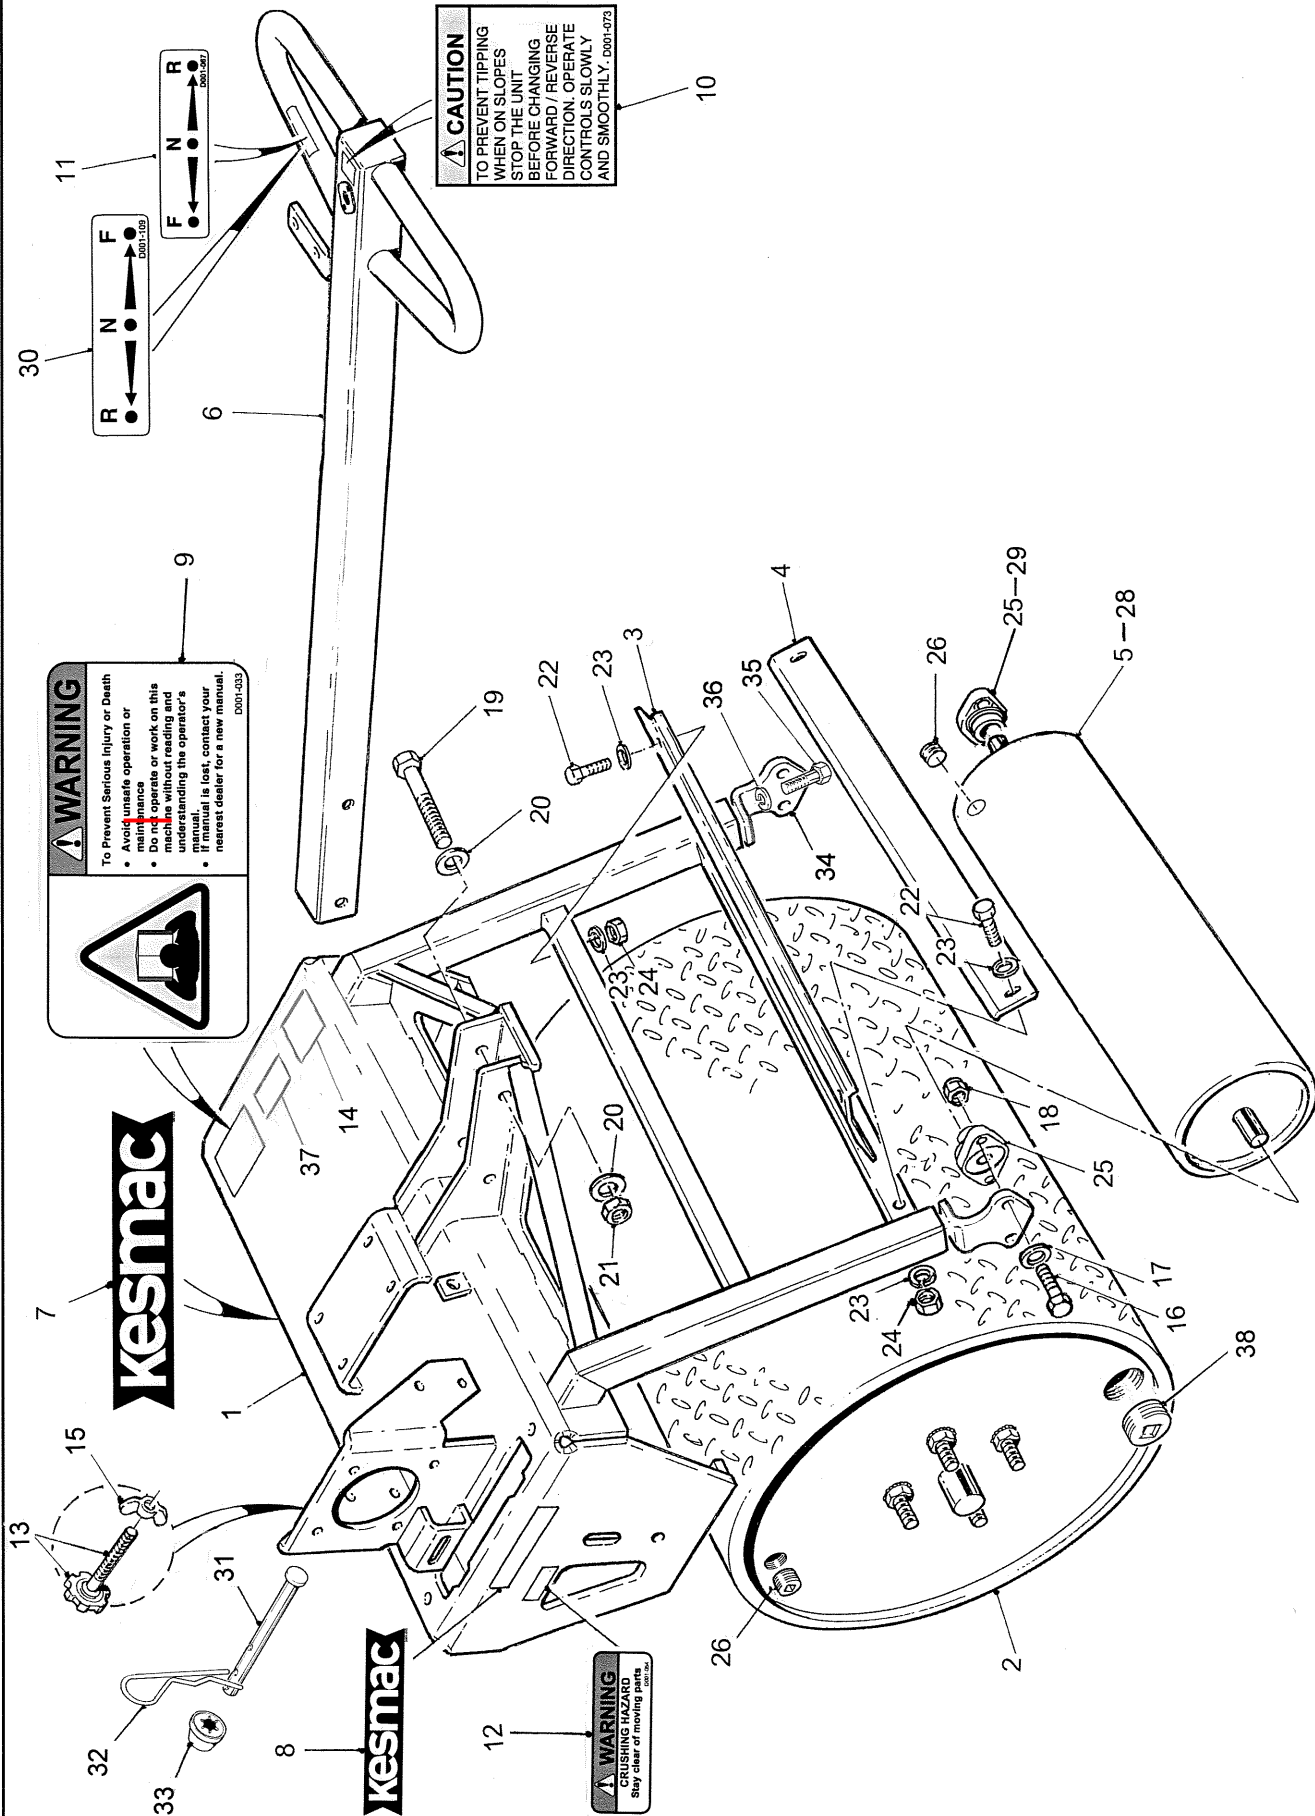

ITEM NO.	PART NO.	DESCRIPTION	QTY
		KTR 30 TURF ROLLER FRAME AND ROLLERS ASSEMBLY	
1	<u>TR30033</u>	Roller Housing	1
2	<u>TR30010</u>	Roller - 24 in. Dia. (Traction)	1
	<u>TR30180</u>	Roller - 24 in. Dia. (Smooth)	1
	<u>TR30183</u>	Roller - 24 in. Dia. (Traction. Heavy Duty)	1
3	<u>TR10055</u>	Scraper - 24in. Roller	1
4	<u>TR10056</u>	Scraper - 8in. Roller	1
5	<u>TR30012</u>	Roller - 8in. Dia. Non Current to Serial No. 294. (except Serial No. 293)	1
6	<u>TR30083</u>	Handle	1
7	<u>D001-014</u>	Decal - Kesmac	1
8	<u>D001-013</u>	Decal - Kesmac 6in.	2
9	<u>D001-033</u>	Decal - "Warning to Prevent Serious..."	1
10	<u>D001-073</u>	Decal - "Caution to Prevent tipping..."	1
11	<u>D001-067</u>	Decal - "F - N - R" Non Current up to Serial No. 341	1
12	<u>D001-054</u>	Decal - "Warning Crushing Hazard..."	2
13	<u>TR50194</u>	Knob Thumbscrew Adjuster Assembly. Non Current up to Serial No. 450	1
14	<u>D001-112</u>	Serial No. Plate	1
15	<u>F420601</u>	Wing Nut. Non Current up to Serial No. 450	1
16	<u>F040714</u>	Bolt 7/16 unc x 1 1/2 Gr.8 (For Item 25 - KB32012 Flange Bearing.)	4
	<u>F041016</u>	Bolt 5/8 unc x 1 3/4 Gr. 8 (For Item 29 - KB32016 Flange Bearing.)	4
17	<u>F320700</u>	Washer 7/16 (For Item 25 - KB32012 Flange Bearing.)	4
	<u>F321000</u>	Washer 5/8 (For Item 29 - KB32016 Flange Bearing.)	4
18	<u>F210700</u>	Locknut 7/16 unc (For Item 25 - KB32012 Flange Bearing.)	4
	<u>F211000</u>	Locknut 5/8 unc (For Item 29 - KB32016 Flange Bearing.)	4
19	<u>F040840</u>	Bolt 1/2 unc x 4 Gr.8	2
20	<u>F320800</u>	Washer 1/2	4
21	<u>F210800</u>	Locknut 1/2 unc	2
22	<u>F040410</u>	Bolt 1/4 unc x 1 Gr.8	4
23	<u>F320400</u>	Washer 1/4	8
24	<u>F210400</u>	Locknut 1/4 unc	4
25	<u>KB32012</u>	Flange Bearing. Non Current to Serial No. 294. (except Serial No. 293)	2
26	<u>KH00015</u>	Pipe Plug 3/4 NPT. Sq. Hd. (Qty. 2 on early models)	1
27	<u>D001-043</u>	Reflector Tape - Orange. (Not Illustrated)	1
28	<u>TR30237</u>	Roller - 8in. Dia. Current from Serial No. 293. (except Serial No. 294)	1
29	<u>KB32016</u>	Flange Bearing. Current from Serial No. 293. (except Serial No. 294)	2
30	<u>D001-109</u>	Decal - "R - N - F" Current from Serial No. 342	1
31	<u>TR10320</u>	Pin. Free Wheeling. Current from Serial No. 451	1
32	<u>F940224</u>	Hitch Pin Clip. Current from Serial No. 451	1
33	<u>KX50105</u>	Push Cap Nut. Current from Serial No. 451	1
34	<u>TR10072</u>	Bearing Mounting Bracket - Current from Serial No. 467	2
35	<u>F040610</u>	Bolt 3/8 unc x 1 Gr.8	4
36	<u>F310600</u>	Lockwasher 3/8	4
37	<u>D001-133</u>	Decal - "Important Allow air to vent..."	1
38	<u>KH00020</u>	Pipe Plug 2 NPT. Sq. Hd.	1

DRIVE SPROCKETS & CHAINS

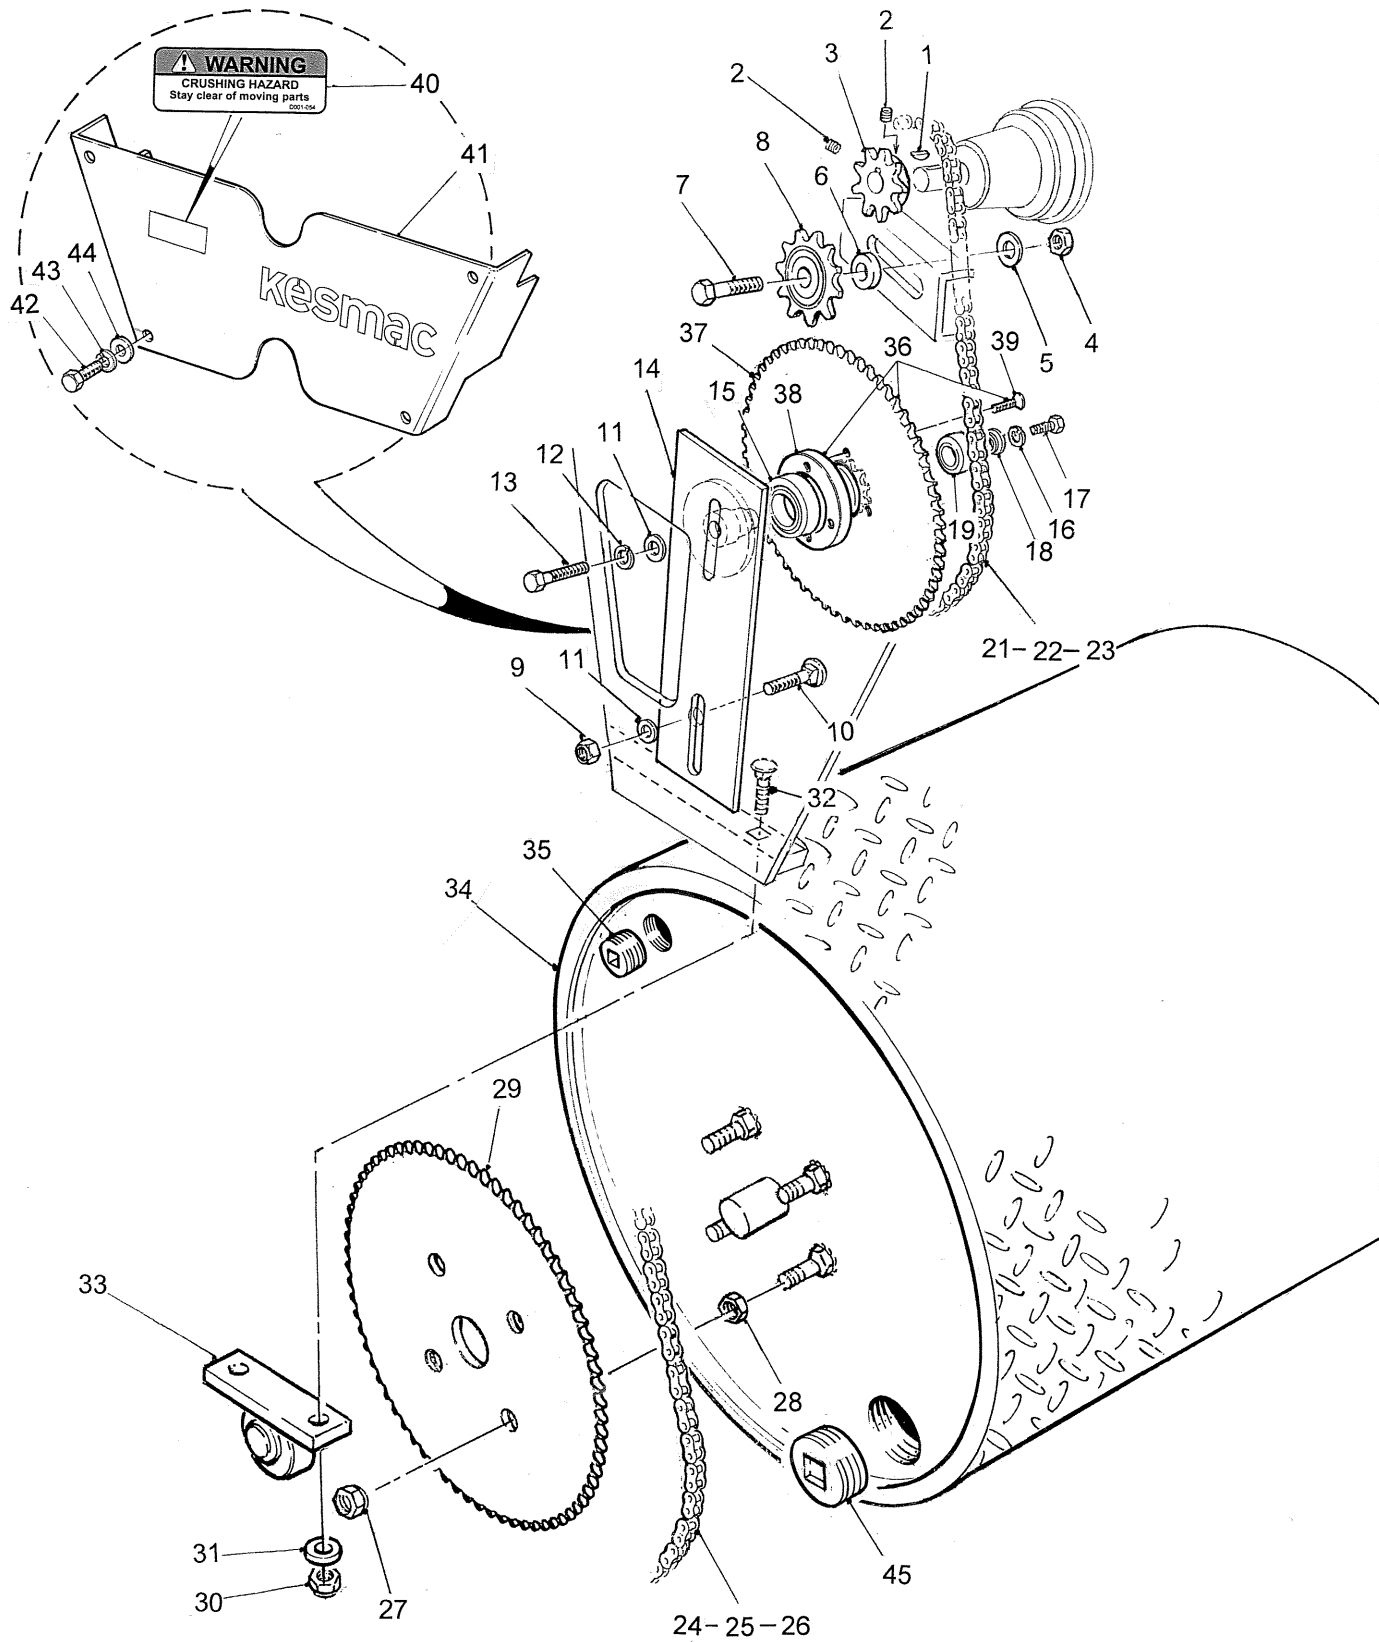


ITEM NO.	PART NO.	DESCRIPTION	QTY
KTR 30 TURF ROLLER DRIVE SPROCKETS & CHAINS			
1	<u>F900404</u>	Woodruff Key 1/8 z 1/2	1
2	<u>F140402</u>	Set Screw 1/4 unc Soc. Hd.	2
3	<u>TR10029</u>	Drive Sprocket	1
4	<u>F211000</u>	Locknut 5/8 unc	1
5	<u>F321000</u>	Washer 5/8	2
6	<u>TR10089</u>	Spacer	1
7	<u>F041020</u>	Bolt 5/8 unc x 2 Gr.8	1
8	<u>KD70003</u>	Sprocket 18 T c/w Bearing	1
9	<u>F210700</u>	Locknut 7/16 unc	1
10	<u>F020712</u>	Carriage Bolt 7/16 unc x 1 1/4	1
11	<u>F320700</u>	Washer 7/16	1
12	<u>F310700</u>	Lockwasher 7/16	1
13	<u>F040720</u>	Bolt 7/16 unc x 2 Gr.8	1
14	<u>TR30067</u>	Sprocket Spindle	1
15	<u>KB50003</u>	Bearing	1
16	<u>F310400</u>	Lockwasher 1/4	1
17	<u>F040406</u>	Bolt 1/4 unc x 3/4 Gr.8	1
18	<u>TR10005</u>	Retaining Washer	1
19	<u>KB11623</u>	Bearing	1
20	<u>TR30025</u>	Intermediate Sprocket - Obsolete (Replaced by Item 36.)	1
21	<u>KD71000</u>	Chain Half Link #40 (if required)	1
22	<u>KD71001</u>	Chain Connecting Link #40	1
23	<u>TR10096</u>	Chain #40 Intermediate Sprocket to Transmission 39 1/2 in.	1
24	<u>KD41001</u>	Chain Half Link #50 (if required)	1
25	<u>KD41000</u>	Chain Connecting Link #50	1
26	<u>TR10097</u>	Chain #50 Roller to Int. Sprocket 48 1/2 in.	1
27	<u>F260800</u>	Wheel Nut 1/2 unf	4
28	<u>F220850</u>	Jam Nut 1/2 unf	4
29	<u>TR10027</u>	Sprocket 72T (24in. Dia. Roller)	1
30	<u>F210800</u>	Locknut 1/2 unc	4
31	<u>F320800</u>	Washer 1/2	4
32	<u>F020716</u>	Carriage Bolt 1/2 unc x 1 3/4	4
33	<u>MB30001</u>	Bearing - Pillow Block	2
34	<u>TR30010</u>	Roller - 24 in. Dia. (Traction)	1
	<u>TR30180</u>	Roller - 24 in. Dia. (Smooth)	1
	<u>TR30183</u>	Roller - 24 in. Dia. (Traction. Heavy Duty)	1
35	<u>KH00015</u>	Pipe Plug 3/4 NPT. Sq. Hd. (Qty. 2 on early models)	1
36	<u>TR50249</u>	Intermediate Sprocket Assembly. See note	1
37	<u>TR10116</u>	Intermediate Sprocket	1
38	<u>TR10026</u>	Sprocket	1
39	<u>F120510</u>	Bolt 5/16 x 1 Flat Hd. Hex Soc.	4
40	<u>D001-054</u>	Decal - "Warning Crushing Hazard..."	1
41	<u>T100098</u>	Chain Guard. Lower	1
42	<u>F040410</u>	Bolt 1/4 unc x 1 Gr.8	4
43	<u>F310400</u>	Lockwasher 1/4	4
44	<u>F320400</u>	Washer 1/4	4
45	<u>KH00020</u>	Pipe Plug 2 NPT. Sq. Hd.	1

NOTE

Use Part No. TR50322 to order the Intermediate Sprocket Assembly c/w Bearings.

CONTROLS ASSEMBLY

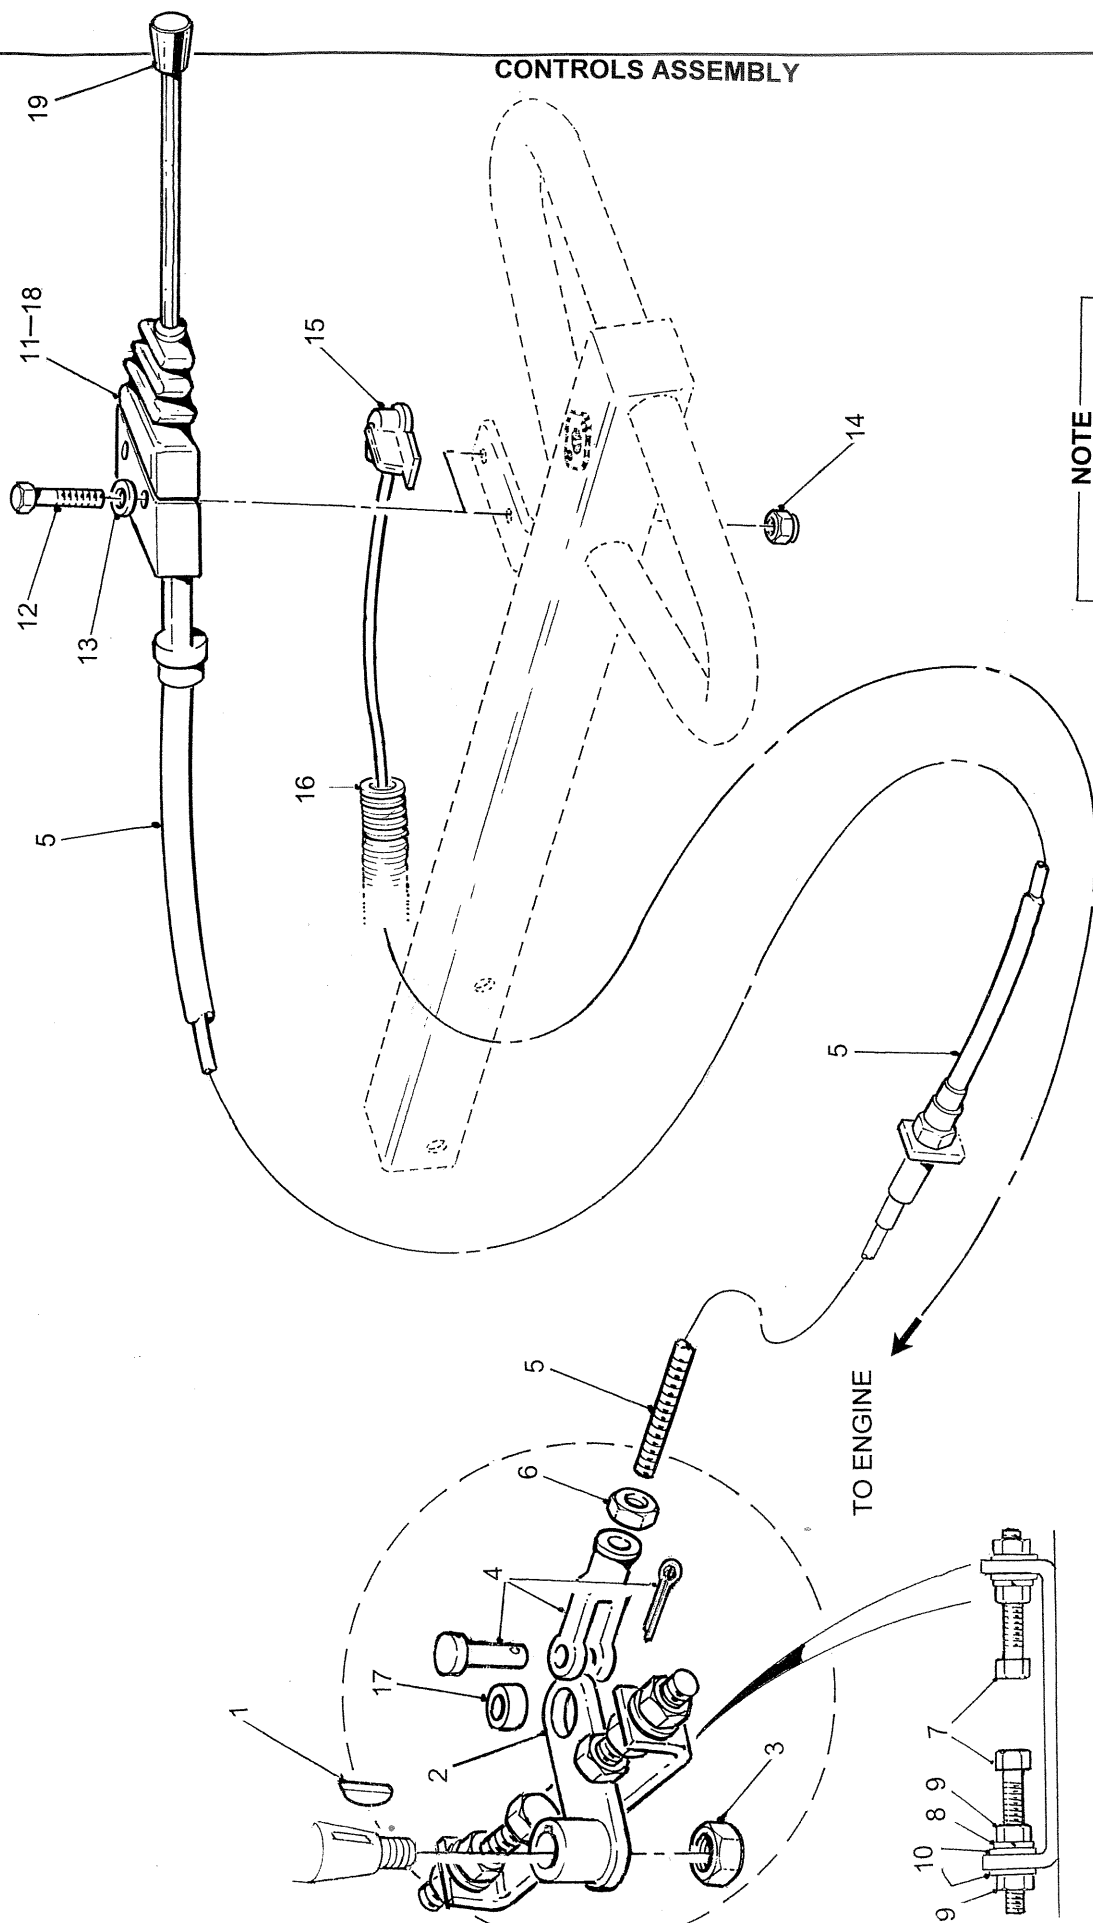

NOTE






See page 9 for Dead Man Switch Assembly.

ITEM NO.	PART NO	DESCRIPTION	QTY
		KTR 30 TURF ROLLER CONTROLS ASSEMBLY	
1	<u>F900404</u>	Woodruff Key 1/8 x 1/2 Pan. Hd. Phil. S.S.	1
2	<u>TR30045</u>	Lever Arm	1
3	<u>F230600</u>	Nut 3/8 UNC (Locite)	1
4	<u>KM99002</u>	Clevis Cable End c/w Pin, Cotter Pin & Bushing	1
5	<u>KD10028</u>	Control Cable Ass'y (Non Current to Serial No.19)	1
	<u>KD10033</u>	Control Cable Ass'y (Current Serial No.20 onward)	1
6	<u>F220450</u>	Jam Nut 1/4 - 28 UNF	1
7	<u>F010512</u>	Bolt 5/16 UNC x 1 1/4	2
8	<u>F310500</u>	Lockwasher 5/16	2
9	<u>F230500</u>	Nut 5/16 UNC	4
10	<u>F320500</u>	Washer 5/16	4
11	<u>TR50195</u>	F-N-R Control Assembly c/w Cable	1
	<u>KD10027</u>	Control Assembly. F-N-R	1
12	<u>F040522</u>	Bolt 5/16 unc x 2 1/2 Gr.8	2
13	<u>F320500</u>	Washer 5/16	2
14	<u>F210500</u>	Locknut 5/16	2
15	<u>KD40025</u>	Switch 'ON-OFF' (Honda Part)	1
16	<u>TR50188</u>	Loom 'ON-OFF' Switch to Engine	Ref
17	<u>KB10404</u>	Bushing	1
18	<u>KD10044</u>	Control Assembly. Service Kit	1
19	<u>KM99055</u>	Knob	1



NOTE

Item 18 - Control Assembly Service Kit includes a Bolt, Lockwasher, Cable End Bushing - KB10422, and Snap Ring - F830425.



ENGINE & TRANSMISSION ASSEMBLY

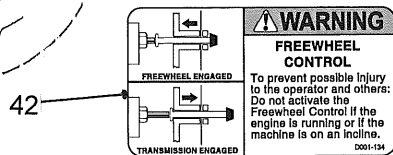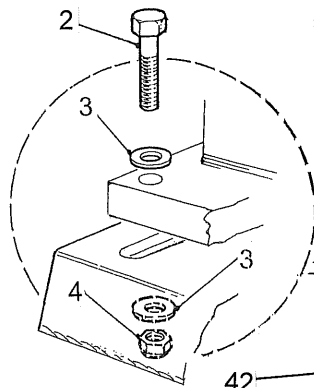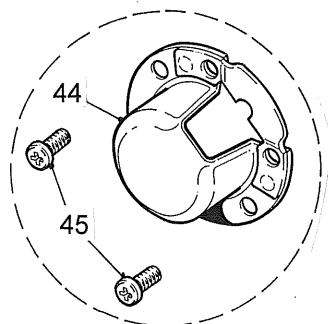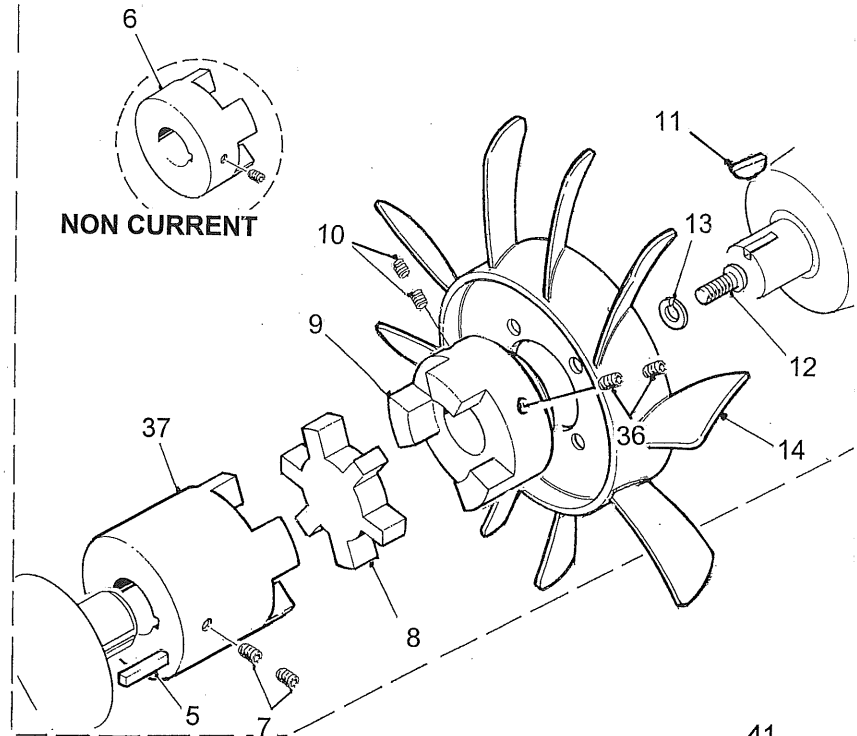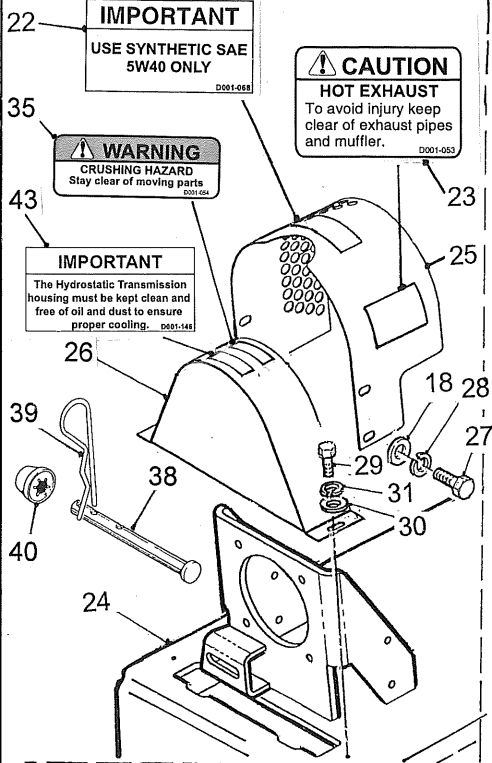

TO 'ON-OFF' SWITCH ON HANDLE

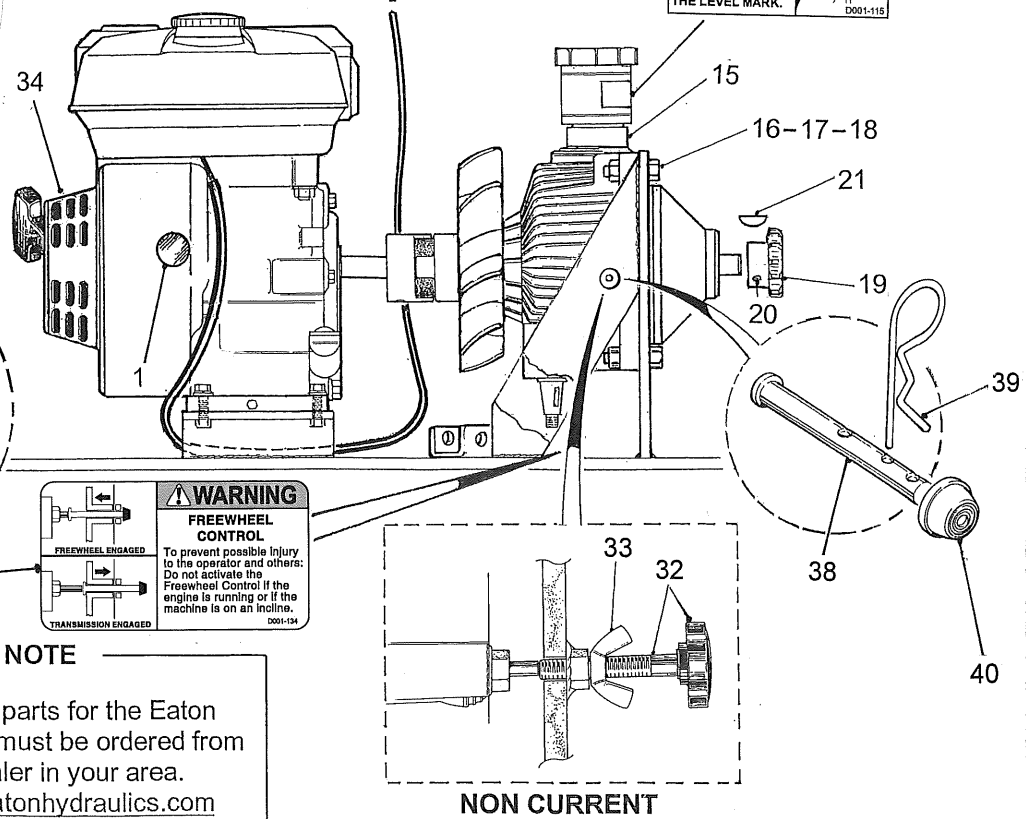


ITEM NO.	PART NO	DESCRIPTION	QTY
KTR 30 TURF ROLLER ENGINE & TRANSMISSION ASSEMBLY			
1	<u>KM30012</u>	Plug	1
2	<u>F010516</u>	Bolt 5/16 UNC x 1 3/4	4
3	<u>F320500</u>	Washer 5/16	8
4	<u>F210500</u>	Locknut 5/16 UNC	4
5	<u>F923310</u>	Key 3/16 x 3/16 x 1 (Engine shaft)	1
6	<u>KD85006</u>	Half Coupling (Engine) - Non Current to Serial No. 305	1
7	<u>F140502</u>	Set Screw UNC 5/16 Soc. Hd.	2
8	<u>KD85104</u>	Coupling Insert	1
9	<u>TR10028</u>	Half Coupling (Transmission)	1
10	<u>F140402</u>	Set Screw 1/4 UNC Soc. Hd.	2
11	<u>F900404</u>	Woodruff Key 1/8 x 1/2 Pan. Hd. Phil. S.S.	2
12	<u>F700204</u>	Screw #10 - 24 x 1/2	4
13	<u>F310200</u>	Lockwasher #10	4
14	<u>TR10177</u>	Cooling Fan	1
15	<u>KD40017</u>	Transmission (Eaton Model 7)	1
16	<u>F010632</u>	Bolt 3/8 UNC x 3 1/4	4
17	<u>F210600</u>	Locknut 3/8 UNC	4
18	<u>F320600</u>	Washer 3/8	8
19	<u>TR10029</u>	Sprocket (Transmission Shaft)	1
20	<u>F140402</u>	Set Screw 1/4 UNC Soc. Hd.	2
21	<u>F900404</u>	Woodruff Key 1/8 x 1/2	1
22	<u>D001-068</u>	Decal - "Important Use Synthetic..."	1
23	<u>D001-053</u>	Decal - "Caution Hot Exhaust..."	1
24	<u>TR30033</u>	Roller Housing	1
25	<u>TR10030</u>	Fan Shroud	1
26	<u>TR30039</u>	Chain Guard	1
27	<u>F040610</u>	Bolt 3/8 unc x 1 Gr.8	4
28	<u>F310600</u>	Lockwasher 3/8	4
29	<u>F040410</u>	Bolt 1/4 unc x 1 Gr.8	2
30	<u>F320400</u>	Washer 1/4	2
31	<u>F310400</u>	Lockwasher 1/4	2
32	<u>TR50194</u>	Knob Thumbscrew Adjuster Assembly. Non Current up to Serial No. 450	1
33	<u>F420601</u>	Wing Nut. Non Current up to Serial No. 450	1
34	<u>KD40019</u>	Honda Engine GX 160 - See Note on Front Page of Parts List	1
35	<u>D001-054</u>	Decal - "Warning Crushing Hazard..."	1
36	<u>F140502</u>	Set Screw 5/16 unc x 1/4	2
37	<u>TR10239</u>	Half Coupling (Engine) - Current from Serial No. 306	1
38	<u>TR10320</u>	Pin. Free Wheeling. Current from Serial No. 451	1
39	<u>F940224</u>	Hitch Pin Clip. Current from Serial No. 451	1
40	<u>KX50105</u>	Push Cap Nut. Current from Serial No. 451	1
41	<u>D001-115</u>	Decal - "Important Check Oil Level..."	1
42	<u>D001-134</u>	Decal - "Warning Freewheel Control..." Current from Serial No. 451	1
43	<u>D001-146</u>	Decal - "Important Keep Hydrostatic Transmission clean..."	1
44	<u>KD40020</u>	Exhaust Deflector. Honda Engine GX 160	1
45	<u>KD40021</u>	Screw. Exhaust Deflector	2

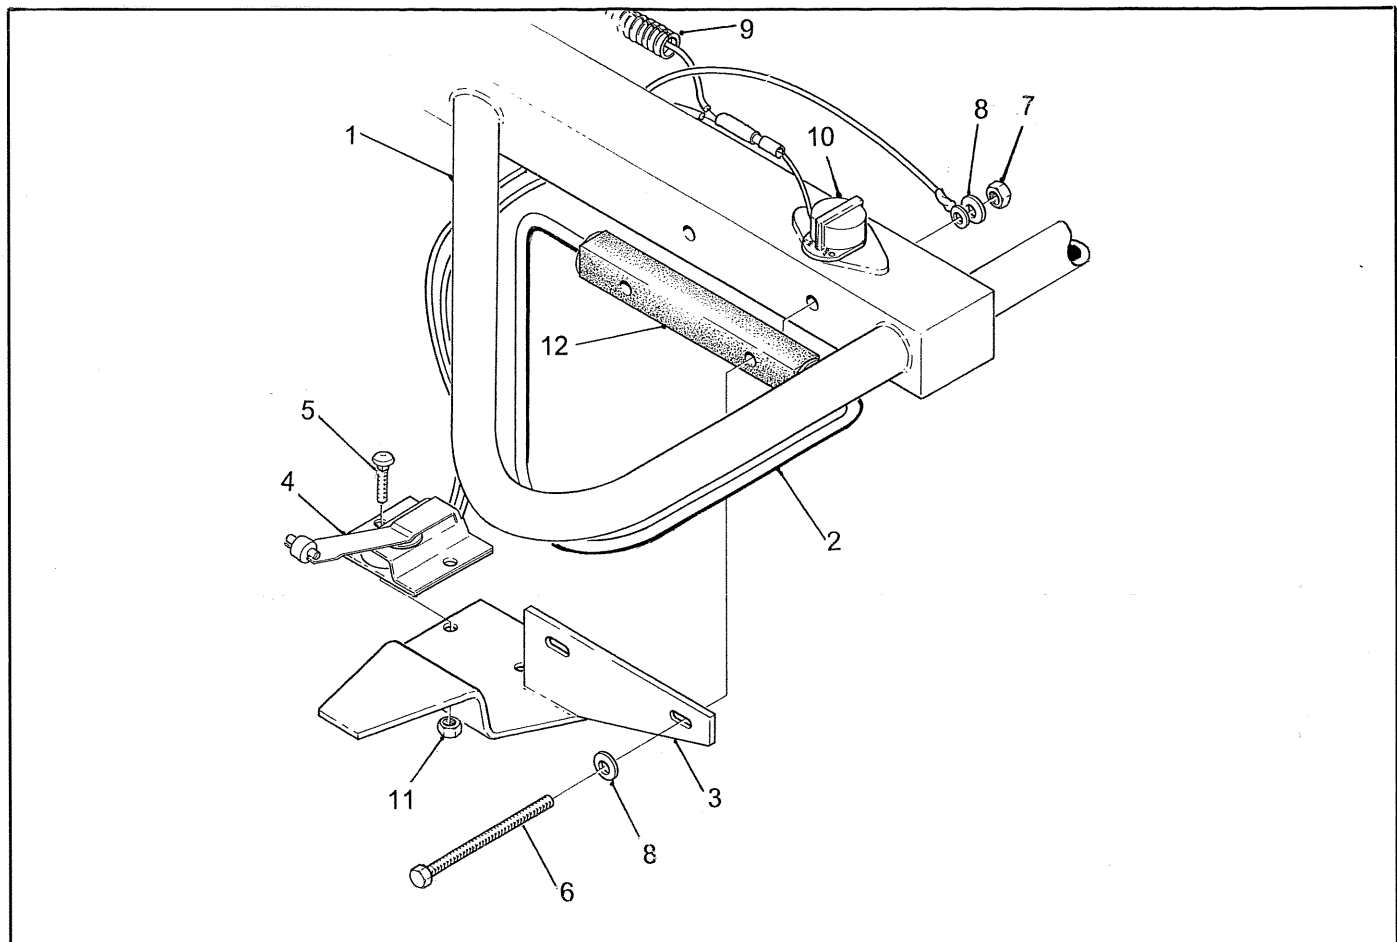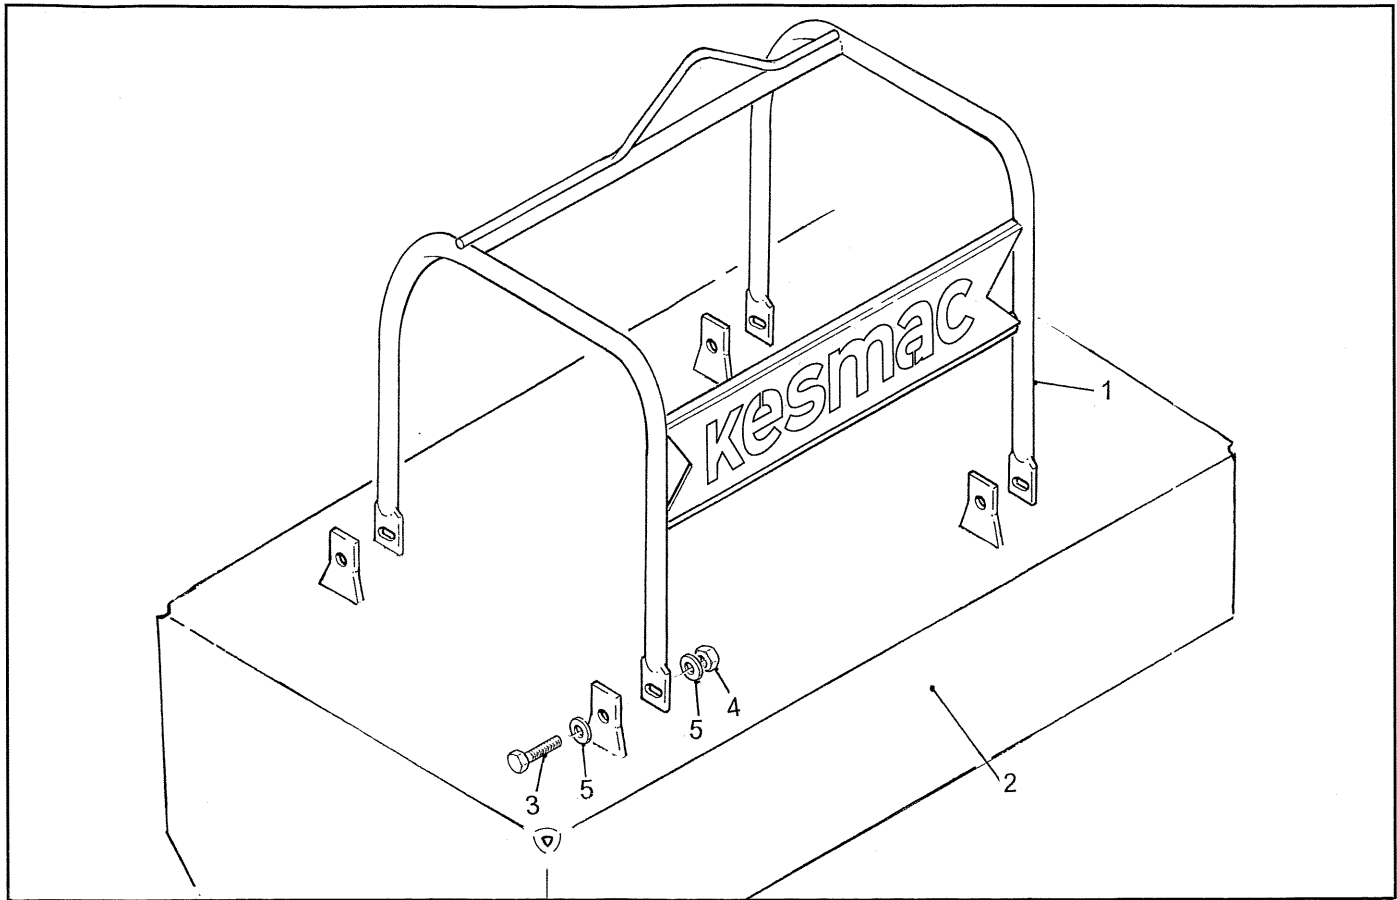

ITEM NO.	PART NO.	DESCRIPTION	QTY
		POWER PROTECTION ASSEMBLY	
1	<u>TR30106</u>	Roll Cage	1
2	<u>TR30033</u>	Roller Housing	1
3	<u>F040610</u>	Bolt- 3/8 unc x 1 GR. 8	4
4	<u>F230600</u>	Nut 3/8 unc	4
5	<u>F320600</u>	Washer 3/8	8

ITEM NO.	PART NO.	DESCRIPTION	QTY
		DEAD MAN SWITCH ASSEMBLY	
1	<u>TR30083</u>	Handle	1
2	<u>TR30099</u>	Dead Man Handle	1
3	<u>TR30101</u>	Switch Mounting Bracket	1
4	<u>KE80005</u>	Limit Switch	1
5	<u>F580204</u>	Bolt- #10 St. Stl. Pan Hd.	2
6	<u>F040440</u>	Bolt- 1/4 unc x 4 GR. 8	2
7	<u>F230400</u>	Nut- 1/4 unc	2
8	<u>F320400</u>	Washer 1/4	4
9	<u>TR50188</u>	Loom Assembly	1
10	<u>KD40025</u>	ON-OFF' Switch	1
11	<u>F210300</u>	Locknut #10	2
12	<u>TR10100</u>	Pivot Mount. Dead Man Handle	1

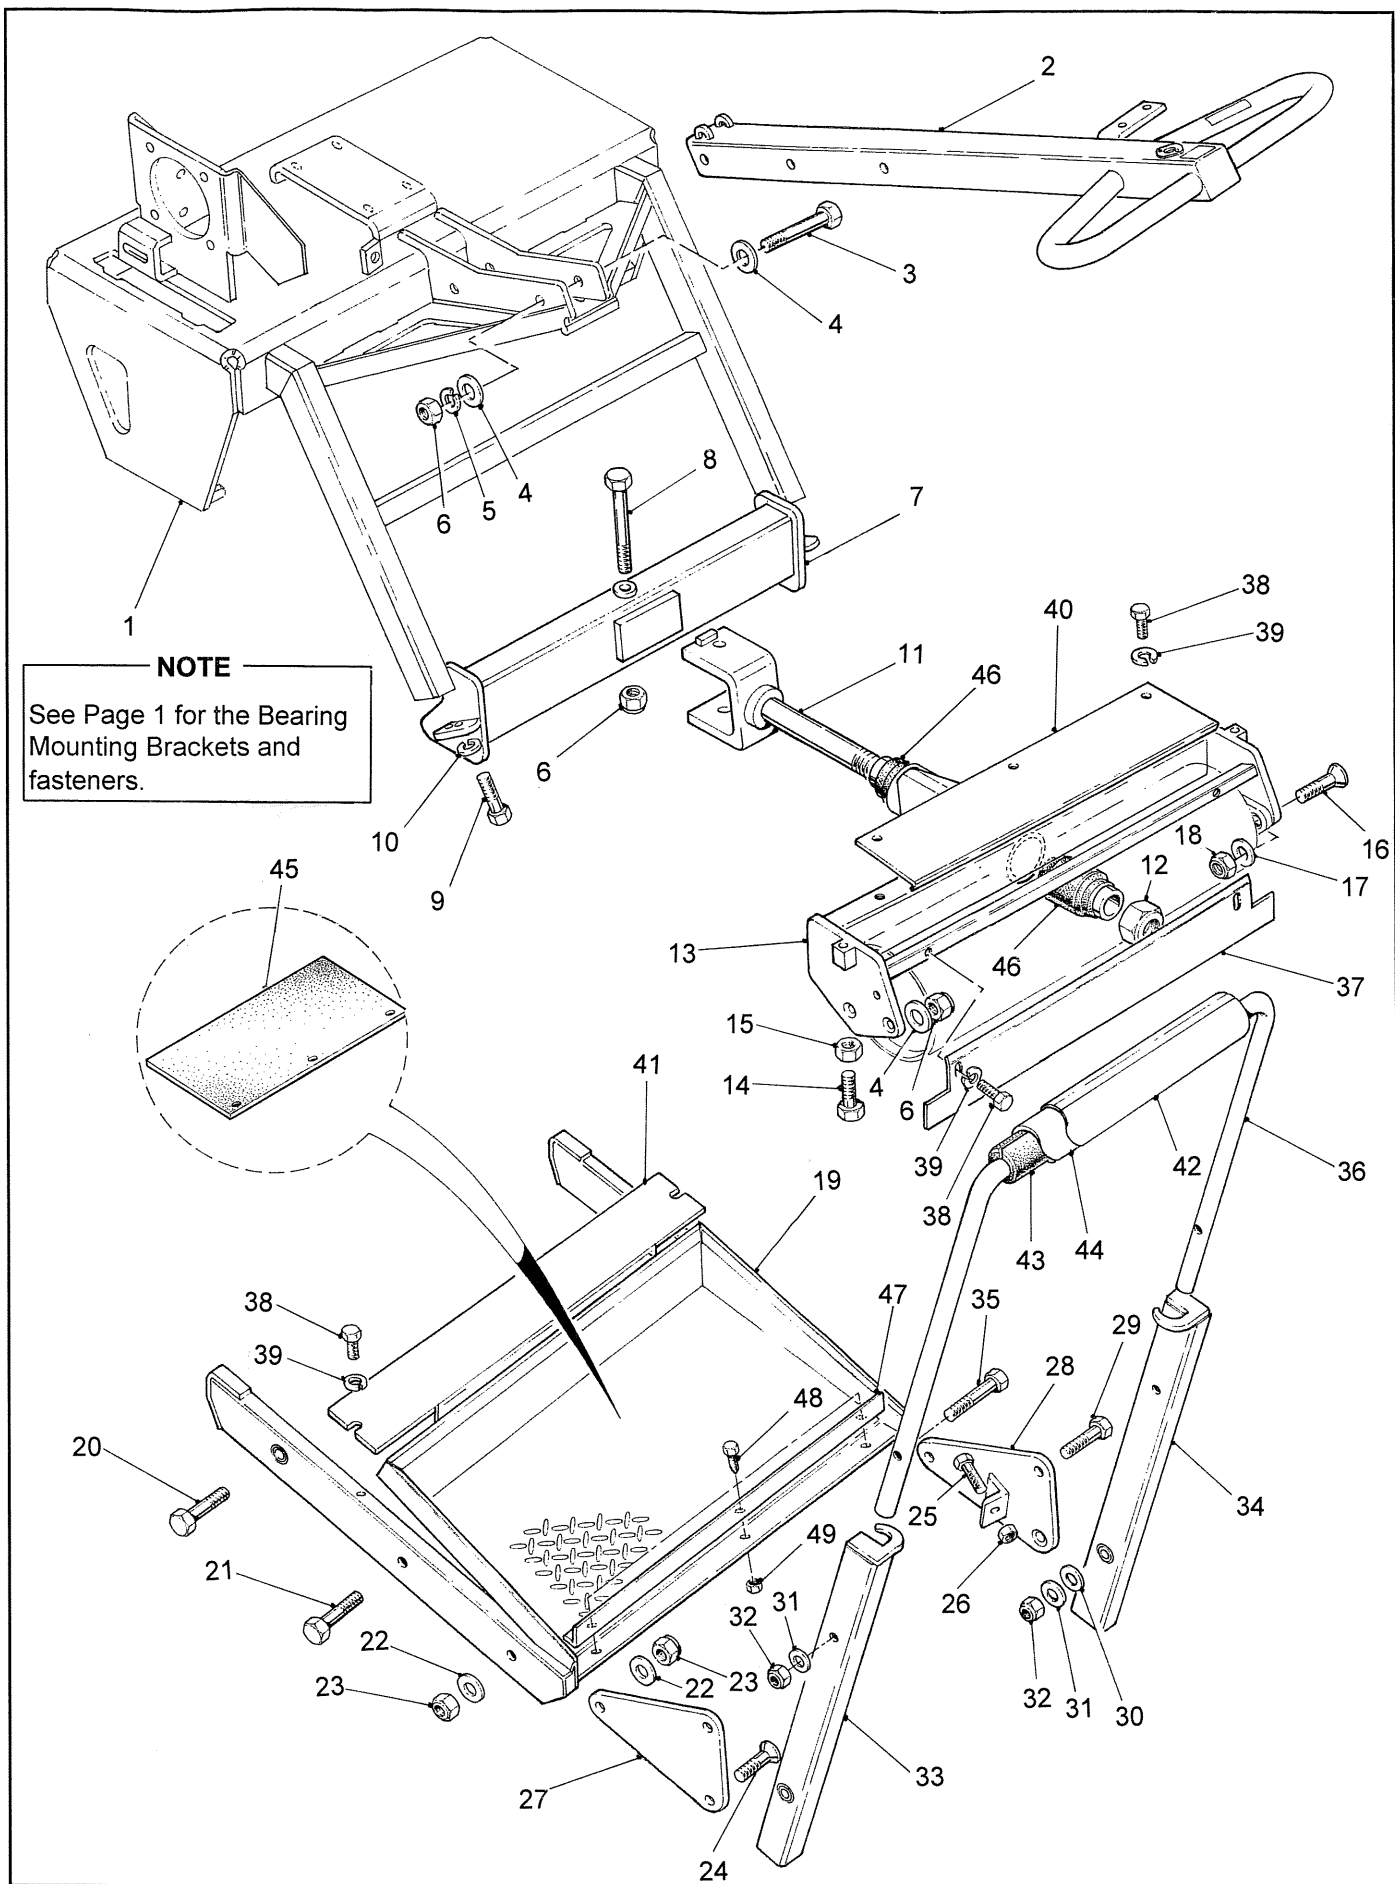

ITEM NO.	PART NO.	DESCRIPTION	QTY
		KTR 30 TURF ROLLER "RIDE ON" ACCESSORY Available from Serial Number 467	
	<u>TR50318</u>	"Ride On" Accessory. Assembly	1
1	<u>TR30033</u>	Roller Housing	Ref.
2	<u>TR30284</u>	Handle	1
3	<u>F040840</u>	Bolt 1/2 unc x 4 Gr.8	2
4	<u>F320800</u>	Washer 1/2	4
5	<u>F310800</u>	Lockwasher 1/2	1
6	<u>F210800</u>	Locknut 1/2 unc	4
7	<u>TR30199</u>	Pivot Frame	1
8	<u>F040854</u>	Bolt 1/2 unc x 5 1/2 Gr.8	2
9	<u>F040612</u>	Bolt 3/8 unc x 1 1/4 Gr.8	4
10	<u>F310600</u>	Lockwasher 3/8	4
11	<u>TR30203</u>	Pivot Clevis	1
12	<u>F211600</u>	Locknut 1 in.-14 uns	1
13	<u>TR30207</u>	Roller Frame. 8 in.	1
14	<u>F040814</u>	Bolt 1/2 unc x 1 1/2 Gr.8	2
15	<u>F220800</u>	Jamnut 1/2 unc	4
16	<u>F121016</u>	Bolt 5/8 unc x 1 3/4 Soc. Hd. Gr.8	4
17	<u>F321000</u>	Washer 5/8	4
18	<u>F211000</u>	Locknut 5/8 unc	4
19	<u>TR30214</u>	Platform	1
20	<u>F040820</u>	Bolt 1/2 unc x 2 Gr.8	2
21	<u>F040720</u>	Bolt 7/16 unc x 2 Gr.8	2
22	<u>F320700</u>	Washer 7/16	4
23	<u>F210700</u>	Locknut 7/16 unc	4
24	<u>F120720</u>	Bolt 7/16 unc x 2 Sod. Hd. Gr.8	2
25	<u>F040610</u>	Bolt 3/8 unc x 1 Gr.8	2
26	<u>F220600</u>	Jamnut 3/8 unc	2
27	<u>TR30312</u>	Backrest. Mounting Bracket. L.H.	1
28	<u>TR30313</u>	Backrest. Mounting Bracket. R.H.	1
29	<u>F040720</u>	Bolt 7/16 unc x 2 Gr.8	2
30	<u>F380700</u>	Shimwasher 3/8	4
31	<u>F320600</u>	Washer 3/8	6
32	<u>F210600</u>	Locknut 3/8 unc	4
33	<u>TR30314</u>	Support Base. L.H.	1
34	<u>TR30315</u>	Support Base. R.H.	1
35	<u>F040630</u>	Bolt 3/8 unc x 3	2
36	<u>TR10247</u>	Backrest	1
37	<u>TR10056</u>	Scraper 8 in. Roller	1
38	<u>F040406</u>	Bolt 1/4 unc x 3/4 Gr.8	7
39	<u>F320400</u>	Flatwasher 1/4	7
40	<u>TR10316</u>	Foot Guard. Roller	1
41	<u>TR10317</u>	Foot Guard. Platform	1
42	<u>TR10321</u>	Cushion Cover. Backrest	1
43	<u>TR10324</u>	Inner Padding. Backrest	1
44	<u>TR10325</u>	Outer Padding. Backrest	1
45	<u>TR10326</u>	Foot Pad	1
46	<u>KS50001</u>	Isolator	2
47	<u>TR10329</u>	Retainer. Foot Pad	1
48	<u>F580406</u>	Bolt 1/4 unc x 3/4 Pan Hd. Lg.	3
49	<u>F210400</u>	Locknut 1/4 unc	3


NOTE

Turf Rollers with the serial numbers 355, 429 & 439 are also equipped with the 'Ride On' accessory.

**Eaton
Hydraulics
Division**

Parts Information

Model 7 Eaton Hydrostatic Transmission

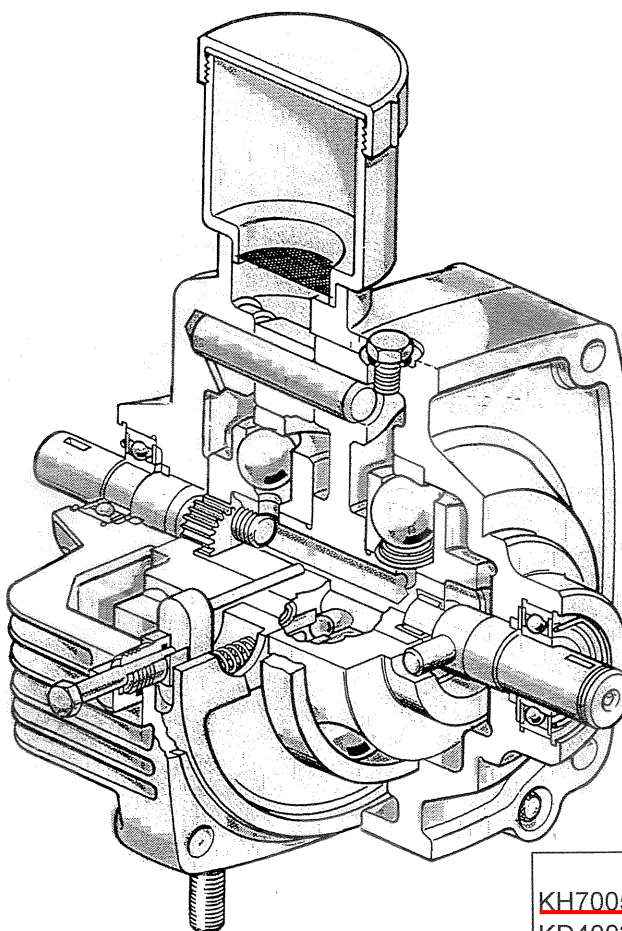

NOTE


KH70055 Transmission Overhaul Kit & KD40023 Reservoir Kit can be ordered from Kesmac parts department. ALL OTHER TRANSMISSION PARTS ARE LISTED FOR CUSTOMER CONVENIENCE, BUT **MUST** BE ORDERED FROM THE EATON AREA DEALER.
go to www.eatonhydraulics.com for more information

EAT•N

NOTE

Items 1A & 1 can be ordered from Kesmac parts department.
ALL OTHER TRANSMISSION PARTS ARE LISTED FOR CUSTOMER CONVENIENCE, BUT **MUST** BE ORDERED FROM THE EATON AREA DEALER.

go to www.eatonhydraulics.com for more information

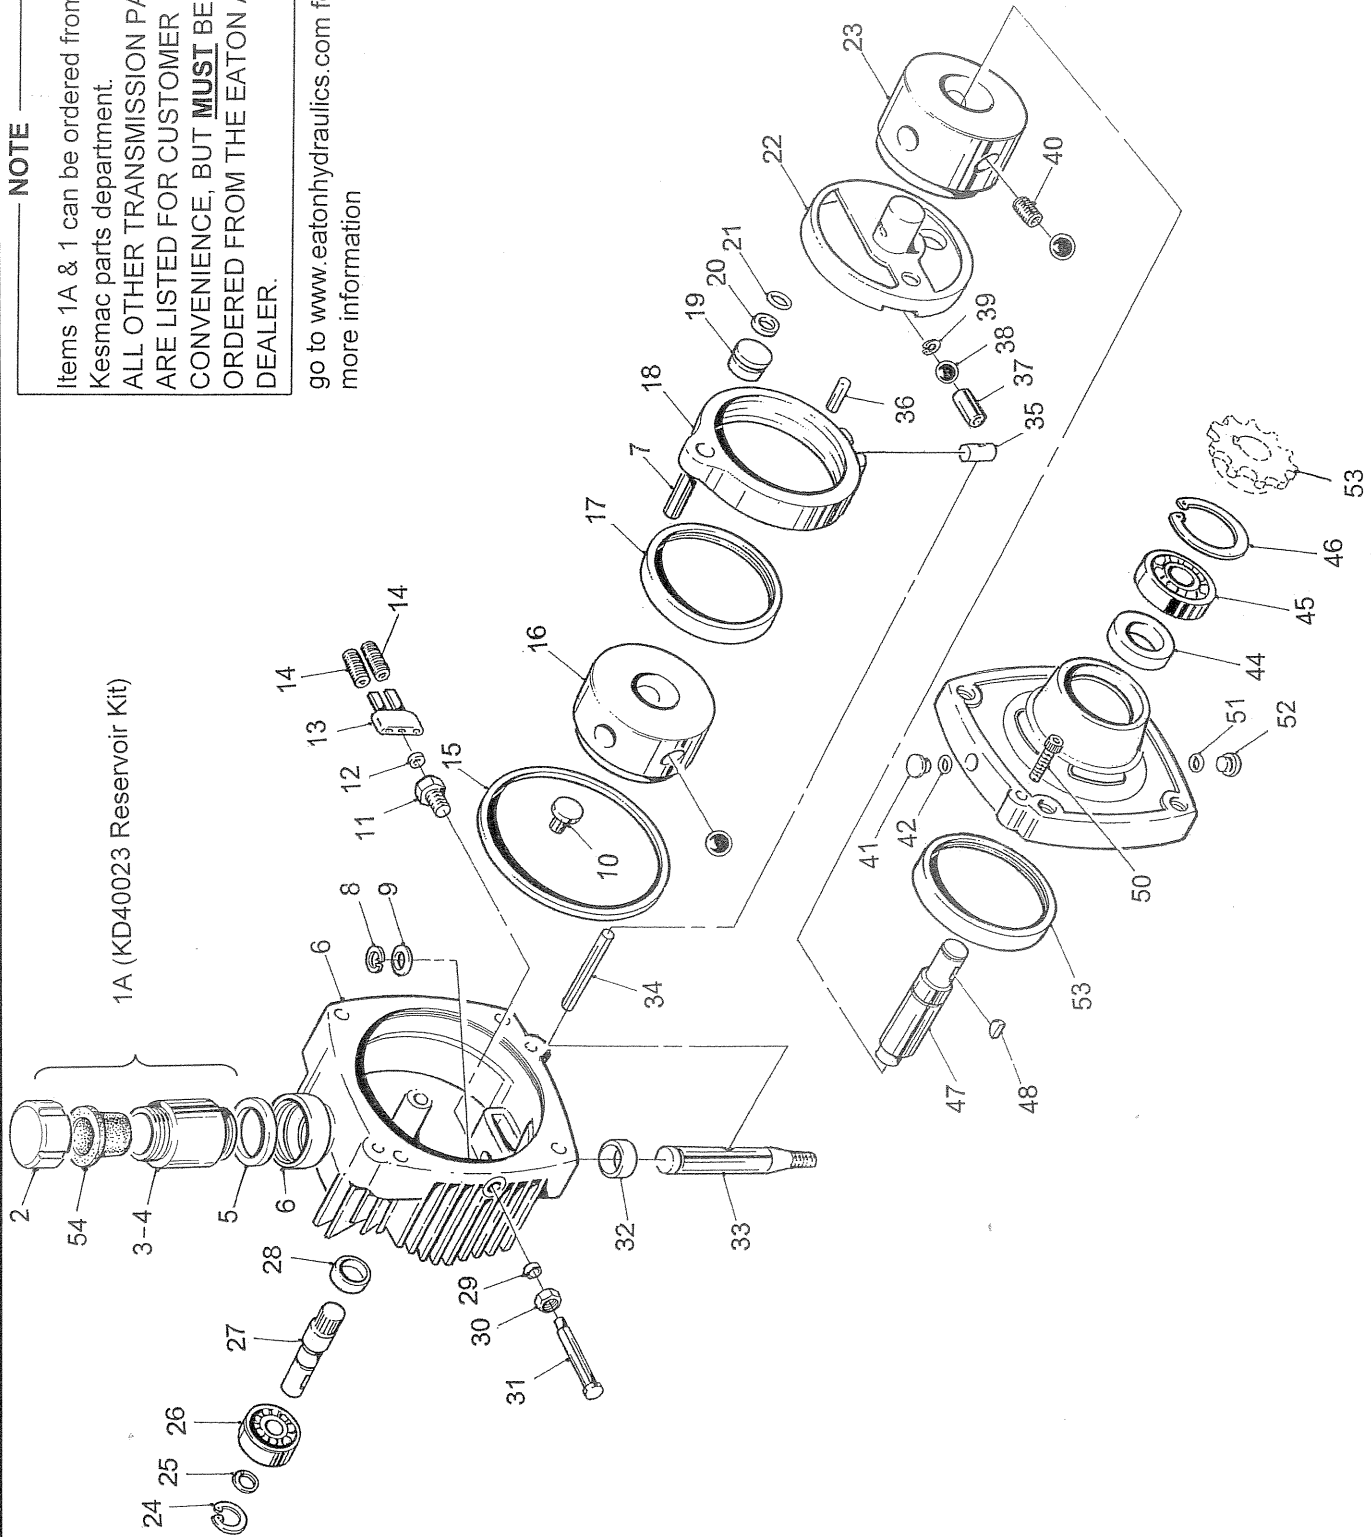

ITEM NO.	PART NO.	DESCRIPTION	QTY
EATON MODEL 7 HYDROSTATIC TRANSMISSION			
1	<u>KH70055</u>	Transmission Overhaul Kit	
1A	<u>KD40023</u>	Transmission Reservoir Kit	1
2	<u>103531</u>	Reservoir Cover	1
3	<u>104322</u>	Reservoir Body	1
4	<u>104068</u>	Reservoir Diaphragm	1
5	<u>008771-130</u>	Square Cut Seal Ring	1
6	<u>990176</u>	Cover Service Kit	1
7	<u>93881</u>	Pivot Pin Dowel	1
8	<u>096098-062</u>	External Retaining Ring	1
9	<u>95060</u>	Control Shaft Washer	1
10	<u>101597</u>	Button	1
11	<u>24234</u>	'O' Ring Fitting Guide Sub-assembly	1
12	<u>008761-010</u>	'O' Ring	1
13	<u>24166</u>	Bracket - Pins Sub-assembly	1
14	<u>72149</u>	Valve Spring	2
15	<u>008771-162</u>	Square Cut Seal Ring	1
16	<u>22712</u>	Pump Rotor - Ball Sub-assembly	1
17	<u>40520</u>	Pump Race	1
18	<u>102623</u>	Cam Ring	1
19	<u>102451</u>	Piston	2
20	<u>088770-113</u>	Back-up Ring	2
21	<u>008765-113</u>	'O' Ring	2
22	<u>102454</u>	Pintle Sub-assembly	1
23	<u>104111</u>	Motor Rotor- Ball Sub-assembly	1
24	<u>101680-156</u>	Retaining Ring	1
25	<u>97121</u>	Snap Ring	1
26	<u>90797</u>	Ball Bearing (Input)	1
27	<u>62184</u>	Input Shaft	1
28	<u>93955</u>	Oil Seal	1
29	<u>82112</u>	Gasket	1
30	<u>24235</u>	Nut - Gasket Sub-assembly	1
31	<u>62240</u>	Dump Valve Shaft	1
32	<u>93895</u>	Oil Seal	1
33	<u>990083</u>	Control Shaft Kit	1
34	<u>990083</u>	Dowel 3/8 dia. x 1 3/4 lg.	1
35	<u>95203</u>	Cam Ring Insert	1
36	<u>098294-075</u>	Coil Pin 5/16 dia. x 3/4 lg.	1
37	<u>70130</u>	Check Valve Body	2
38	<u>0095881-031</u>	Grade 200 Ball 5/16 dia.	2
39	<u>95214</u>	Retaining Ring	2
40	<u>70044</u>	Piston Spring	5
41	<u>025090-006</u>	'O' Ring Plug Sub-assembly	1
42	<u>008785-006</u>	Tube Fitting 'O' Ring	1
43	<u>32278</u>	Body	1
44	<u>93955</u>	Oil Seal	1
45	<u>90797</u>	Ball Bearing (Output)	1
46	<u>101680-156</u>	Retaining Ring	1
47	<u>22892</u>	Output Shaft Sub-assembly	1
48	N/A	Woodruff Key #3	1

NOTE


Items 1A & 1 can be ordered from Kesmac parts department.
ALL OTHER TRANSMISSION PARTS ARE LISTED FOR CUSTOMER CONVENIENCE, BUT **MUST** BE ORDERED FROM THE EATON AREA DEALER.

go to www.eatonhydraulics.com for more information

NOTE

Items 1A & 1 can be ordered from
Kesmac parts department.
ALL OTHER TRANSMISSION PARTS
ARE LISTED FOR CUSTOMER
CONVENIENCE, BUT **MUST** BE
ORDERED FROM THE EATON AREA
DEALER.

go to www.eatonhydraulics.com for
more information

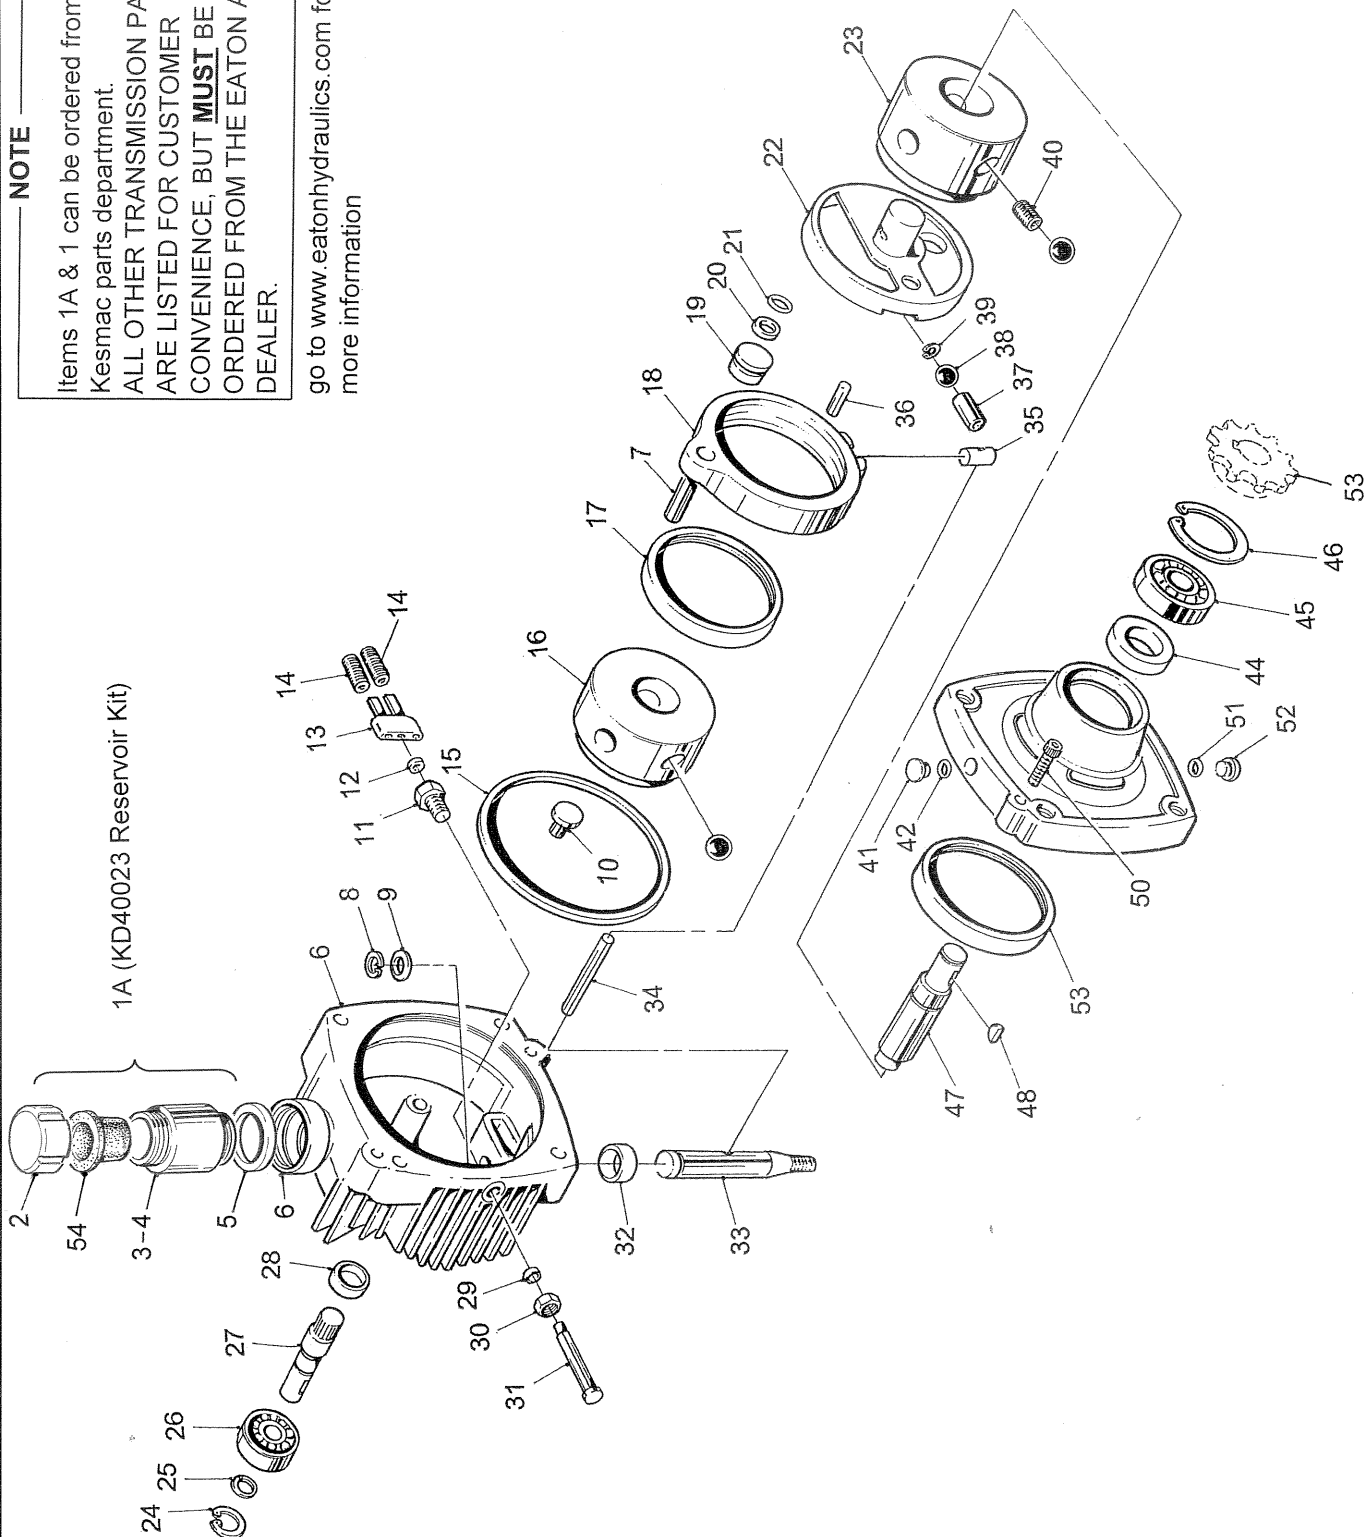


ITEM NO.	PART NO.	DESCRIPTION	QTY
		EATON MODEL 7 HYDROSTATIC TRANSMISSION	
49	<u>40519</u>	Motor Race	1
50	<u>095912-125</u>	Socket Hd. Capscrew	2
51	<u>008785-006</u>	Tube Fitting 'O' Ring	1
52	<u>025090-005</u>	'O' Ring Plug Assembly	1
53	<u>TR10029</u>	Sprocket (Transmission Shaft)	ref
54	<u>KD40033</u>	Diaphram. Reservoir - Current from Serial No. 450	1

EATON®
MODEL 7
HYDROSTATIC PUMP
PARTS INFORMATION
NO. 6-606

HOW TO ORDER
REPLACEMENT PARTS

EACH ORDER MUST INCLUDE
THE FOLLOWING INFORMATION

1. Product Number
2. Date Code
3. Part Name
4. Part Number
5. Quantity of Parts

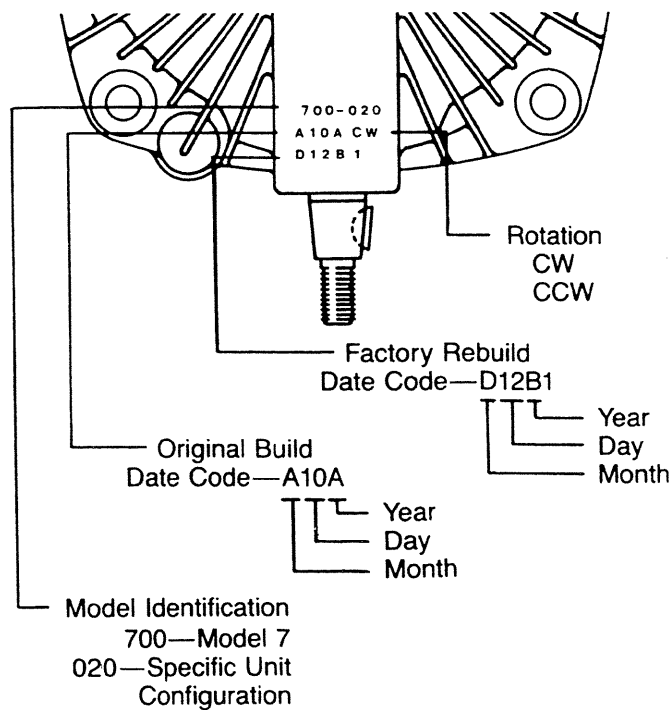

Eaton Corporation **Hydraulics Division** 15151 Highway 5 Eden Prairie, MN 55344 Telephone (612) 937-9800

EAT•N

FORM NO. 6-606-86