

MAGNUM M SERIES DIESEL SOD INSTALLER PARTS MANUAL



**MAGNUM M4226D
MAGNUM M4826D**

Bucyrus Equipment Co., Inc.
Box 156, 209 Main
Hillsdale, Ks 66036
1-800-330-0857
www.magnumenp.com

RE-ORDER NUMBER: IND-MANUAL
REVISION: IN-100007



M SERIES

MAGNUM M4226D / M4826D PARTS MANUAL

The purpose of this manual is for parts identification of the Magnum M series sod installer. This manual is not to be used for assembly. This manual includes parts lists and illustrations of all available replacement parts for the Magnum M series sod installer. A table of contents is placed at the beginning of the manual for location of specific parts. Keep this manual available for reference in the shop area.

At the time of publication all information contained in this manual was technically correct. However, all materials and specifications are subject to change without notice.

Comments and suggestions about this manual may be directed to: Bucyrus Equipment Co., Inc., PO Box 156-209 Main, Hillsdale, KS 66036. Phone 1-800-330-0857

© Copyright 2013 BECI. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited. Printed in U.S.A.

TABLE OF CONTENTS

Section 1	Brake / Wheel / Hub
Section 2	Decals
Section 3	Electrical
Section 4	Engine
Section 5	Front Spindle
Section 6	Hydraulics
Section 7	Hydrostat / Roll Lift Controls
Section 8	Operator Platform
Section 9	Roll Lift
Section 10	Shields
Section 11	Steering Axle



ENGINE


ENGINE - PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	12599-74110	COOLING FAN
2	1	15881-97010	FAN DRIVE BELT
3	1	16678-64012	ALTERNATOR
4	3	16851-65512	GLOW PLUG
5	1	E9151-33140	OIL CAP
6	1	04814-50300	OIL FILL CAP O-RING
7	1	902514	HYDROSTAT COUPLER/HOUSING
8	1	16824-63010	STARTER
9	1	HH150-32430	ENGINE OIL FILTER
10	1	15841-39010	OIL SENDING UNIT
11	1	16829-36410	DIPSTICK
12	1	17538-83040	TEMPERATURE SENSOR
13	1	68381	AIR INTAKE RAIN CAP
14	1	0427615	HOSE CLAMP
15	4	0427614	HOSE CLAMP
16	1	IND-ENG400	INTAKE HOSE
17	1	FM65	INTAKE HOSE
18	1	1G657-11011	AIR CLEANER ASSEMBLY
19	1	1G659-11222	AIR FILTER ELEMENT
20	1	IND-ENG206	AIR FILTER MOUNT
21	1	1G952-11621	INLET HOSE
22	1	1G659-11251	AIR CLEANER BRACKET
23	1	IND-ENG401	FUEL LINE
24	1	42IND-ENG402	FUEL LINE
25	1	42IND-ENG403	FUEL RETURN LINE
26	6	0427670	HOSE CLAMP
27	1	9307K69	RUBBER GROMMET
28	1	110708785	7/8" P-CLAMP
29	1	1G952-43001	FUEL FILTER ASSEMBLY
30	1	14301-43650	FUEL FILTER BOWL O-RING
31	1	15231-43560	FUEL FILTER
32	1	1T251-43100	FUEL FILTER BOWL
33	1	1G961-52030	FUEL PUMP
34	1	16264-52140	FUEL PUMP GASKET
35	1	IN-FT100	FUEL TANK
36	1	FC-1	FUEL CAP - EPA
37	1	110-16-191	FUEL GAUGE
38	1	LNZ-50305C-18	FUEL CAP/GAUGE
39	1	4290-04-04	FITTING


ENGINE


ENGINE - PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
40	1	4244-05-04	FITTING
41	1	5406-FLP-08	PLUG
42	1	IND-ENG204	THROTTLE CABLE
43	1	IND-ENG200	THROTTLE LEVER
44	2	IND-ENG211	THROTTLE LEVER WEAR PAD
45	1	1171212	FENDER WASHER
46	1	IND-ENG201	THROTTLE LEVER MOUNT/STOP
47	1	IND-ENG202	THROTTLE BRACKET
48	1	IND-ENG203	THROTTLE CABLE ENGINE MOUNT
49	2	0156724	1/4" X 3/4" CLEVIS PIN
50	2	65036	3/32" COTTER PIN
51	1	9654K117	EXT SPRING 1.25" OAL X 0.313 OD, 12/PKG
52	3	01513-50618	EXHAUST MANIFOLD STUD
53	1	1G962-12350	EXHAUST MANIFOLD GASKET
54	3	02756-50060	EXHAUST MANIFOLD NUT
55	1	1G962-12310	EXHAUST MANIFOLD
56	3	01759-50616	EXHAUST MANIFOLD BOLT
57	4	01513-50822	EXHAUST STUD
58	2	15263-12370	MUFFLER GASKET
59	1	IND-ENG101	EXHAUST EXTENSION
60	4	02156-50080	EXHAUST NUT
61	4	04512-60080	EXHAUST LOCK WASHER
62	1	C31	MUFFLER
63	1	3042T84	EXHAUST CLAMP
64	1	IND-ENG105	EXHAUST ELBOW
65	1	1G690-72091	COOLANT RESERVOIR ASSEMBLY
66	1	15531-72422	COOLANT RESERVOIR CAP
67	1	15531-72432	COOLANT RESERVOIR CAP GASKET
68	1	9600K59	RUBBER GROMMET
69	1	110708759	3/8" P-CLMAP
70	1	1G952-72061	RADIATOR
71	1	17214-72020	RADIATOR CAP
72	1	1G952-72940	UPPER RADIATOR HOSE
73	1	1G930-72190	ISOLATOR
74	1	1G952-72850	LOWER RADIATOR HOSE
75	2	1G932-72190	ISOLATOR
76	1	IND-ENG104	ENGINE MOUNT REAR
77	1	IND-ENG103	ENGINE MOUNT FRONT
78	2	IND-ENG106	ENGINE MOUNT SPACER, LEFT


ENGINE


ENGINE - PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
79	2	IND-ENG107	ENGINE MOUNT SPACER, RIGHT
80	2	0115167	7/16"-14 X 3-1/2" CAPSCREW PT
81	2	0115165	7/16"-14 X 3" CAPSCREW PT
82	8	33860	7/16" FLAT WASHER
83	4	33894	7/16" LOCK WASHER
84	4	36308	7/16"-14 HEX NUT
85	2	13119	3/8"-16 X 4" CAPSCREW PT
86	4	13115	3/8"-16 X 3" CAPSCREW PT
87	4	13113	3/8"-16 X 2-1/2" CAPSCREW PT
88	1	110120346	3/8"-16 X 1-1/2" CAPSCREW PT
89	3	13107	3/8"-16 X 1-1/4" CAPSCREW
90	26	33859	3/8" FLAT WASHER
91	14	33893	3/8" LOCK WASHER
92	13	36306	3/8"-16 HEX NUT
93	1	37820	3/8"-16 X 1-3/4" COUPLING NUT
94	6	18797	5/16"-18 X 1-1/4" CAPSCREW
95	2	13053	5/16"-18 X 3/4" CAPSCREW
96	9	33858	5/16" FLAT WASHER
97	8	36304	5/16"-18 HEX NUT
98	12	33892	5/16" LOCK WASHER
99	1	13009	1/4"-20 X 1-1/2" CAPSCREW
100	1	13003	1/4"-20 X 3/4" CAPSCREW
101	9	33857	1/4" FLAT WASHER
102	1	33891	1/4" LOCK WASHER
103	1	36302	1/4"-20 HEX NUT
104	2	36202	1/4"-20 JAM NUT
105	8	38685	M10-1.25 X 40mm CAPSCREW
106	8	1140384	M10 LOCK WASHER
107	4	38615	M8-1.25 X 20mm CAPSCREW
108	1	9713K414	SPRING WASHER

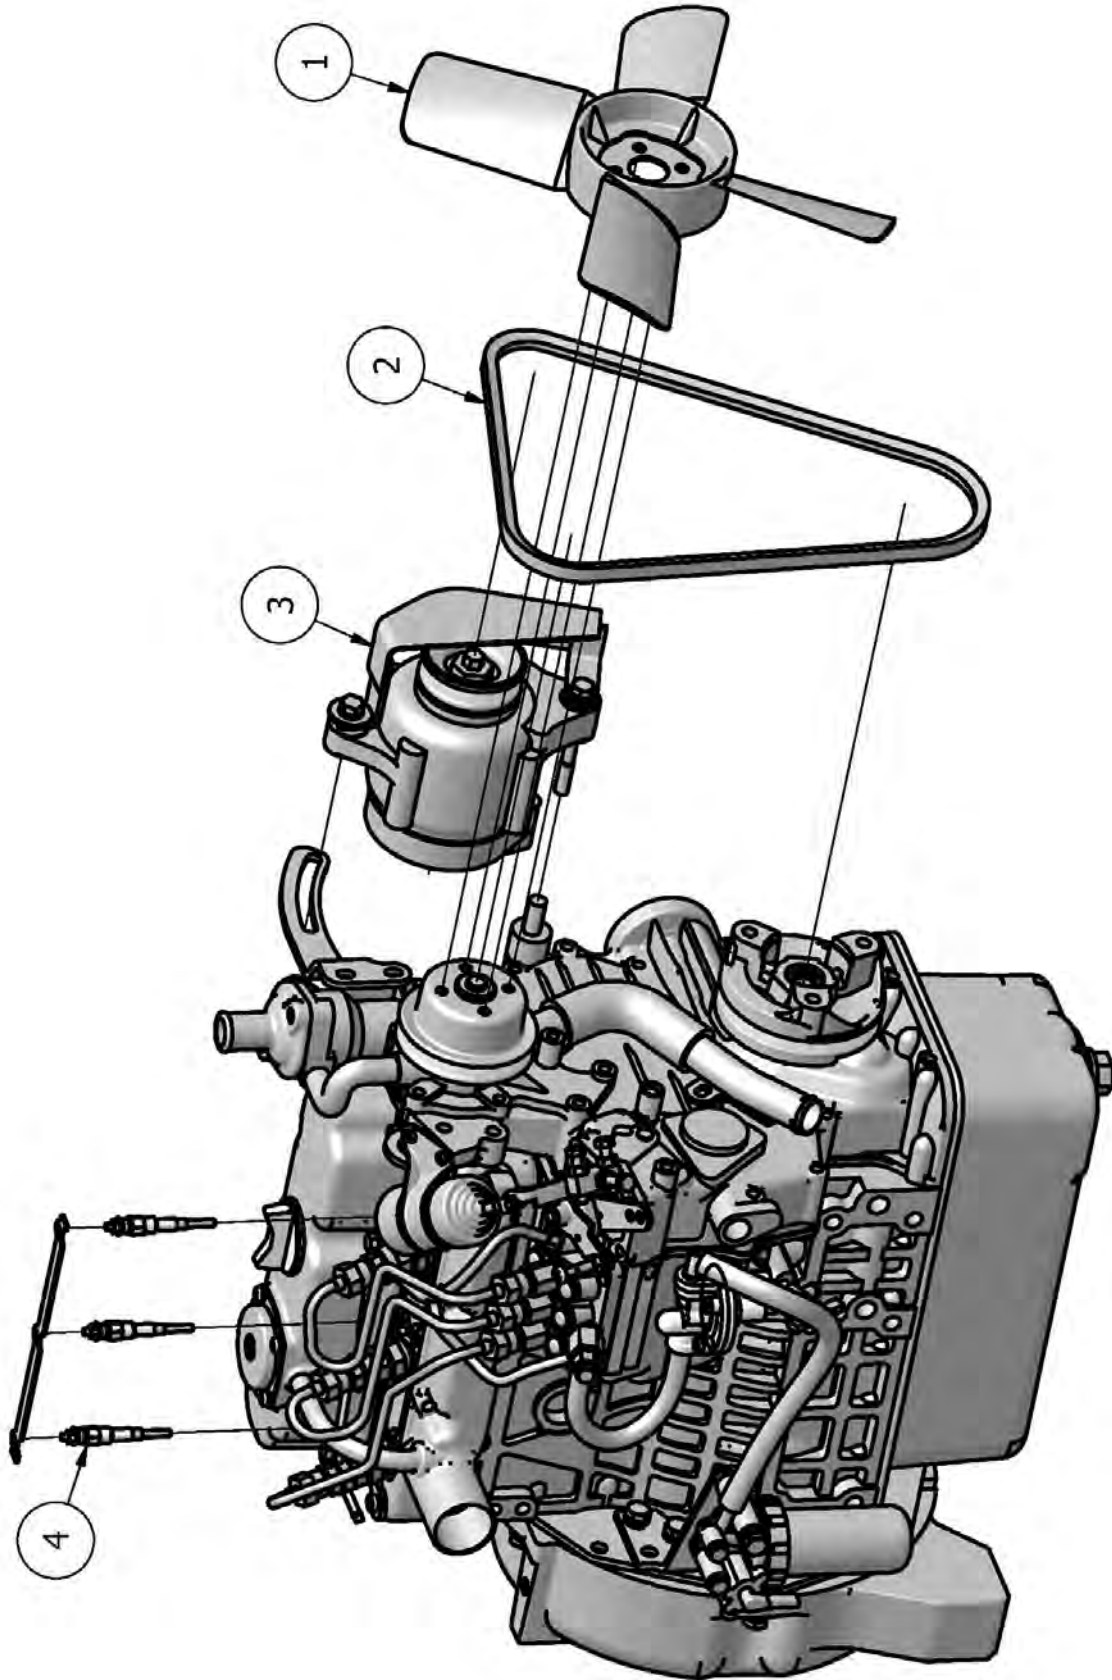


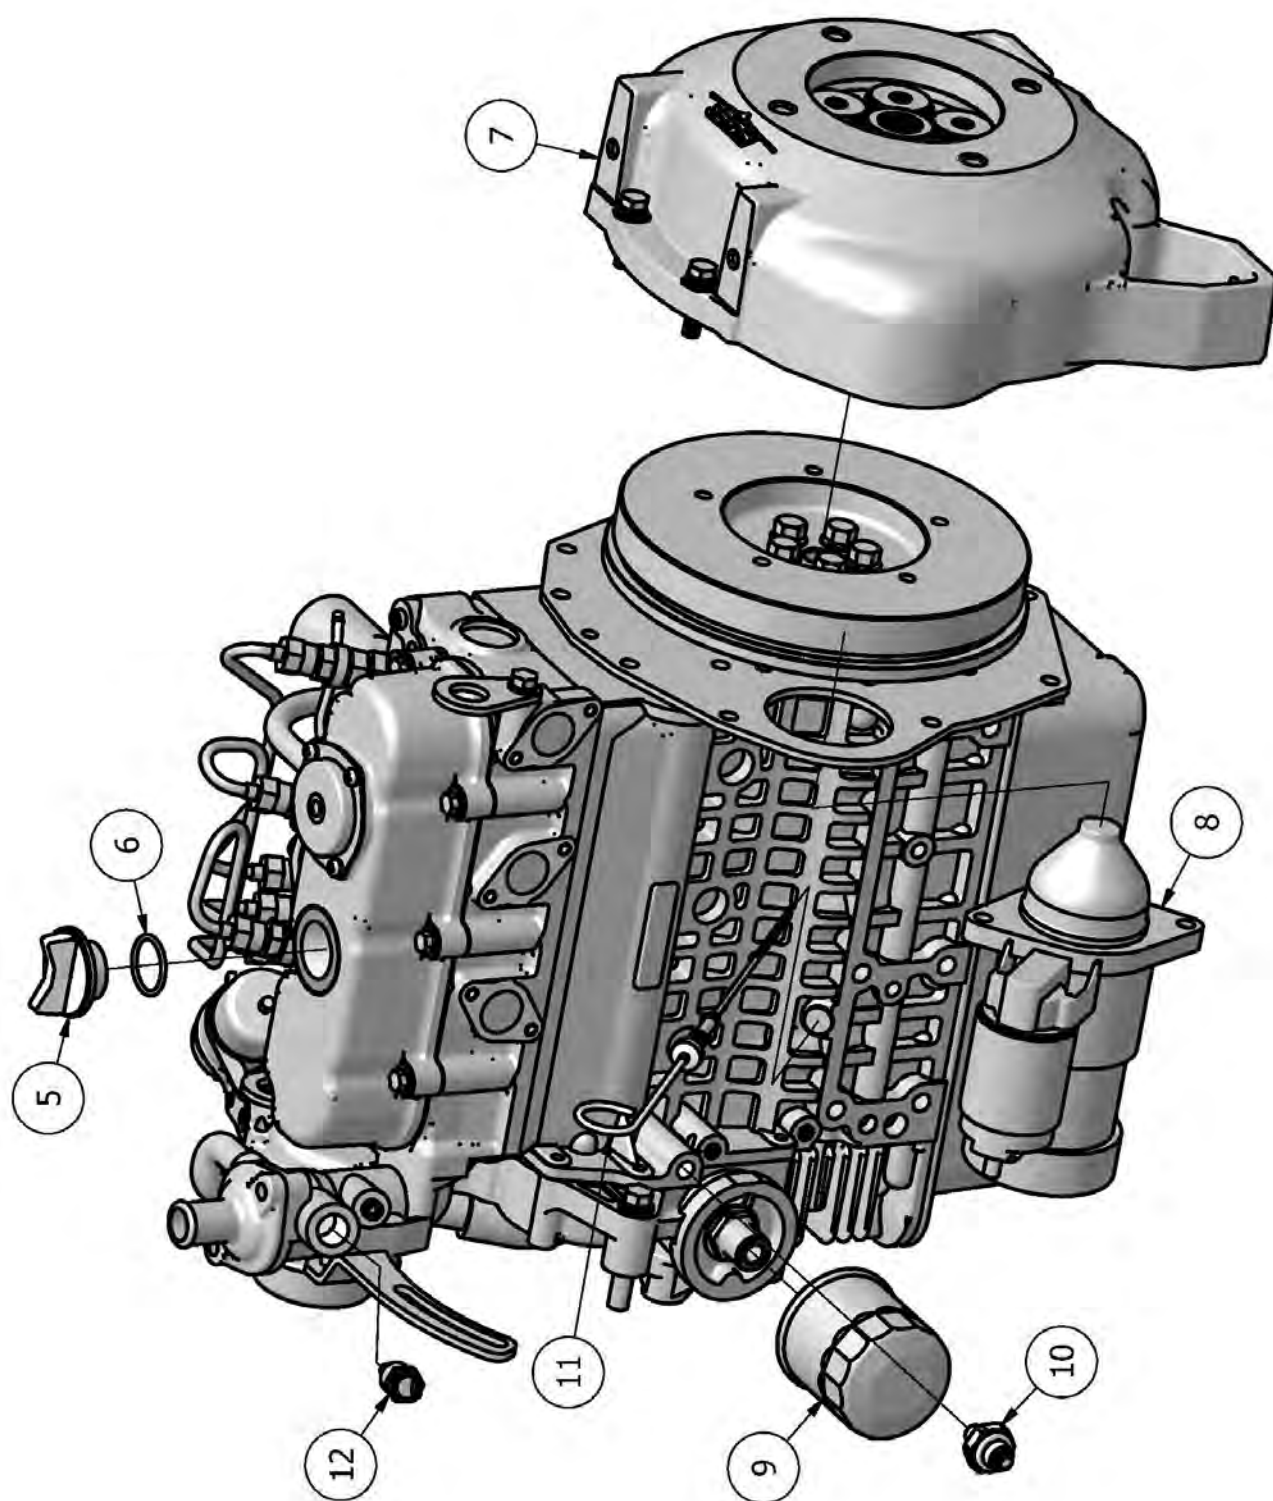


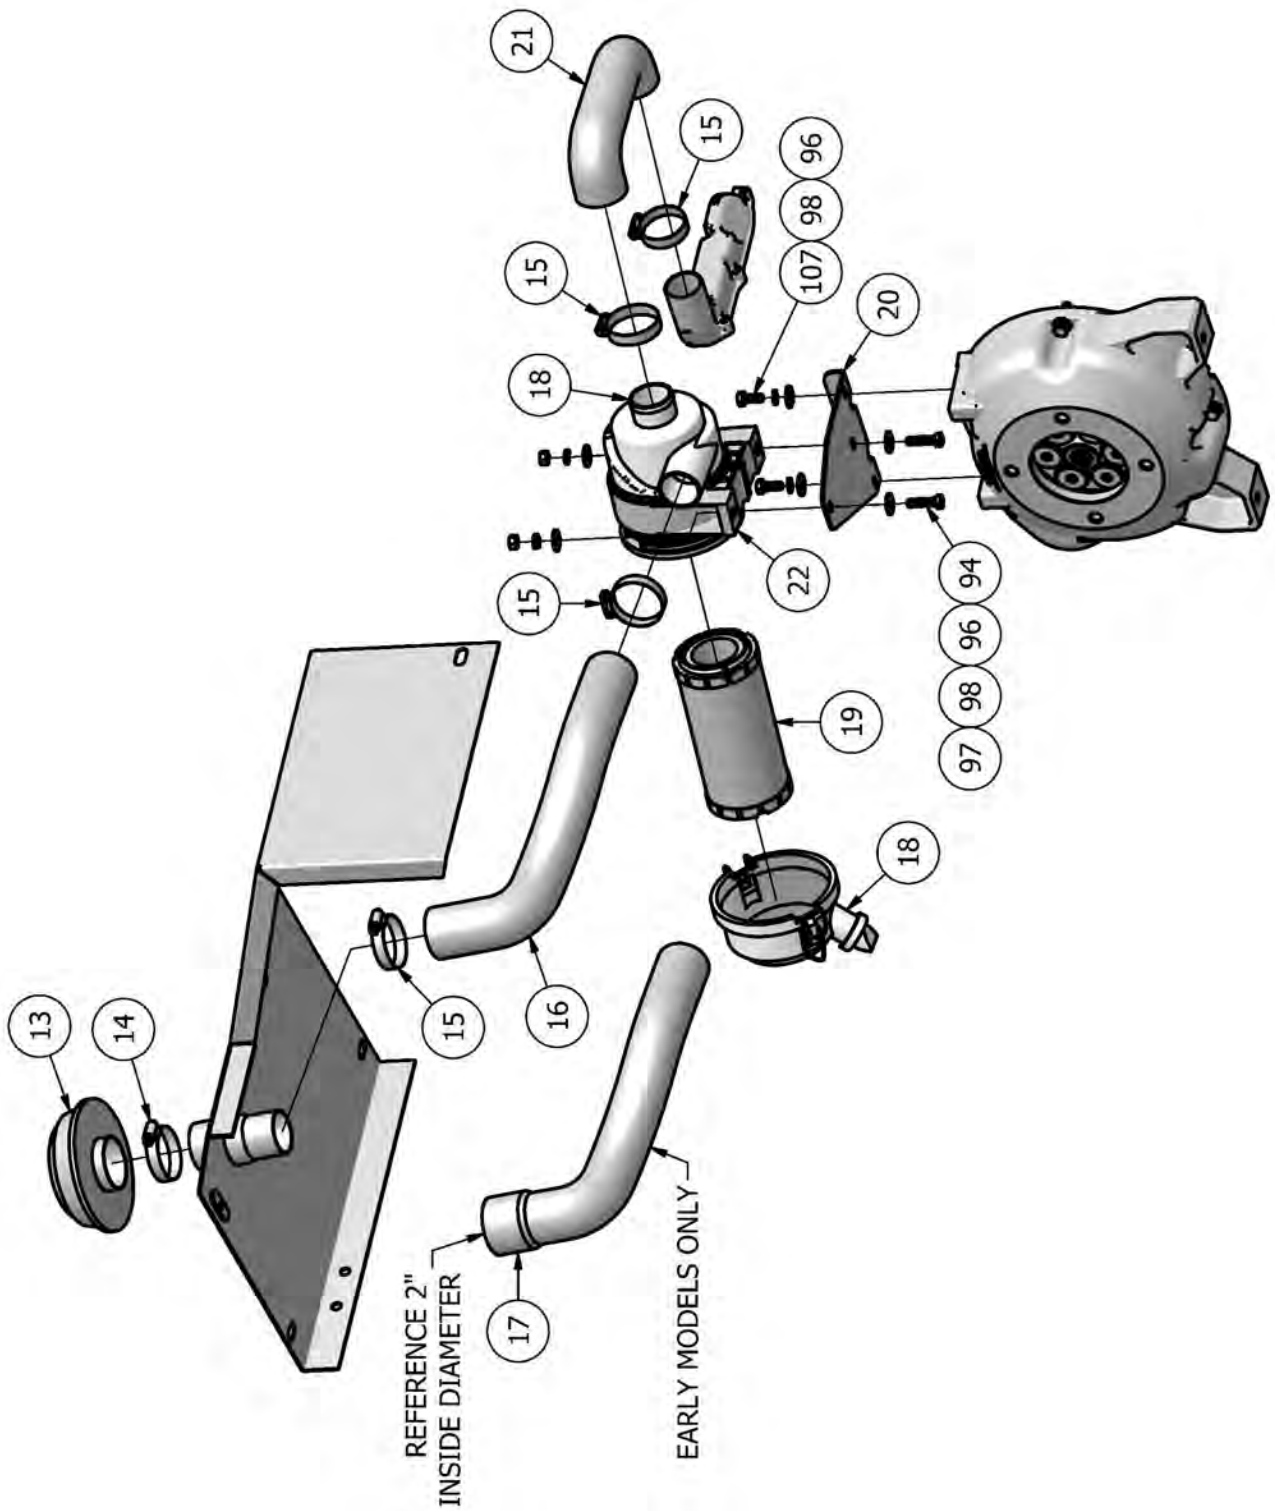


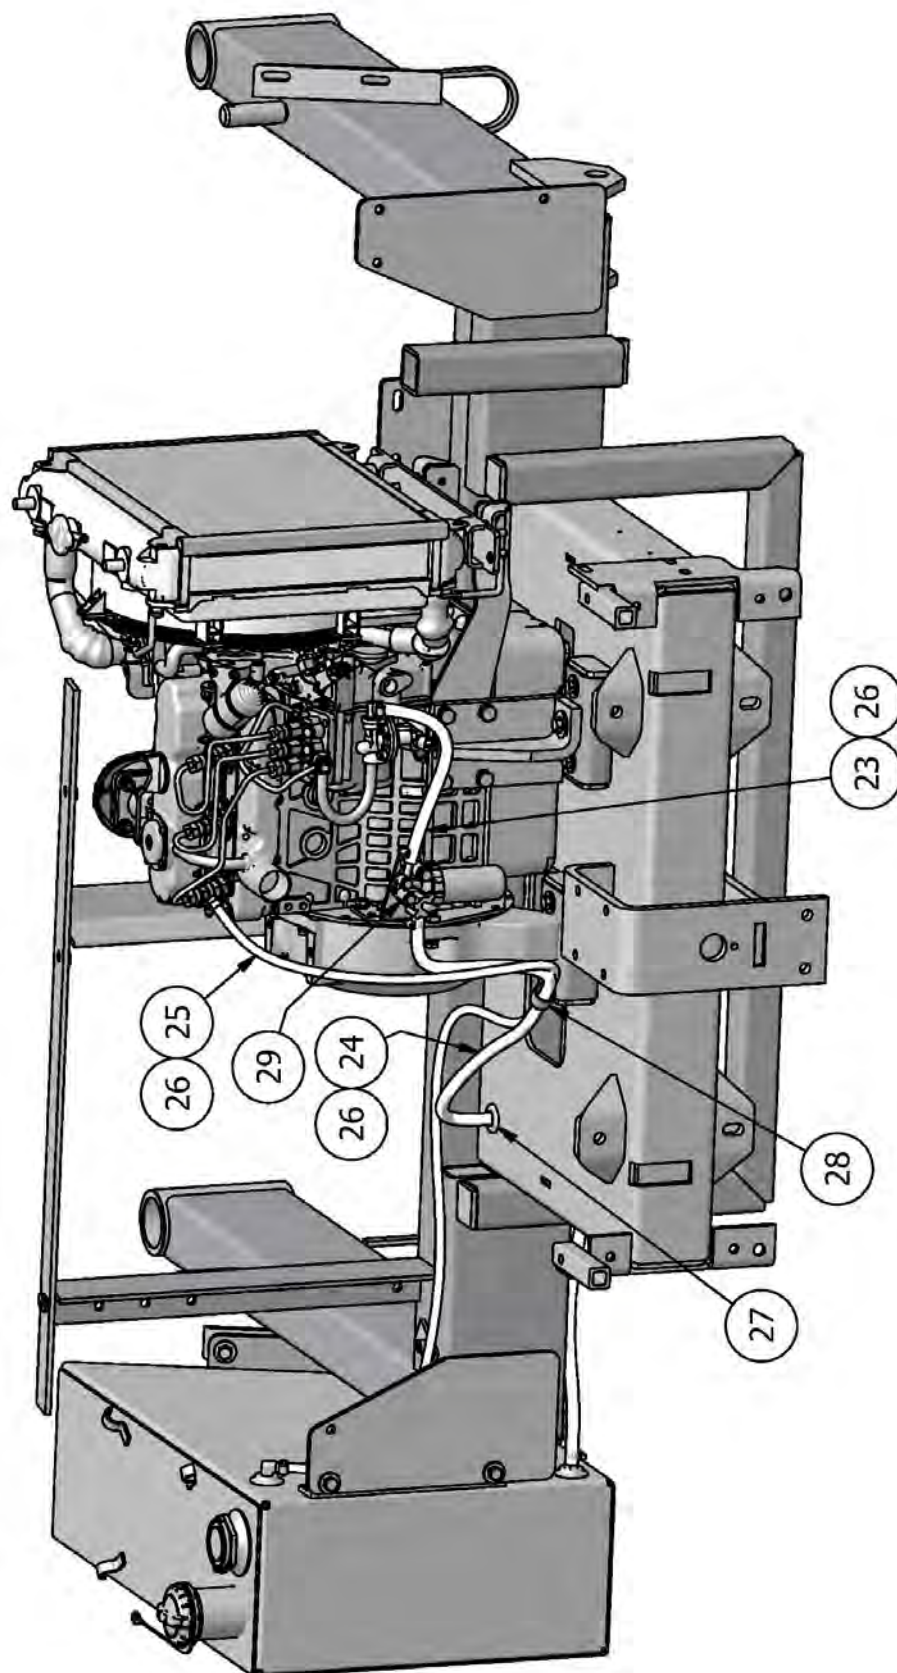


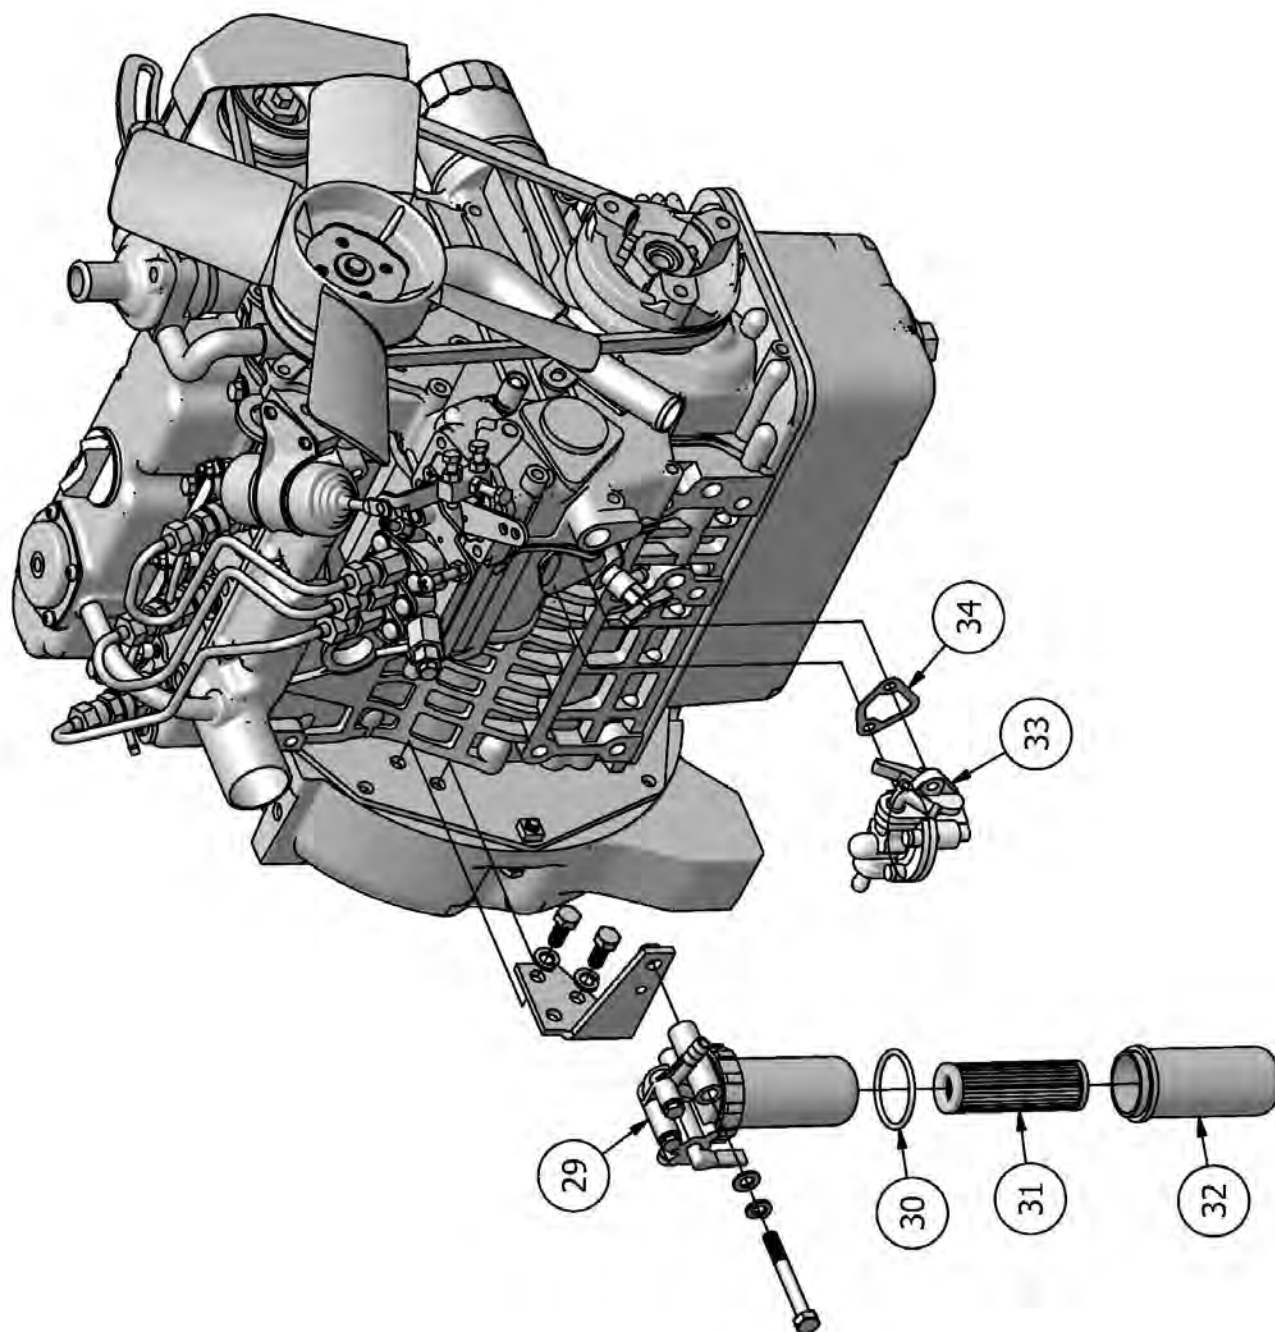


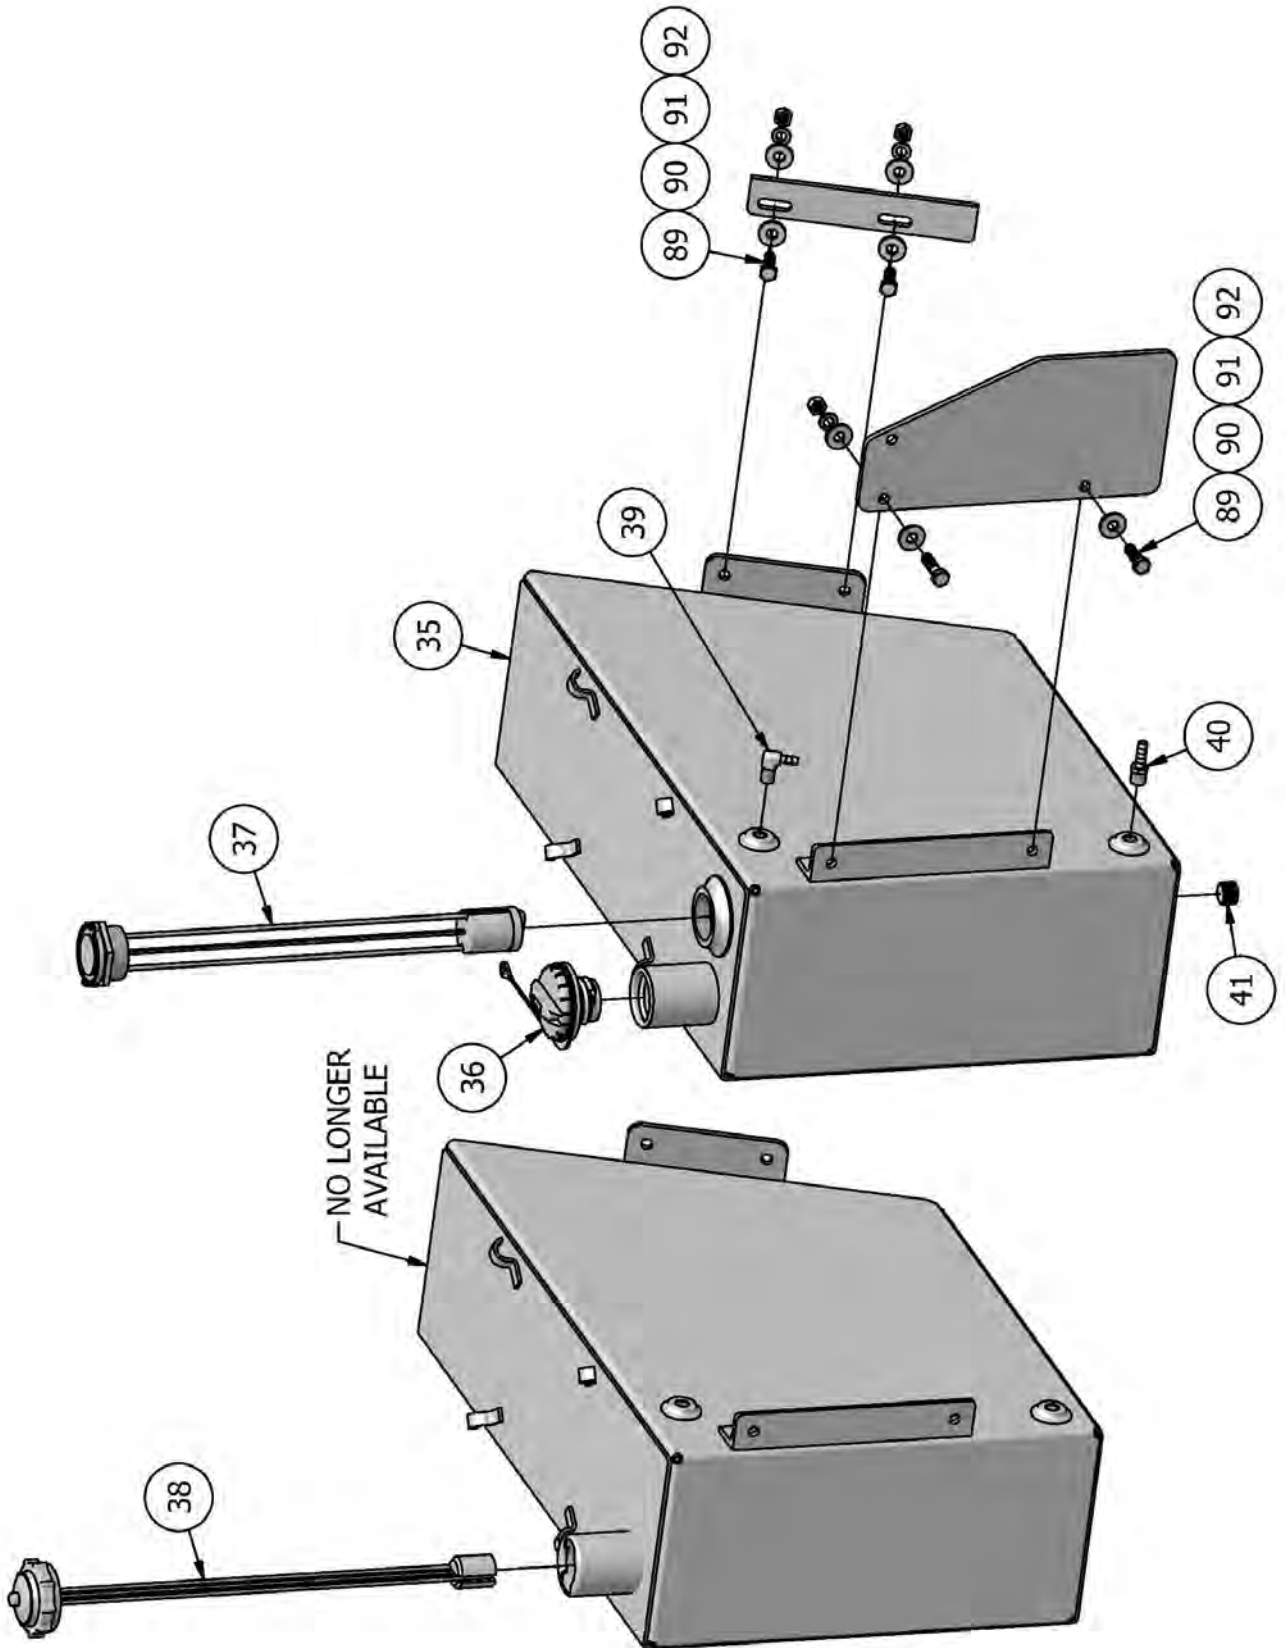


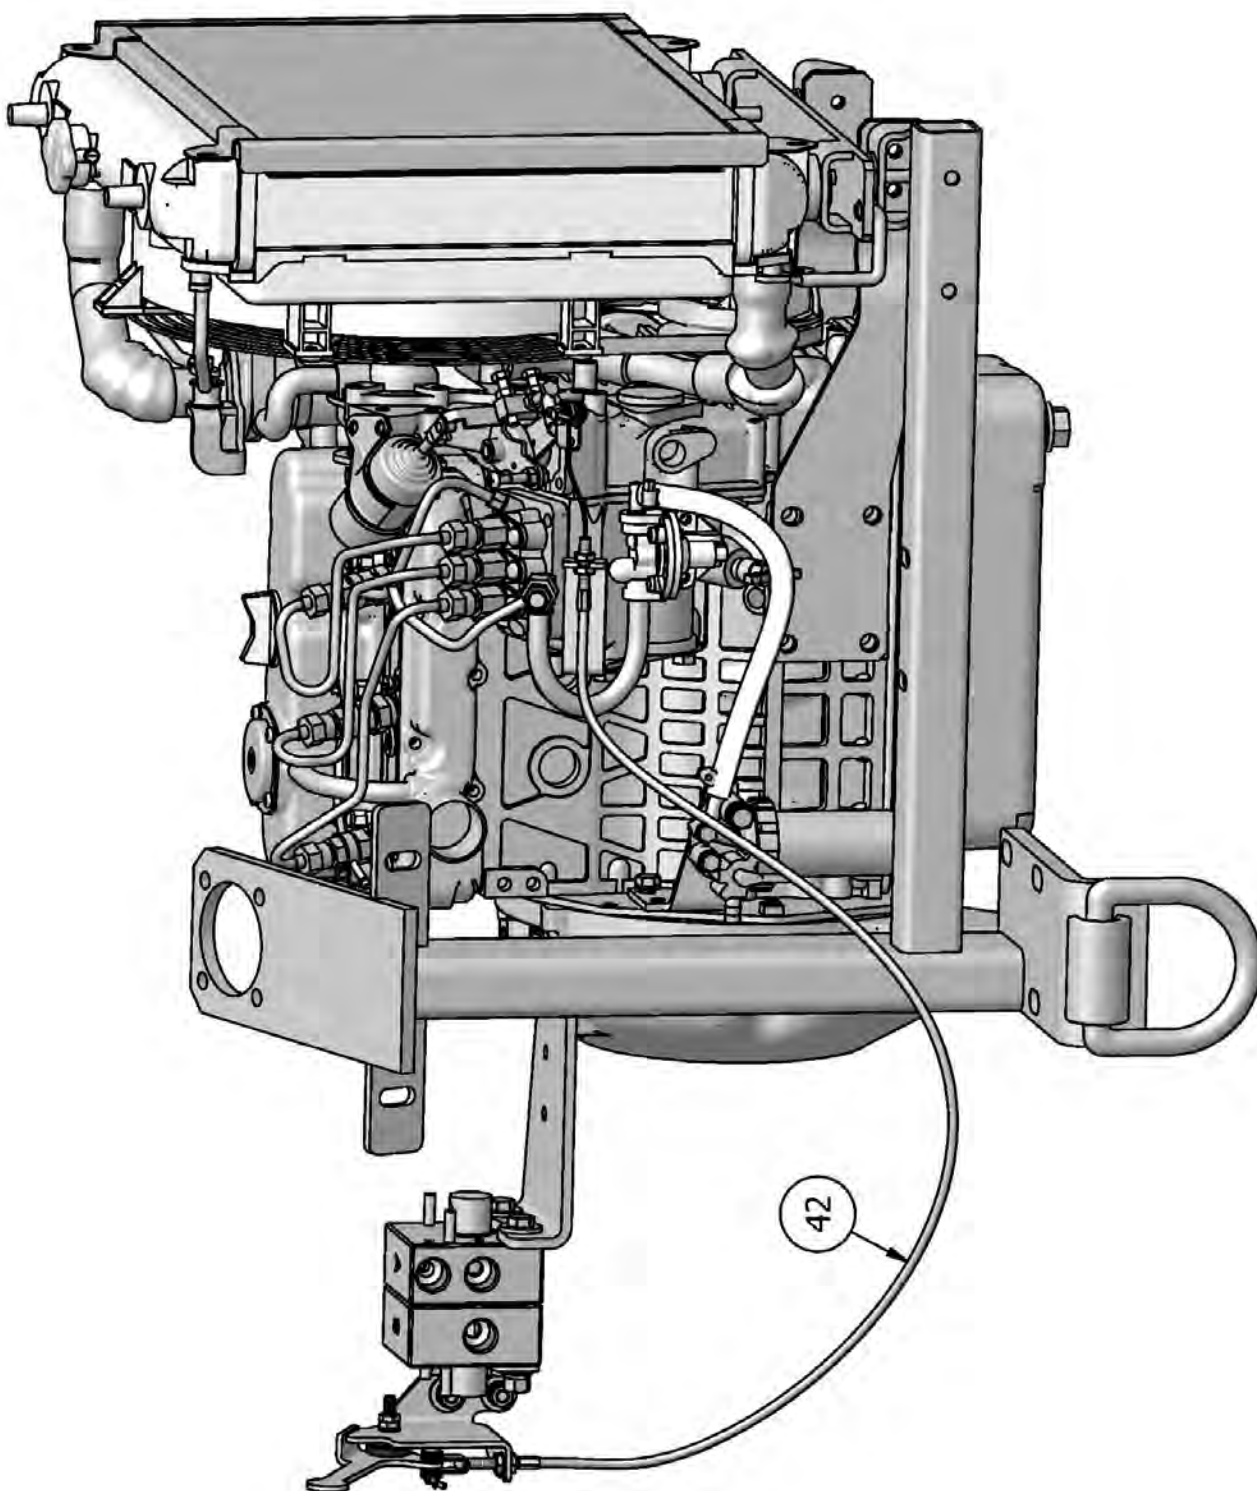


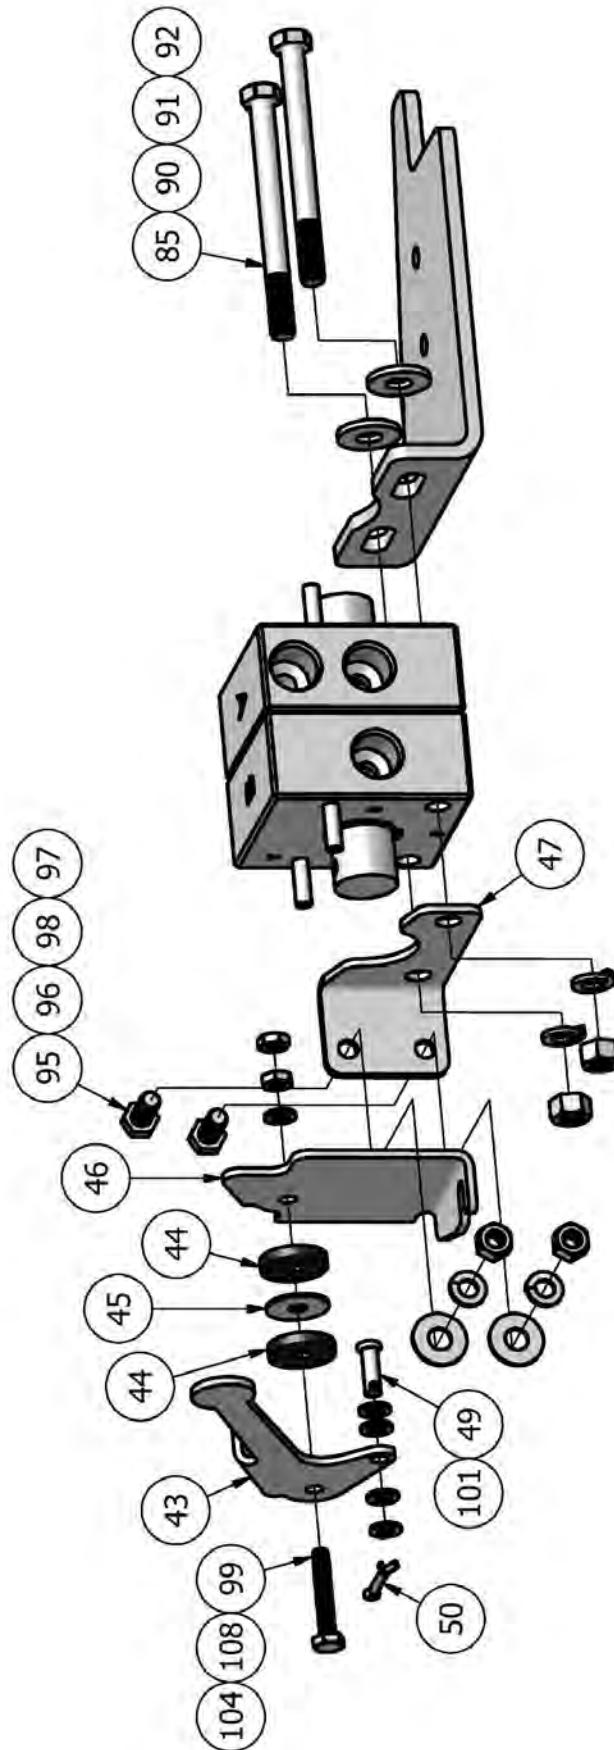


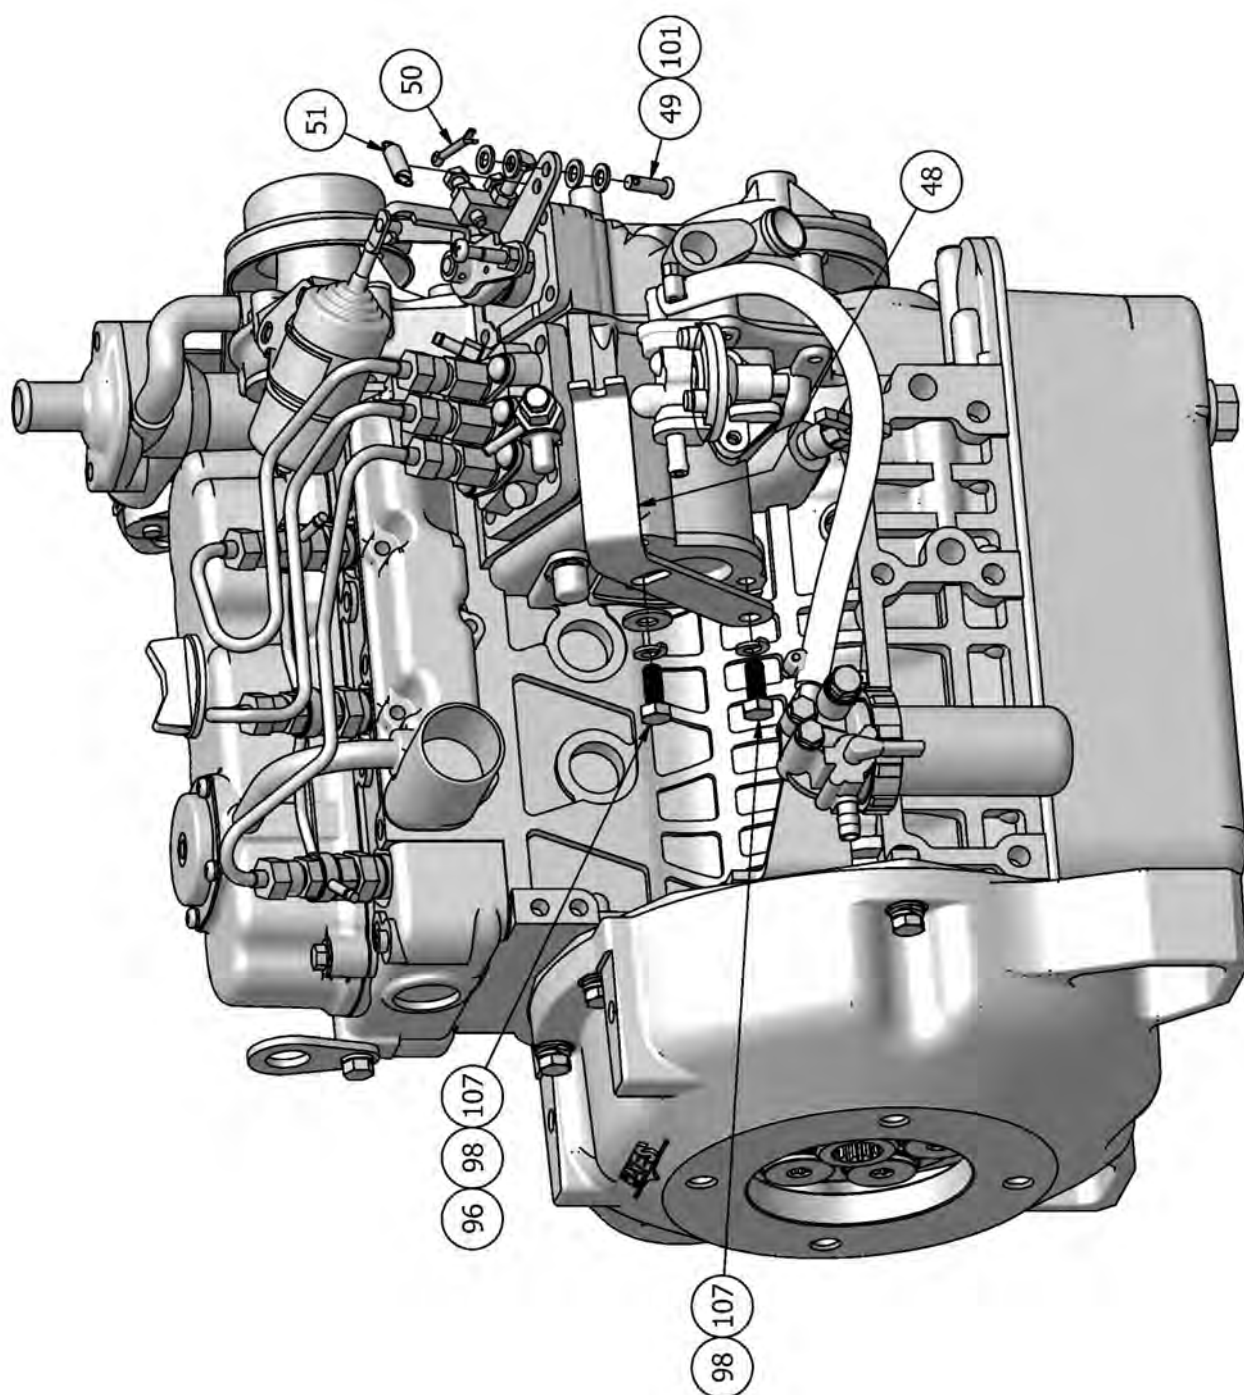


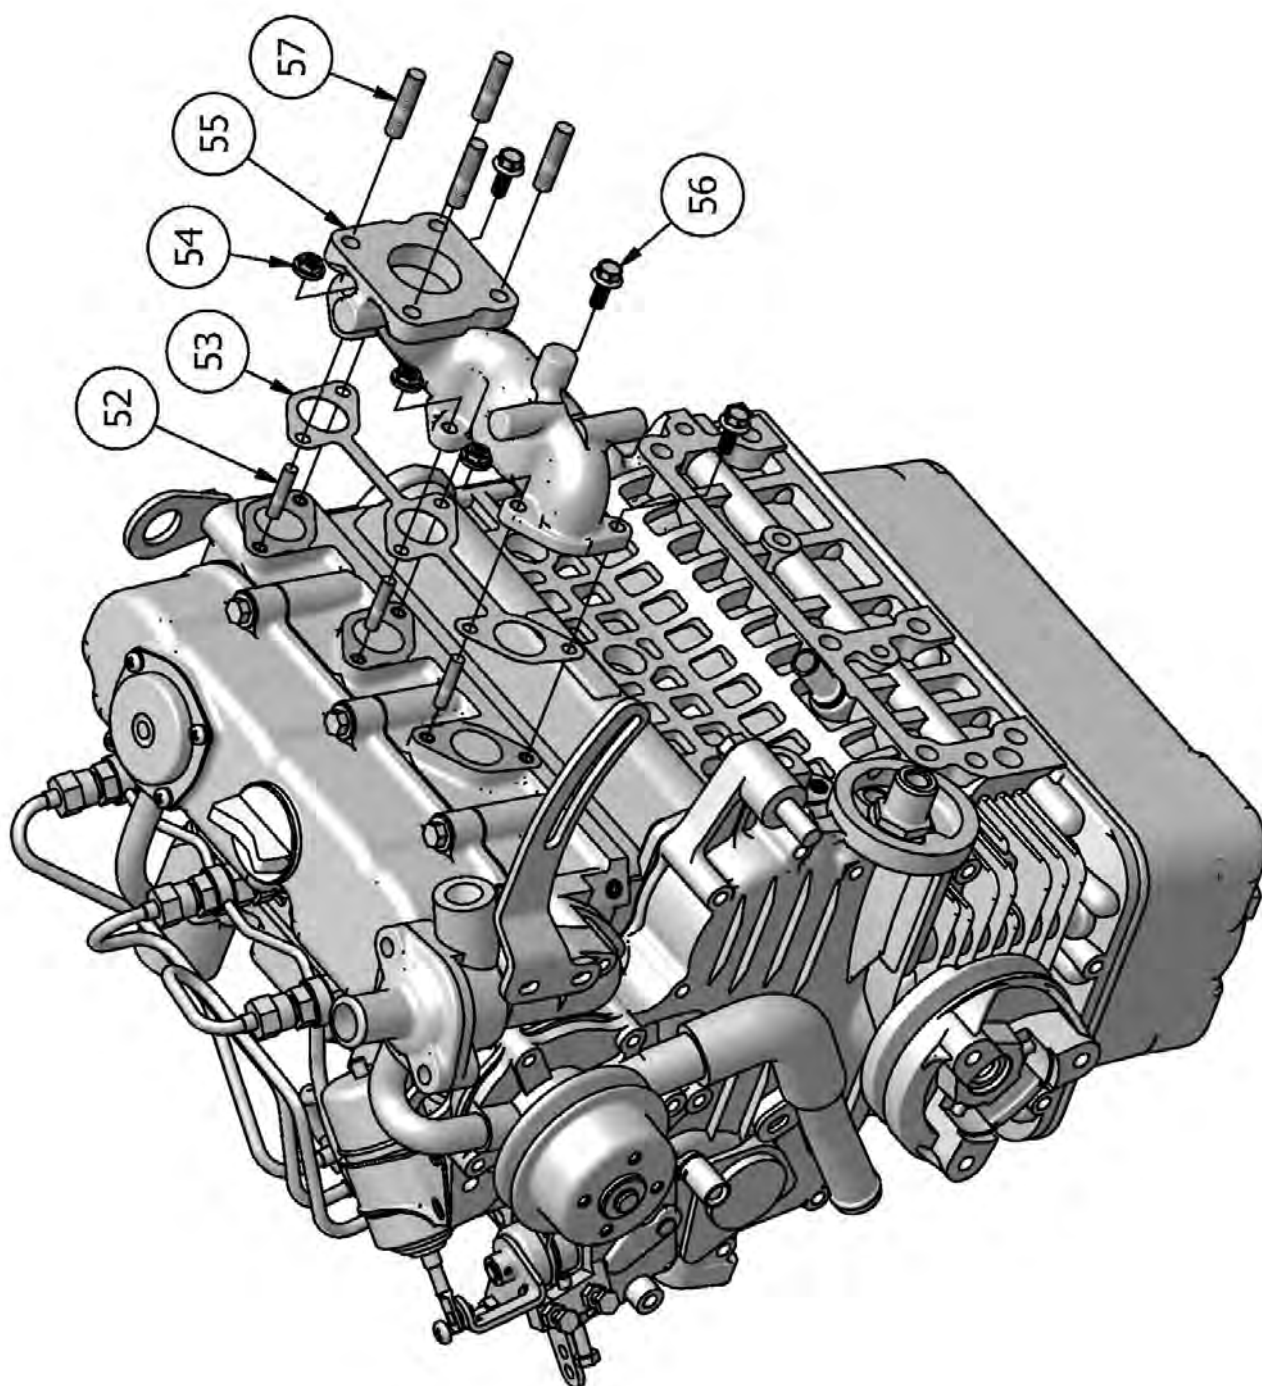

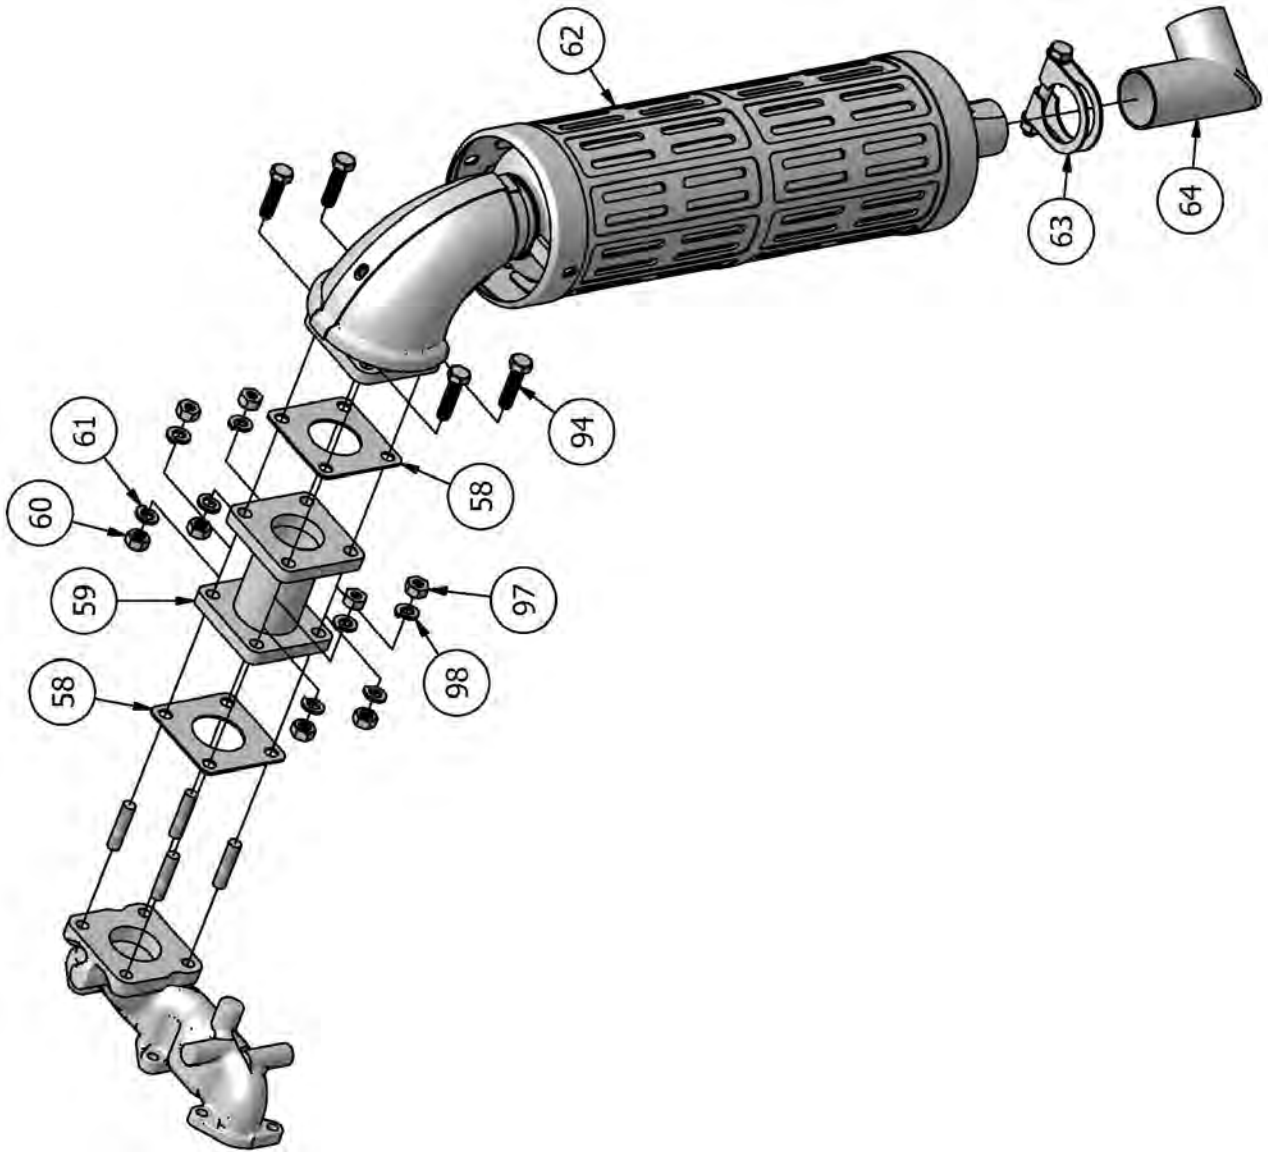

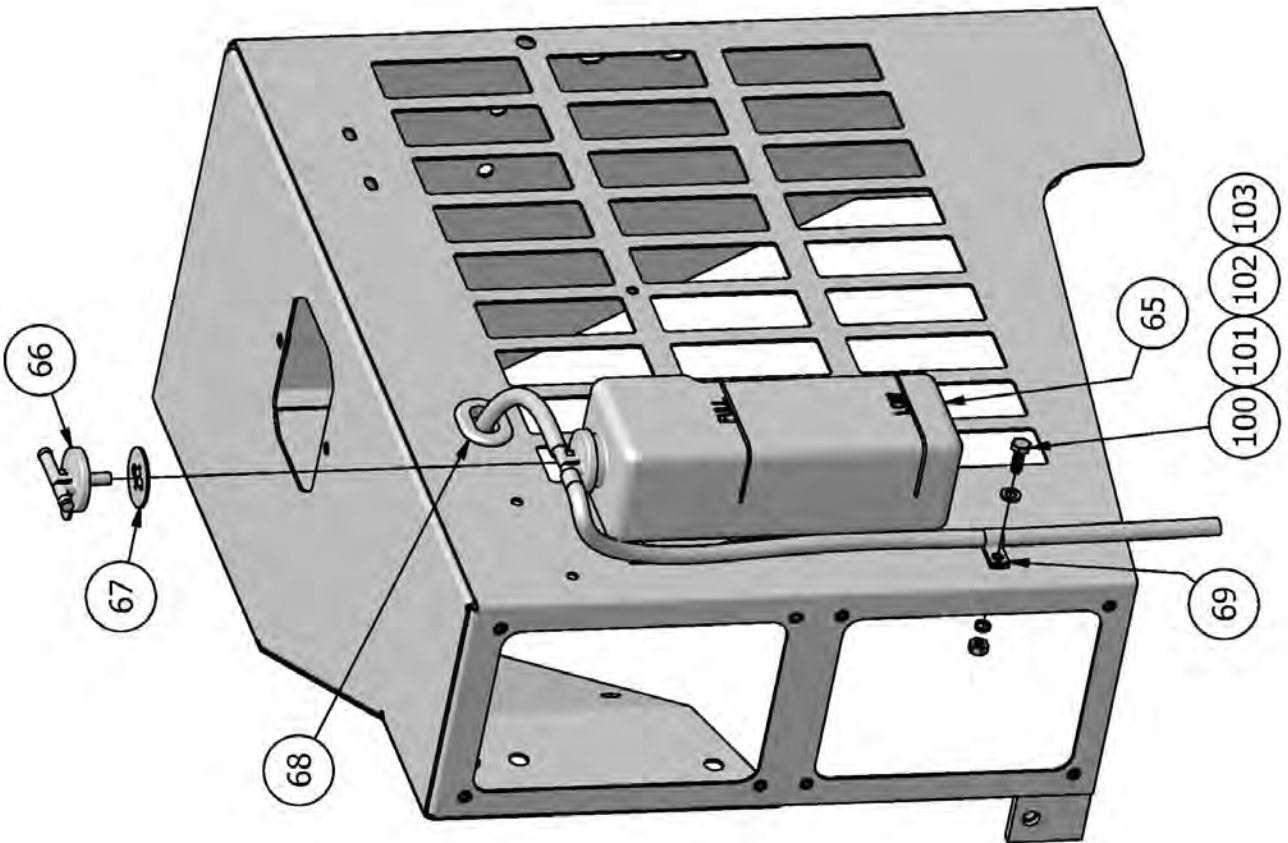

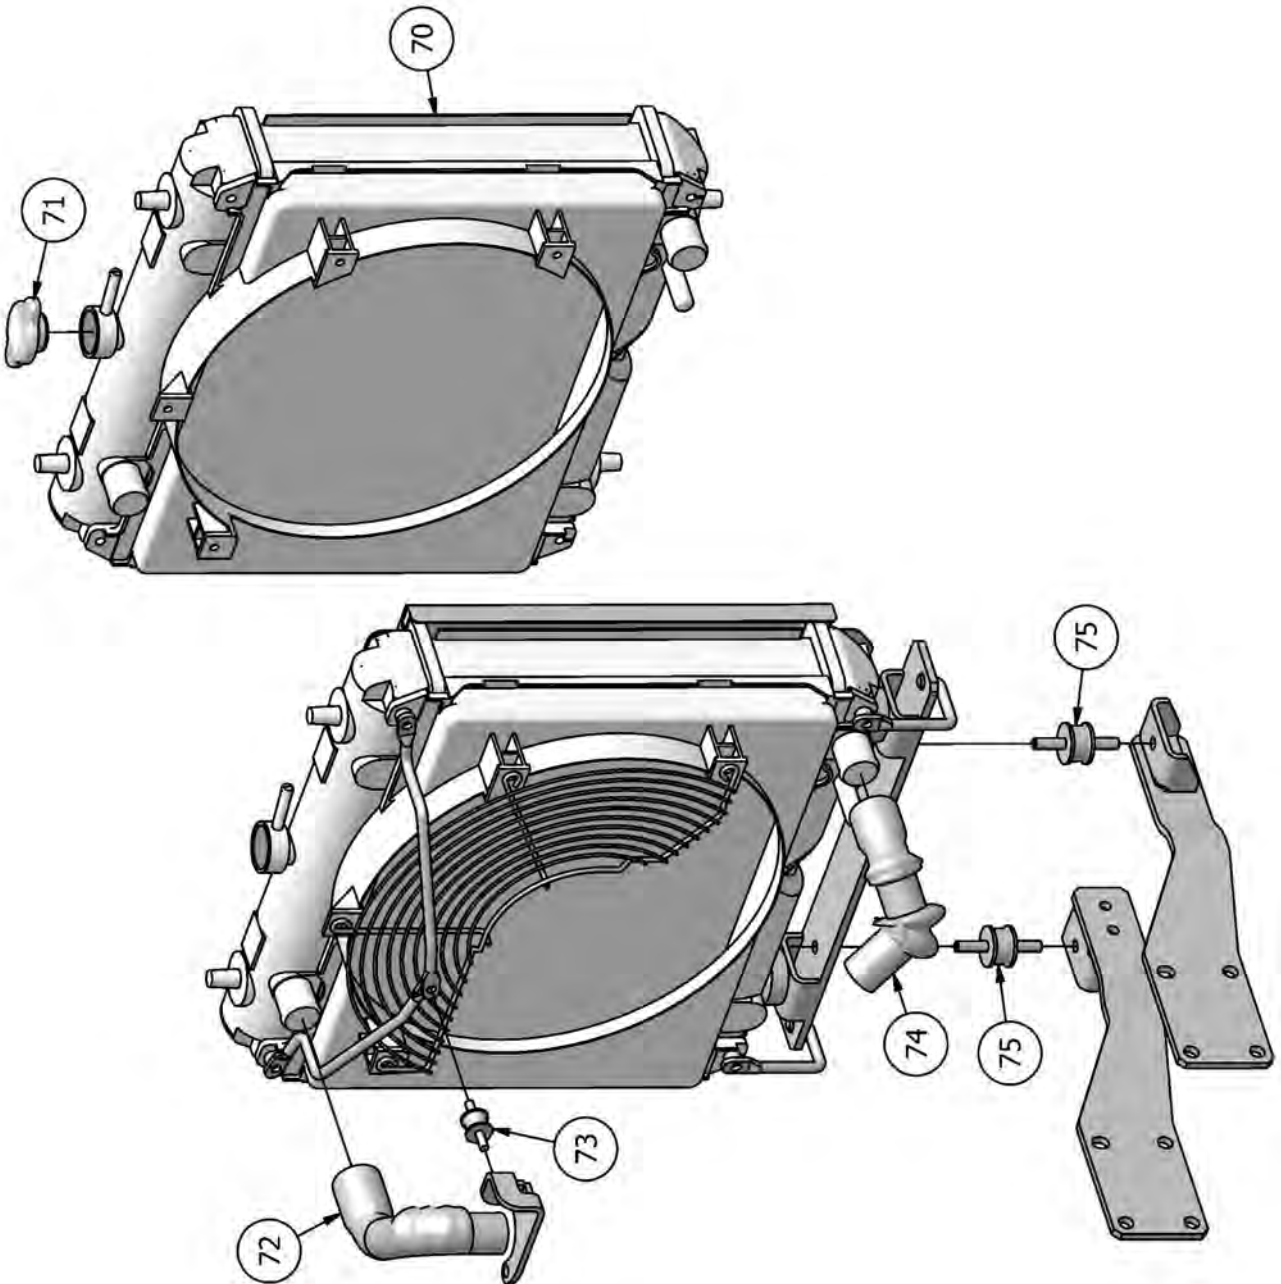

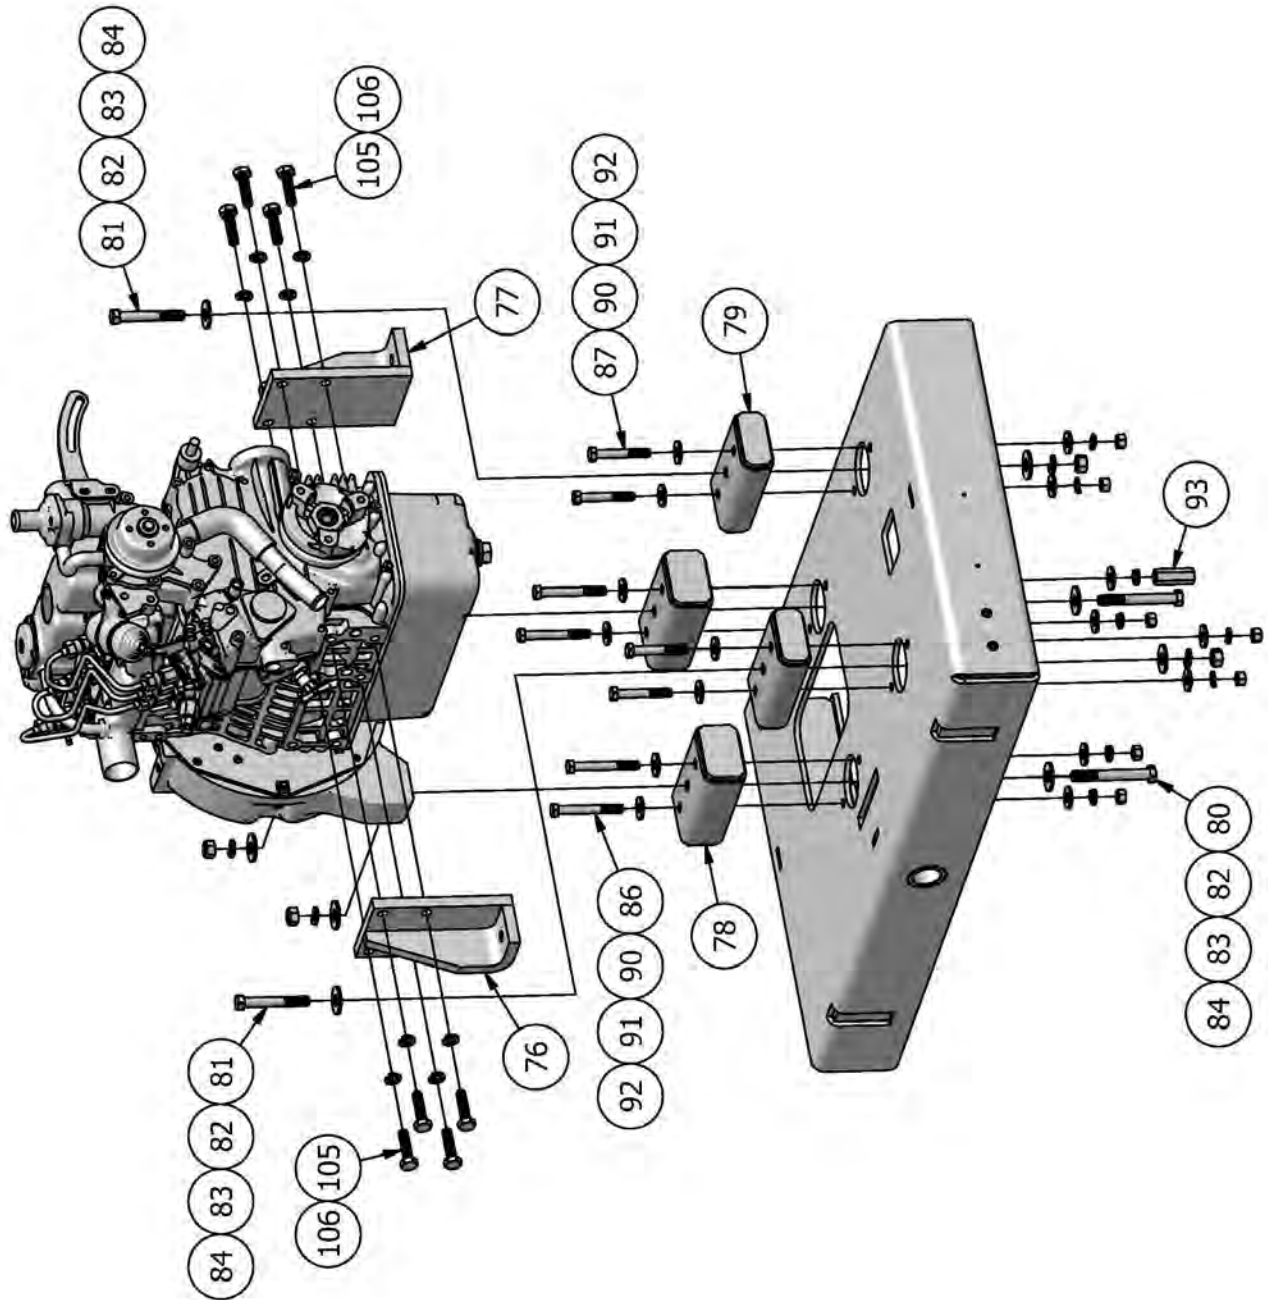

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

